


Modbus for Dedicated Controls

CIM 200 Modbus RTU

CIM 250 GSM/GPRS

CIM 500 Ethernet for Modbus TCP

Functional profile and user manual

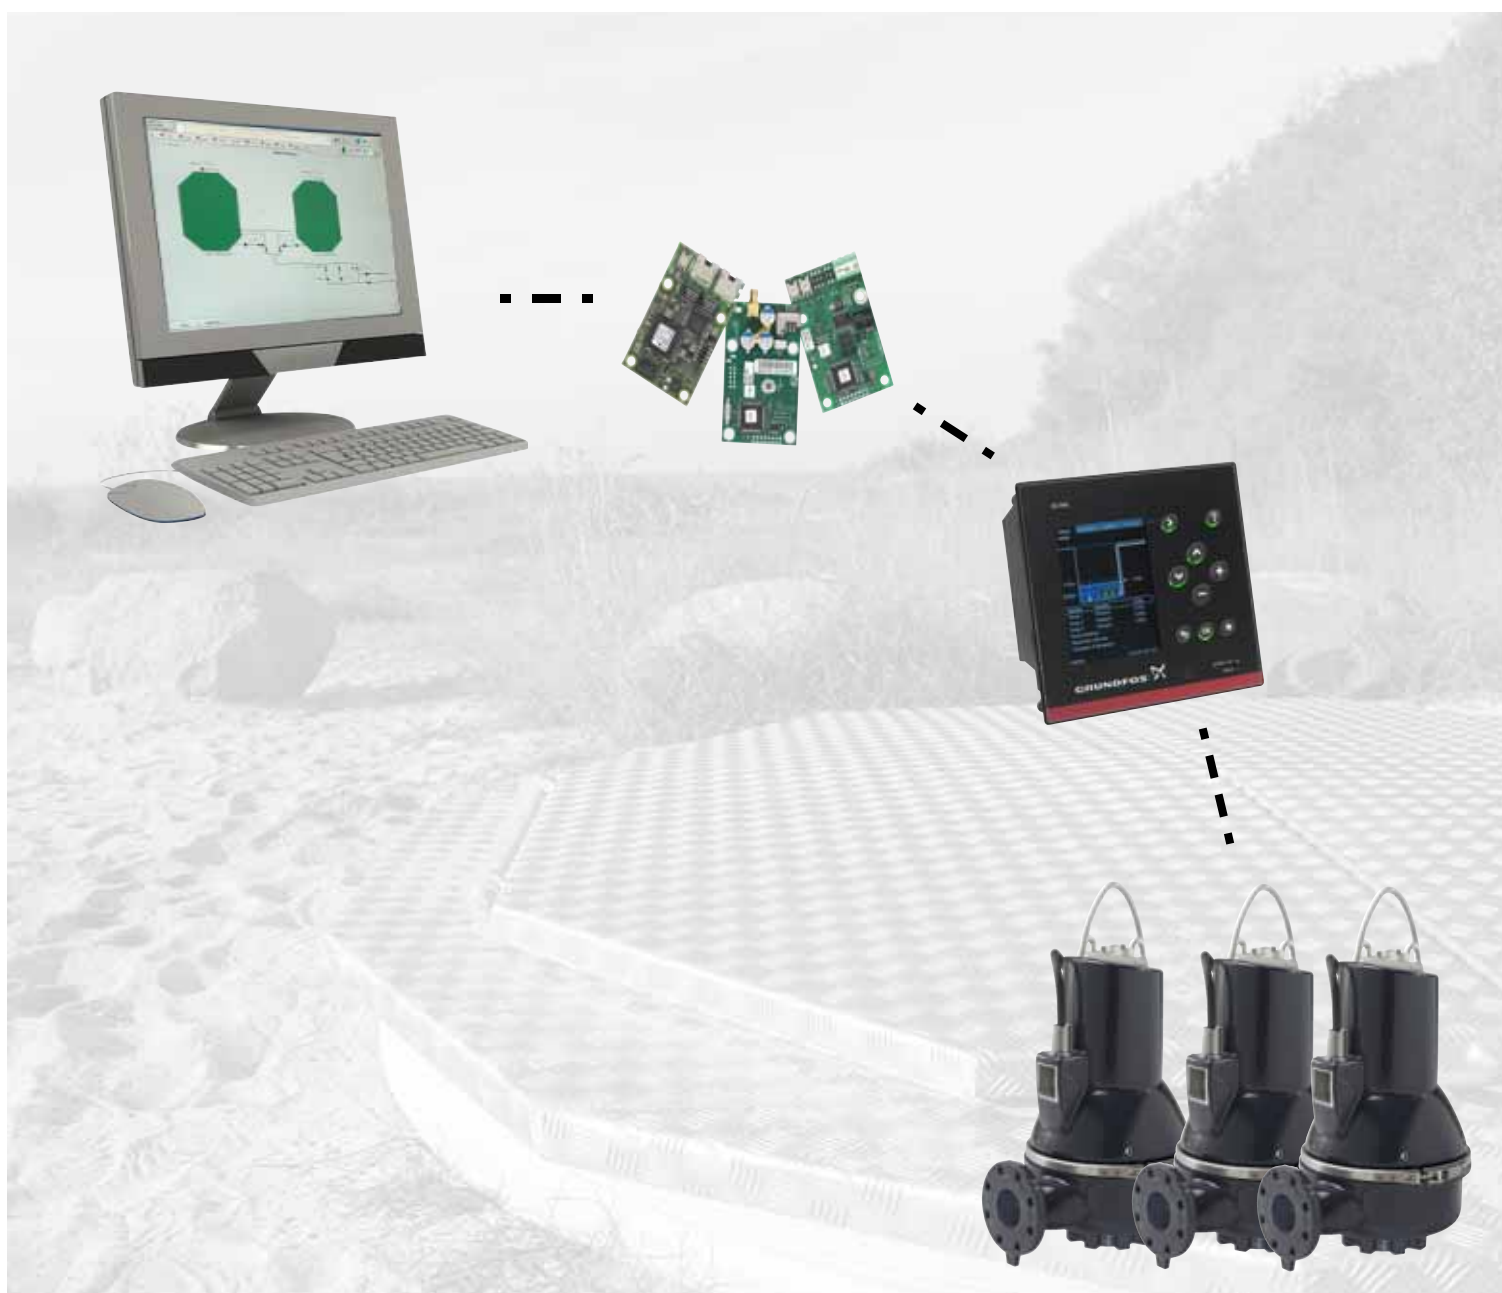

Original functional profile and user manual.

CONTENTS

	Page		Page
1. Symbols used in this document	2	11.8 Use of SMS messages	58
2. Introduction	3	11.9 GPRS connection	58
2.1 About this functional profile	3	11.10 Interlocking	61
2.2 Assumptions	3	11.11 Real-time clock	62
2.3 Definitions and abbreviations	3	11.12 Event simulation	62
3. System description	4	11.13 Alarms and warnings	63
3.1 Modbus	4	12. Modbus RTU telegram examples	67
3.2 Modbus RTU (CIM 200)	4	12.1 Modbus telegram overview	67
3.3 Modbus GSM/GPRS (CIM 250)	4	12.2 Read holding registers (0x03)	67
3.4 Modbus TCP (CIM 500)	4	12.3 Read input registers (0x04)	67
4. Specifications	5	12.4 Write single register (0x06)	68
4.1 CIM module	5	12.5 Write multiple registers (0x10)	68
4.2 CIM 200 Modbus RTU	5	12.6 Diagnostics (0x08)	69
4.3 CIM 250 GSM/GPRS	6	12.7 Diagnostics register interpretation	69
4.4 CIM 500 Modbus TCP	6	13. Application example	70
5. Modbus RTU, CIM 200 setup	7	13.1 Adaptation of pit graphics to installation values	71
5.1 Setting the Modbus transmission speed	7	13.2 Main status	71
5.2 Setting the parity	8	14. Modbus function code overview	76
5.3 Modbus address selection	8	15. Modbus telegram examples	77
5.4 Termination resistor	8	15.1 Diagnostics: return query data	77
5.5 Status LEDs	9	15.2 Reading the CIM configuration register block	77
6. Modbus GSM/GPRS, CIM 250 setup	10	15.3 Reading the pit water level	77
6.1 Installation	10	15.4 Reading the pit alarms	78
6.2 Status LEDs	11	15.5 Setting pit auto mode	78
7. Modbus TCP, CIM 500 setup	12	15.6 Interlocking the pit	79
7.1 Connecting the Ethernet cable	12	16. Fault finding	80
7.2 Setting the Industrial Ethernet protocol	12	16.1 CIM 200	80
7.3 Setting up the IP addresses	12	16.2 CIM 250	82
7.4 Establish connection to the Web server	13	16.3 CIM 500	84
7.5 Status LEDs	13	17. Modbus RTU rotary switch addresses	86
7.6 DATA and LINK LEDs	13		
8. Modbus function code overview	14		
9. Modbus register overview	15		
9.1 Register block overview	15		
9.2 CIM configuration register block	16		
9.3 CIM status register block	18		
9.4 GSM real time clock	18		
9.5 Pit control and configuration register block	19		
9.6 Pit status register block	24		
9.7 Pit data register block	32		
9.8 Pump 1 register block	34		
9.9 Pump 2 register block	36		
9.10 Pump 3 register block	38		
9.11 Pump 4 register block	40		
9.12 Pump 5 register block	42		
9.13 Pump 6 register block	44		
9.14 Alarm simulation register block	46		
9.15 User register block	46		
9.16 Name string register block	46		
9.17 Hour log register block	47		
9.18 Event log register block	48		
9.19 Data log index register block	49		
9.20 Data log series register block	50		
10. Modbus RTU commissioning, step-by-step guides	51		
10.1 Hardware setup (CIM 200)	51		
10.2 Hardware setup (CIM 250 GSM call-up)	51		
10.3 Hardware setup (CIM 250 GPRS connection)	51		
10.4 Modbus TCP communication setup (CIM 500)	52		
11. Detailed descriptions of functionality	53		
11.1 SCADA PIN code protection	53		
11.2 Reading the event log	53		
11.3 Reading the configurable data log series	54		
11.4 Separation of reads and writes	56		
11.5 Control bit acknowledgement	56		
11.6 GSM call-up connection	57		
11.7 GSM call-back connection	57		

1. Symbols used in this document




Warning

If these safety instructions are not observed, it may result in personal injury.



If these safety instructions are not observed, it may result in malfunction or damage to the equipment.

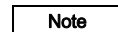

Notes or instructions that make the job easier and ensure safe operation.

2. Introduction

2.1 About this functional profile

This functional profile describes the following modules/units:

- CIM 200 Modbus RTU
- CIM250 Modbus GSM/GPRS
- CIM 500 Modbus Ethernet for Modbus TCP

This functional profile applies to the following Grundfos products:

- Grundfos Dedicated Controls 361
- Grundfos Dedicated Controls 362.

In the following, the two supported controllers are referred to as CU 36X.

The data in this document are subject to change without prior notice. Grundfos cannot be held responsible for any problems caused directly or indirectly by using information in this functional profile.

2.2 Assumptions

This functional profile assumes that the reader is familiar with commissioning and programming of Modbus devices. The reader should also have some basic knowledge of the Modbus protocol and technical specifications.

It is also assumed that an existing Modbus network with a Modbus master is present.

2.3 Definitions and abbreviations

0b	Prefix for binary number
0x	Prefix for hexadecimal number
3G	Third-generation mobile telephony network
4G	Fourth-generation mobile telephony network
ARP	Address Resolution Protocol. Translates IP addresses into MAC addresses.
Auto-MDIX	Ensures that both crossover cable types and non-crossover cable types can be used.
CAT5	Ethernet cable type with four twisted pairs of wires
CAT5e	Enhanced CAT5 cable with better performance
CAT6	Cable with very high performance
CIM	Communication Interface Module
CRC	Cyclic Redundancy Check. A data error detection method.
CSD	Circuit Switched Data. Connection is established via a fixed connection (a physical circuit or a reserved data channel).
CU 36X	Grundfos control unit for Dedicated Controls (CU 361 and CU 362)
DHCP	Dynamic Host Configuration Protocol. Used to configure network devices so that they can communicate on an IP network.
DNS	Domain Name System. Used to resolve host names to IP addresses.
GENIbus	Proprietary Grundfos fieldbus standard
GENIpro	Proprietary Grundfos fieldbus protocol
GPRS	General Packet Radio Service. Technology for TCP/IP communication and internet access via GSM.
Grundfos GO	A Grundfos handheld remote control device for controlling Grundfos products via infrared or radio. Based on smart phone technology.
GSM	Global System for Mobile communications
H	Head (pressure)
HTTP	Hyper Text Transfer Protocol. The protocol commonly used to navigate the world wide web.
IANA	Internet Assigned Numbers Authority
IP	Internet Protocol

LED	Light-Emitting Diode
MAC	Media Access Control. Unique network address for a piece of hardware.
Modbus	A serial communications protocol commonly used in industry and building automation systems
Modbus RTU	Modbus is a fieldbus used worldwide. The RTU version is used for wired networks (CIM 200) and for call-up connections over telephone networks (CIM 250).
Modbus TCP	Modbus is a fieldbus used worldwide. The TCP version is adapted for use as an application protocol on TCP/IP using either GPRS (CIM 250) or Ethernet (CIM 500) as basis.
MP 204	Grundfos motor protector
PIN	Personal Identification Number. For SIM cards.
Ping	Packet InterNet Groper. A software utility that tests the connectivity between two TCP/IP hosts.
PUK	Personal Unblocking Key. For SIM cards.
Q	Flow rate
R100	Grundfos handheld infrared remote control
SELV	Separated or Safety Extra-Low Voltage
SELV-E	Separated or Safety Extra-Low Voltage with earth connection
SIM	Subscriber Identity Module. SIM card.
SMA	SubMiniature version A. Coaxial radio signal cable connection standard.
SMTP	Simple Mail Transfer Protocol
SNTP	Simple Network Time Protocol. Used for clocks synchronization between computer systems.
TCP	Transmission Control Protocol. Protocol for Internet communication and Industrial Ethernet communication.
TCP/IP	Transmission Control Protocol/Internet Protocol. Protocol for Internet communication.
Transmission speed	Bits transferred per second, bits/s
URL	Uniform Resource Locator. The IP address used to connect to a server.
UTC	Coordinated Universal Time. The primary time standard by which the world regulates clocks and time.
UTF-8	Unicode Transformation Format. Character encoding.
VPN	Virtual Private Network. A network using the Internet to connect nodes. These systems use encryption and other security mechanisms to ensure that only authorised users can access the network and that the data cannot be intercepted.

3. System description

3.1 Modbus

The Grundfos Dedicated Controls CU 36X control unit is connected to up to six Grundfos wastewater pumps. It offers status information as well as control and monitoring of a wastewater pit via a user-friendly control panel with display. The CIM 200/250/500 is an add-on communication module to be fitted in the CU 36X, using a 10-pin connection. This enables communication with a PLC, SCADA system, etc. Via the Modbus RTU connection, it is possible to control the pumps and read status, measured values, logs, etc.

3.2 Modbus RTU (CIM 200)

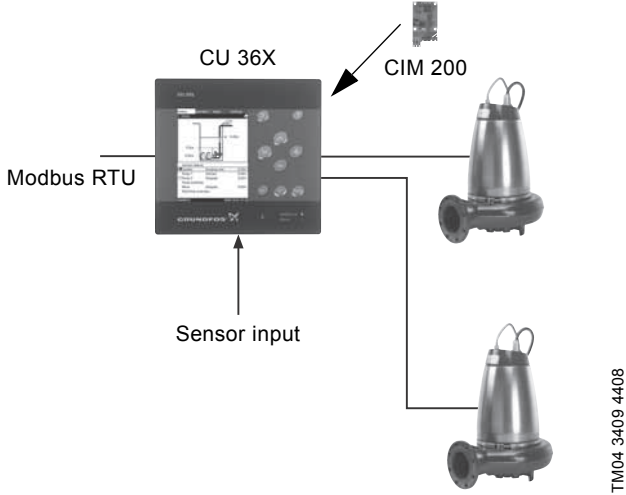


Fig. 1 CIM 200 solution for Dedicated Controls. Up to six pumps can be connected to CU 36X

3.3 Modbus GSM/GPRS (CIM 250)

The CIM 250 is an add-on communication module to be fitted in the CU 36X, using a 10-pin connection. This enables GSM/GPRS communication with a PLC, SCADA system, mobile phone, etc. Via the GSM/GPRS connection, it is possible to control the pumps and read status, measured values, logs, etc.

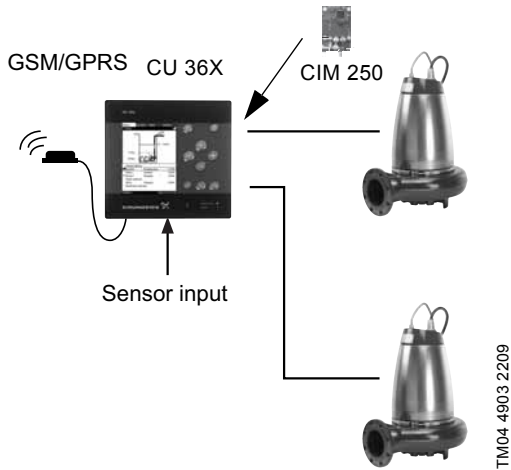


Fig. 2 CIM 250 solution for Dedicated Controls. Up to six pumps can be connected to CU 36X

3.4 Modbus TCP (CIM 500)

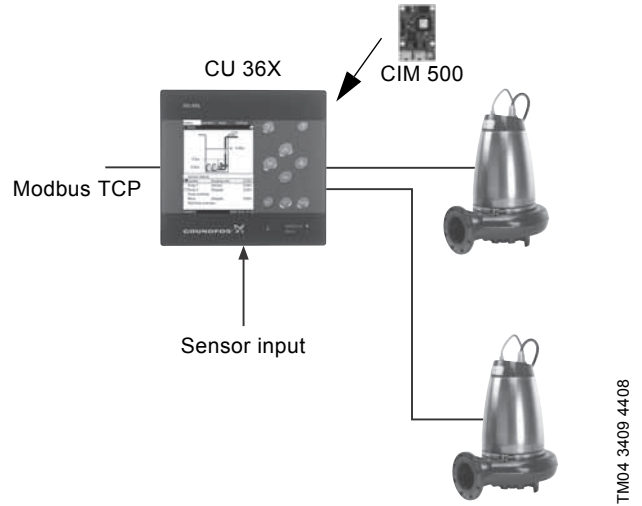


Fig. 3 CIM 500 solution for Dedicated Controls. Up to six pumps can be connected to CU 36X

4. Specifications

4.1 CIM module

General data	Description	Comments
Ambient humidity	30 % to 95 %	Relative, non-condensing.
Operating temperature	-20 °C to +45 °C	
Storage temperature	-25 °C to +70 °C	
Battery, lithium-ion	The battery will only be charged if the battery temperature is within 0 °C to +45 °C.	CIM 250 only.
GENIbus visual diagnostics	LED2	Will be in one of these states: Off, constantly green, flashing red, constantly red. See section 5.5 Status LEDs .

4.2 CIM 200 Modbus RTU

The table below provides an overview of the specifications for the Grundfos CIM 200. For further details, please refer to the specific sections of this functional profile.

Modbus RTU specifications	Description	Comments
Modbus connector	Screw-type terminal	3 pins. See section 5. Modbus RTU, CIM 200 setup .
Modbus connection type	RS-485, 2-wire + common	Conductors: D0, D1 and common. See section 5. Modbus RTU, CIM 200 setup .
Maximum cable length	1200 m	Equals 4000 ft.
Slave address	1-247	Set via rotary switches SW6 and SW7. See section 5.3 Modbus address selection .
Line termination	On or off	Set via DIP switches SW1 and SW2. See section 5.4 Termination resistor .
Recommended cable cross-section	0.20 - 0.25 mm ²	AWG24 or AWG23
Supported transmission speeds	1200*, 2400*, 4800*, 9600, 19200, 38400 bits/s	Set via DIP switches SW4 and SW5. See section 5.1 Setting the Modbus transmission speed .
Start bit	1	Fixed value.
Data bits	8	Fixed value.
Stop bits	1 or 2	Set via DIP switch SW3. See section 5.2 Setting the parity .
Parity bit	Even parity, odd parity* or no parity	Set via DIP switch SW3. See section 5.2 Setting the parity .
Modbus visual diagnostics	LED1	Off, flashing green, flashing red, constantly red. See section 5.5 Status LEDs .
Maximum number of Modbus devices	32	Using repeaters, this number can be increased. Legal address range is 1-247.
Maximum Modbus telegram size	256 bytes	Total length. Node address and CRC included. See section 12. Modbus RTU telegram examples .

* Can only be set via software.

4.3 CIM 250 GSM/GPRS

The table below provides an overview of the specifications for the Grundfos CIM 250. For further details, please refer to the specific sections of this functional profile.

Modbus GSM/GPRS specifications	Description	Comments
Data protocol	Modbus RTU/Modbus TCP	GSM call-up uses RTU. GPRS uses TCP.
Slave address	Factory 231 (0xE7)	Can be changed via Modbus register 00003, SoftwareDefinedModbusAddress.
GSM/GPRS visual diagnostics	LED1	See section 6.2 Status LEDs .
Maximum Modbus telegram size	260 bytes	Total Modbus TCP/IP application data unit. See fig. 20 .

4.4 CIM 500 Modbus TCP

The table below provides an overview of the specifications for the Grundfos CIM 500 for Modbus TCP. For further details, please refer to the specific sections of this functional profile.

Modbus TCP specifications	Description	Comments
Application layer	DHCP, HTTP, Ping, FTP, SMTP, SNMP, Modbus TCP	Rotary switch in position 1.
Transport layer	TCP	
Internet layer	Internet protocol V4 (IPv4)	
Link layer	ARP, media access control (Ethernet)	
Ethernet cable	Screened/unscreened, twisted-pair cables, CAT5, CAT5e or CAT6	Supports auto cable-crossover detecting (Auto-MDIX).
Maximum cable length	100 metres at 10/100 Mbits/s	Corresponds to 328 feet.
Transmission speed	10 Mbits/s, 100 Mbits/s	Auto-detected.
Industrial Ethernet protocols	PROFINET IO, Modbus TCP	Selected with rotary switch, section 7.2 Setting the Industrial Ethernet protocol .

5. Modbus RTU, CIM 200 setup

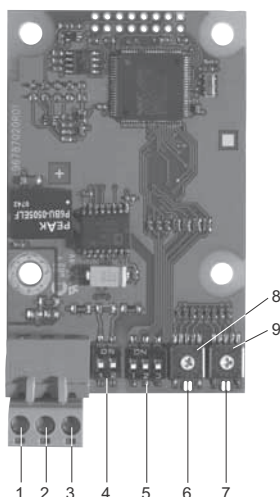


Fig. 4 CIM 200 Modbus module

Pos.	Designation	Description
1	D1	Modbus terminal D1 (positive data signal)
2	D0	Modbus terminal D0 (negative data signal)
3	Common/GND	Modbus terminal Common/GND
4	SW1/SW2	On/off switches for termination resistor
5	SW3/SW4/SW5	Switches for selection of Modbus parity and transmission speed
6	LED1	Red/green status LED for Modbus communication
7	LED2	Red/green status LED for internal communication between the CIM 200 and the Grundfos product
8	SW6	Hex switch for setting the Modbus address (four most significant bits)
9	SW7	Hex switch for setting the Modbus address (four least significant bits)

A screened, twisted-pair cable must be used. The cable screen must be connected to protective earth at both ends.

Recommended connection

Modbus terminal	Colour code	Data signal
D1-TXD1	Yellow	Positive
D0-TXD0	Brown	Negative
Common/GND	Grey	Common/GND

5.1 Setting the Modbus transmission speed

The transmission speed must be set correctly before the CIM 200 Modbus module is ready to communicate with the Modbus network. DIP switches SW4 and SW5 are used for setting the transmission speed. See fig. 5.

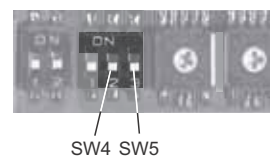


Fig. 5 Modbus transmission speed

DIP switch settings

Available transmission speeds in bits/s: 1200, 2400, 4800, 9600, 19200 and 38400.

The first three transmission speeds are only available via software settings, whereas the last three are available via DIP switches.

Transmission speed [bits/s]	SW4	SW5
9600	OFF	ON
19200	OFF	OFF
38400	ON	OFF
Software-defined	ON	ON

Default transmission speed is 19200 bits per second, as per the Modbus RTU standard.

Software-defined

When SW4 and SW5 are set to "software-defined", writing a value to the holding register at address 00004 will set a new transmission speed.

Use the following values for software-defined transmission speeds:

Software-defined transmission speed	Value to set in register 00004
1200 bits/s	0
2400 bits/s	1
4800 bits/s	2
9600 bits/s	3
19200 bits/s	4
38400 bits/s	5

This value is set to 1200 bits/s as default.

The communication interface does not support transmission speeds above 38400 bits/s.

The software-defined transmission speed value will be stored in the communication interface and will remain after a power-off.

TM04 1697 0908

TM04 1710 0908

5.2 Setting the parity

Note When software-defined transmission speed is enabled (ON), software-defined parity and stop bits are also enabled.

The parity can be set either manually by using SW3 or via software-defined settings.

Manual setting of parity

Default byte format (11 bits):

- 1 start bit
- 8 data bits (least significant bit sent first)
- 1 parity bit (even parity)
- 1 stop bit.

The default setting of the CIM 200 Modbus module is even parity (1 stop bit). It is possible to change the parity using DIP switch SW3. The parity can be changed to no parity (2 stop bits). See fig. 6.

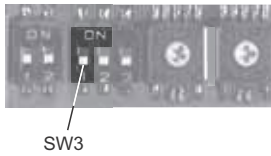


Fig. 6 Parity

DIP switch settings

Parity	SW3
Even parity, 1 stop bit	OFF
No parity, 2 stop bits	ON

Software-defined parity and stop bits

When SW4 and SW5 are set to "software-defined", the value in the holding registers at addresses 00009 and 00010 will override the setting of SW3. See figures 5 and 6.

Software-defined parity	Value to set in register 00009
No parity (default)	0
Even parity	1
Odd parity	2

Software-defined stop bit	Value to set in register 00010
1 stop bit (default)	1
2 stop bits	2

The software-defined parity and stop bit values will be stored in the communication interface and will remain after a power-off.

Note Before the parity and stop bits can be set via software-defined settings, SW4 and SW5 must be set to ON.

5.3 Modbus address selection

A Modbus slave on a Modbus network must have a unique address from 1-247. Address 0 is reserved for broadcasting, and is not a valid slave address.

To set the Modbus address, two hexadecimal rotary switches (SW6 and SW7) are used. See fig. 7.

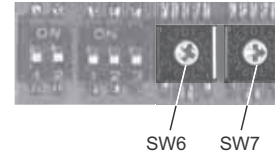


Fig. 7 Setting the Modbus address

For a complete overview of Modbus addresses, see section 16. [Fault finding](#).

Note The Modbus address must be set decimally from 1 to 247.

5.4 Termination resistor

The termination resistor is fitted on the CIM 200 Modbus module and has a value of 150 Ω.

The CIM 200 has a DIP switch with two switches (SW1 and SW2) for cutting the termination resistor in and out. Figure 8 shows the DIP switches in cut-out state.

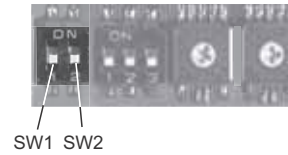


Fig. 8 Cutting the termination resistor in and out

DIP switch settings

Status	SW1	SW2
Cut in	ON	ON
	OFF	OFF
Cut out	ON	OFF
	OFF	ON

Default setting: Termination resistor cut out.

Cable length

We recommend the following maximum lengths:

Bits/s	Maximum cable length	
	Terminated cable [m/ft]	Unterminated cable [m/ft]
1200-9600	1200/4000	1200/4000
19200	1200/4000	500/1700
38400	1200/4000	250/800

Note To ensure a stable and reliable communication, it is important that only the termination resistor of the first and last units in the Modbus network are cut in.

Note All switch settings will be effective immediately after setting the values, no power-off needed.

5.5 Status LEDs

The CIM 200 Modbus module has two LEDs. See fig. 4.

- Red/green status LED (LED1) for Modbus communication
- Red/green status LED (LED2) for internal communication between the CIM 200 and the Grundfos product.

LED1

Status	Description
Off	No Modbus communication.
Flashing green	Modbus communication active.
Flashing red	Fault in the Modbus communication.
Permanently red	Fault in the CIM 200 Modbus configuration.

LED2

Status	Description
Off	The CIM 200 has been switched off.
Flashing red	No internal communication between the CIM 200 and the Grundfos product.
Permanently red	The CIM 200 does not support the Grundfos product connected.
Permanently green	Internal communication between the CIM 200 and the Grundfos product is OK.

Note

During startup, there may be a delay of up to 5 seconds before the LED2 status is updated.

6. Modbus GSM/GPRS, CIM 250 setup

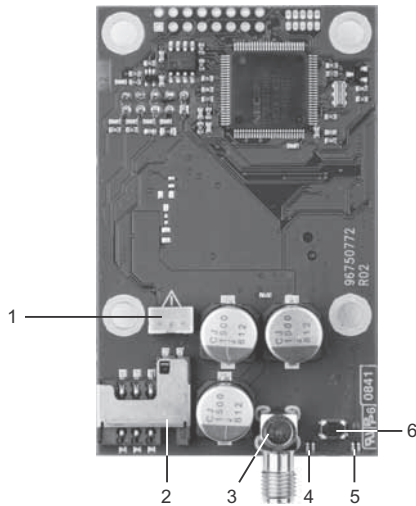


Fig. 9 CIM 250 GSM module (top-side view)

TM04 2642 1210

Pos.	Designation	Description
1		Battery socket
2		SIM card holder
3		SMA connection for GSM antenna
4	LED1	Yellow/green status LED for GSM/GPRS communication
5	LED2	Red/green status LED for internal communication between the CIM 250 and the Grundfos product.
6	SW1	Reset button. Keep the button pressed for 5 seconds to return to default settings.

6.1 Installation

Note Before installation, make sure that the power supply has been switched off and that it cannot be accidentally switched on.

6.1.1 Fitting a GSM antenna

An antenna must be connected to the CIM 250 to establish connection to the GSM network.

Note Grundfos offers different kinds of antennas. No antenna is supplied with the CIM 250. It must be ordered separately.

External antenna

Connect the antenna cable to the SMA connection (pos. 1) of the CIM 250. The antenna must be installed outside the control cabinet in a position with good reception conditions.

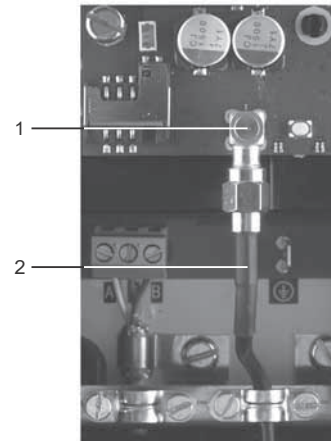


Fig. 10 Fitting an external GSM antenna

TM04 2644 2808

Pos.	Description
1	SMA connection for GSM antenna
2	Antenna cable for external GSM antenna

6.1.2 Inserting the SIM card

Before inserting the SIM card into the CIM 250, remove the PIN code, or set the PIN code to "4321".

Procedure

1. Insert the SIM card into a mobile phone.
2. Remove the PIN code from the SIM card, or set the PIN code to "4321". See the manual of the mobile phone.
3. Insert the SIM card into the CIM 250. See fig. 11.

The slanted edge of the SIM card must point downwards (away from the connector).

Note The connectors on the SIM card must face inwards towards the CIM 250. See fig. 11.

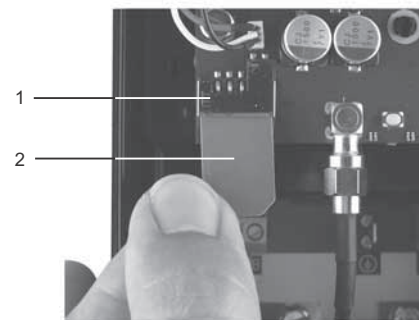


Fig. 11 Inserting the SIM card

Pos.	Description
1	SIM card holder
2	SIM card

TM04 2643 2808

6.1.3 Connecting the battery and power supply



Warning

The CIM 250 must only be connected to SELV or SELV-E circuits.



Warning

The safety precautions listed below must be observed carefully as improper handling of the lithium-ion battery may result in injury or damage from electrolyte leakage, heating ignition or explosion.

These safety precautions must be observed:

- Only insert the approved Grundfos battery pack (97631960).
- Never use this battery pack in other battery chargers.
- Do not dismantle or modify the battery.
- Do not heat or incinerate the battery.
- Do not pierce, crush or cause mechanical damage to the battery.
- Do not short-circuit the battery.
- Do not allow the battery to get wet or be immersed in water.
- Do not strike or throw the battery.
- For long periods of storage, the temperature should be below 45 °C.

The CIM 250 can be fitted with a lithium-ion battery (order no. 97631960), which will ensure sustained GSM/GPRS connection with the product in which it is mounted, even if the power is switched off. The battery is secured by a velcro strap which absorbs vibrations and simplifies replacement. Connect the battery to the CIM 250 as shown in fig. 12.

Note

If a battery is not connected, the user will not receive any SMS alarm message in case of a power cut.

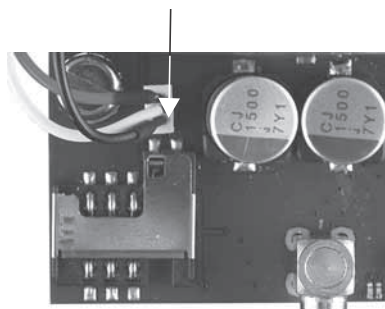


Fig. 12 Connecting the battery

Note

The battery will only be charged if the battery temperature is within 0 °C to +45 °C.

Switch on the power supply. The CIM 250 is powered either by the Grundfos product or by the battery.

The LED1 flashes yellow (searching for GSM network). When the connection to the GSM network has been established, the LED1 will pulsate yellow (GSM network active). See fig. 13.

The LED2 must be constantly green, indicating that the CIM 250 has been fitted correctly in the Grundfos product.

6.1.4 Configuration

For software configuration of the CIM 250, which includes setting of SMS functions and SCADA communication parameters, see "CIM 250 SMS commands" (supplement to the installation and operating instructions) on the CD-ROM supplied with the GSM module.

6.2 Status LEDs

The CIM 250 GSM module has two LEDs. See fig. 9.

- Yellow/green status LED (LED1) for GSM/GPRS communication.

Red/green status LED (LED2) for internal communication between the CIM 250 and the Grundfos product.

LED1 (yellow/green)

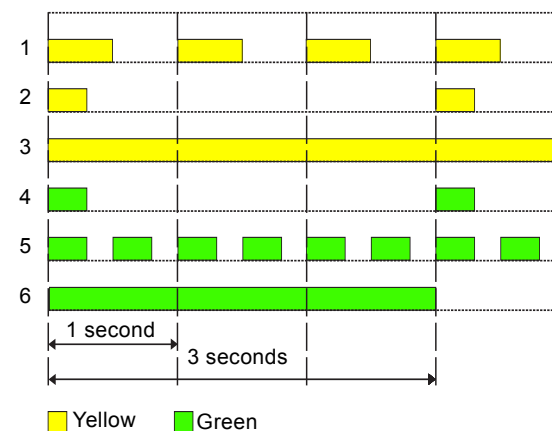


Fig. 13 LED1 status

Pos.	Status	Description
1	Flashing yellow	Searching for GSM network.
2	Pulsating yellow (single pulse)	Connection to the GSM network has been established.
3	Constantly yellow	Call-up connection has been established.
4	Pulsating green (single pulse)	Data are exchanged via GPRS.
5	Pulsating green (double pulse)	Data are exchanged via the call-up connection.
6	Green (3 seconds)	Sending or receiving an SMS message.

LED2 (red/green)

Status	Description
Off	The CIM 250 has been switched off.
Flashing red	No communication between the CIM 250 and the Grundfos product.
Constantly red	The CIM 250 does not support the connected version of the Grundfos product.
Constantly green	The connection between the CIM 250 and the Grundfos product is OK.

TM04 2645 2808

TM04 5194 4412

7. Modbus TCP, CIM 500 setup



Warning
The CIM 500 must only be connected to SELV or SELV-E circuits.

7.1 Connecting the Ethernet cable

RJ45 plugs and Ethernet cable must be used. The cable shield must be connected to protective earth at both ends.

Note It is important to connect cable shield to earth through earth clamp or to connect cable shield to earth in the connector.

The CIM 500 is designed for flexible network installation; the built-in two port switch makes it possible to daisy chain from product to product without the need of additional Ethernet switches. The last product in the chain is only connected to one of the Ethernet ports. Each Ethernet port has its own MAC address.

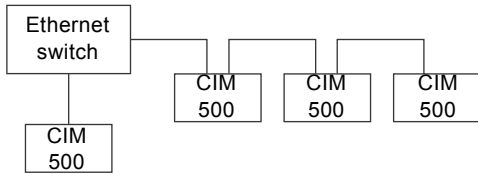


Fig. 14 Example of Industrial Ethernet network

TM05 6435 4711

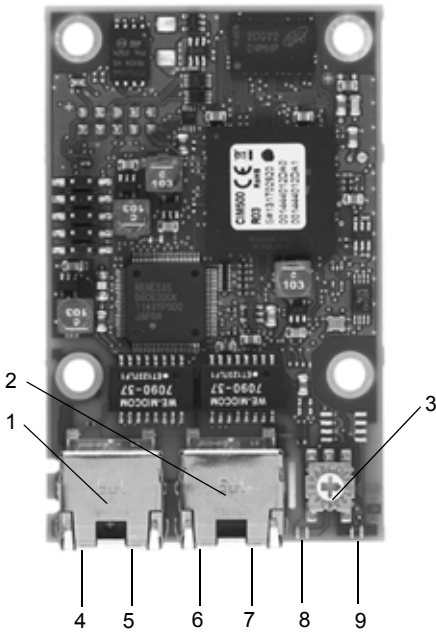


Fig. 15 Example of Ethernet connection

TM05 7431 1013

Pos.	Description	Designation
1	Industrial Ethernet RJ45 connector 1	ETH1
2	Industrial Ethernet RJ45 connector 2	ETH2
3	Rotary switch for protocol selection	SW1
4	Data activity LED for connector 1	DATA1
5	Link LED for connector 1	LINK1
6	Data activity LED for connector 2	DATA2
7	Link LED for connector 2	LINK2
8	Green/red status LED for Ethernet communication	LED 1
9	Green/red status LED for internal communication between module and pump.	LED 2

7.2 Setting the Industrial Ethernet protocol

The CIM 500 Ethernet module has a rotary switch for selection of the Industrial Ethernet protocol. See fig. 16.

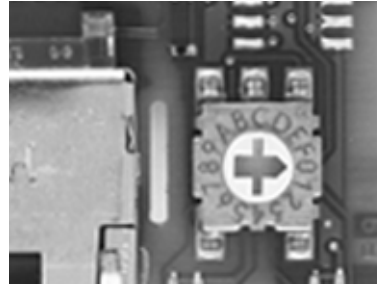


Fig. 16 Selecting the Industrial Ethernet protocol

TM05 7431 1013

Pos.	Description
0	PROFINET IO (default setting)
1	Modbus TCP
2..E	Reserved, LED1 will be permanently red to indicate an invalid configuration
F	Reset to default setting Note: The rotary switch has to be set in this position for 20 seconds to reset to default setting. During this period LED1 will be flashing red and green at the same time to indicate reset will occur.

Note Every change of the rotary switch setting, when the module is powered on, will cause the module to restart.

7.3 Setting up the IP addresses

The CIM 500 Ethernet module is default set up to a fixed IP address. It is possible to change the IP address settings from the built in web server.

Default IP settings used by web server	IP address: 192.168.1.100 Subnet mask: 255.255.255.0 Gateway: 192.168.1.1
IP settings for Modbus TCP	Must be set up by the Web server


7.4 Establish connection to the Web server

The CIM 500 module can be configured using the built-in Web server. To establish a connection from a PC to CIM 500 the following steps are required:

- Connect the PC and the CIM 500 module using an Ethernet cable.
- Configure the PC Ethernet port to the same subnetwork as the CIM 500, e.g. 192.168.1.101, and the subnet mask to 255.255.255.0. See section [A.1 How to configure an IP address on your PC](#) on page 90.
- Open a standard Internet browser and type 192.168.1.100 in the URL field.
- Log in to the Web server using:

User	Default: admin.
Password	Default: Grundfos

Note User and password may have been changed from their factory default values.

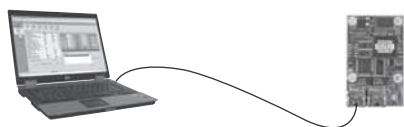

TM05 6436 4712

Fig. 17 CIM 500 connected to PC via Ethernet cable

For further information how to use the Web server, see section [A.2 Web server configuration](#) on page 90.

Note Both ETH1 and ETH2 can be used to establish a connection to the Web server.

Note The web server can be accessed while the selected Industrial Ethernet protocol is active.

7.5 Status LEDs

The CIM 500 Ethernet module has two Status LEDs, (LED1 and LED2).

See fig. 15.

- Red/green status LED (LED1) for Ethernet communication
- Red/green status LED (LED2) for internal communication between the CIM 500 and the Grundfos product.

LED1

Status	Description
Off	No Modbus TCP communication or switched off.
Flashing green	Modbus TCP communication active.
Permanently red	CIM 500 module configuration fault. See section 16.3.1 LED status .
Permanently red and green	Error in firmware download. See section 16.3.1 LED status .
Flashing red and green	Resetting to factory default. After 20 seconds the CIM 500 will restart.

LED2

Status	Description
Off	The CIM 500 is switched off.
Flashing red	No internal communication between the CIM 500 and the Grundfos product.
Permanently red	The CIM 500 does not support the Grundfos product connected.
Permanently green	Internal communication between the CIM 500 and the Grundfos product is OK.
Permanently red and green	Memory fault.

Note During startup, there is a delay of up to 5 seconds before LED1 and LED2 status is updated.

7.6 DATA and LINK LEDs

The CIM 500 Ethernet module has two connectivity LEDs related to each RJ45 connector. See fig. 15.

DATA1 and DATA2

These yellow LEDs indicate data traffic activity.

Status	Description
Yellow off	No data communication on RJ45 connector.
Yellow flashing	Data communication ongoing on RJ45 connector.
Steady yellow	Heavy network traffic on RJ45 connector.

LINK1 and LINK2

These green LEDs shows whether the ethernet cable is properly connected.

Status	Description
Green off	No Ethernet Link on RJ45 connector
Green on	Ethernet Link on RJ45 connector is OK

8. Modbus function code overview

The supported function codes are shown in the table below:

Type	Code	Hex	Name
16-bit data (registers)	03	0x03	Read holding registers
	04	0x04	Read input registers
	06	0x06	Write single register
	16	0x10	Write multiple registers
Diagnostics	08	08	Diagnostics See section 12.6 Diagnostics (0x08) for subcodes.

Note Reading or writing coils are not supported.

The same data are available in both holding registers and input registers, meaning that either function (0x03 or 0x04) can be used for reading data.

9. Modbus register overview

9.1 Register block overview

The Modbus RTU registers are grouped in the following register blocks:

Start address	Register block	Permissions	Description
00001	CIM configuration	R/W	Configuration of the CIM module.
00021	CIM status	R	Status registers for the CIM module.
00101	Pit control and configuration	R/W	Registers for control and configuration of wastewater pit.
00201	Pit status	R	Registers for status from wastewater pit.
00301	Pit data	R	Registers for measured values from wastewater pit.
00401	Pump 1	R	Registers containing pump 1 data and status.
00451	Pump 2	R	Registers containing pump 2 data and status.
00501	Pump 3	R	Registers containing pump 3 data and status.
00551	Pump 4	R	Registers containing pump 4 data and status.
00601	Pump 5	R	Registers containing pump 5 data and status.
00651	Pump 6	R	Registers containing pump 6 data and status.
00701	Alarm simulation	R/W	Registers for simulation of alarms and warnings.
00751	User	R/W	Registers where the user can freely store data.
00801	Name string	R	For reading the name string from the CU 361.
02001	Hour log	R	Registers containing 72-hour logs.
06001	Event log	R	Registers containing the latest 50 event log entries.
07001	Data log index	R	Index for the configurable data log series.
07301	Data log series	R	Configurable data log series.

All addresses contain registers. Some are bit-interpreted while others are 16-bit values, or high/low order parts of 32-bit values. A data value of 65535 (0xFFFF) indicates "not available" when reading registers. The value of 65535 (0xFFFF) does not imply a "disable" when writing values.

Each register block will be specified in more detail in the following sections.

9.2 CIM configuration register block

Registers in this block can be read by means of function codes 0x03 and/or 0x04. They can be written as holding registers with function codes 0x06 and 0x10.

Address	Register name	Description	CIM 200	CIM 250	CIM 500
00001	SlaveMinimumReplyDelay	The minimum reply delay from the slave in ms. Value range: 0-10000, i.e. a reply delay of up to 10 seconds. This delay is typically used in conjunction with a radio modem. The delay value is stored in the device and will remain after a power-off. The delay set here will be added to the internal delay in the device. Default setting: 0.	•	-	-
00002	RegisterOffset	Not used.	-	-	-
00003	SoftwareDefinedModbusAddress	This register holds the active Modbus address. The default setting is 0xE7 (231), and there is normally no need to change this value. Note: For CIM 200 this value is used only when the transmission speed is set to "Software-defined" on the DIP switches SW4 and SW5. Otherwise, it will be ignored by the slave.	•	•	-
00004	SoftwareDefinedBitRate	Modbus software-defined transmission speed enumeration. The software-defined transmission speed value is stored in the device and will remain after a power-off. 0: 1200 bits/s 1: 2400 bits/s 2: 4800 bits/s 3: 9600 bits/s 4: 19200 bits/s 5: 38400 bits/s. Note: This value is used only when the transmission speed is set to "Software-defined" on the DIP switches SW4 and SW5. Otherwise, it will be ignored by the slave.	•	-	-
00005	AutoAckControlBits	Used to select the behaviour of control bit acknowledgements from the CIM. 0: Disabled. Control bits are not automatically lowered when accepted by the device. The user must lower the triggered control bit manually before the control bit can be triggered again. 1: Enabled. Control bits are automatically lowered when accepted by the device. The user does not have to lower it manually (default).	•	•	•
00006	ReadWriteSeparation	Used to select value read-back behaviour. The value in this register is stored in the device and will remain after a power-off. 0: Register values can be written by both the Modbus master and the CIM 250 (default). 1: Read-backs are put into separate registers by the CIM 250, hence separating inputs from outputs.	•	•	•
00007	ScadaCallBackRegister	Used to select the register in the SCADA system that will be written when a call-back request is sent via GPRS. See fig. 23	•	•	-
00008	NoDataActivityTimeout	The elapsed time with no data activity before the module issues a "GPRS restart".	-	•	-
00009	SoftwareDefinedParity	Parity setting to be used when using "software-defined" settings. 0: No parity (default) 1: Even parity 2: Odd parity. Note: For CIM 200 this value is used only when the transmission speed is set to "Software-defined" on the DIP switches SW4 and SW5. Otherwise, it will be ignored by the slave.	•	-	-
00010	SoftwareDefinedStopBit	Stop bit setting to be used when using "software-defined" settings. 0: No stop bit 1: 1 stop bit (default) 2: 2 stop bits. Note: For CIM 200 this value is used only when the transmission speed is set to "Software-defined" on the DIP switches SW4 and SW5 by selecting a value outside the range [0; 247]. Otherwise, it will be ignored by the slave.	•	-	-

Address	Register name	Description	CIM 200	CIM 250	CIM 500
00011	ScadaPinCode	<p>PIN code for SCADA systems, etc. If GeneralStatus.ScadaPinCodeEnabled (register 00029, bit 0) is enabled, the correct PIN code must be entered in this register in order to gain access to remote control and configuration. Verify acceptance in GeneralStatus.WriteAccess (register 00029, bit 1). Programming of the SCADA PIN code made via the SMS command SETSCADACODE. See "CIM 250 SMS commands" (supplement to installation and operating instructions) on the CD-ROM supplied with the GSM module.</p>	•	•	•

9.3 CIM status register block

Registers in this block can be read by means of function codes 0x03 and/or 0x04. They are read-only. This block can be used for various kinds of fault finding.

Address	Register name	Description		
00021	GENIbusCRCErrorCnt	Holds a CRC error counter for the GENIbus connection between CIM and CU 36X.		
00022	GENIbusDataErrorCnt	Holds a CRC error counter for the GENIbus connection between CIM and CU 36X.		
00023	VersionNumber	A Grundfos-specific version number. This is an unsigned integer value.		
00024	ActualModbusAddress	Holds the current Modbus slave address of the device. Valid value range: 1...247. Not used for CIM 500.		
00025	GENIbusTXcountHI	Holds a transmit counter for total number of telegrams sent to the CU 36X on the GENIbus connection.		
00026	GENIbusTXcountLO			
00027	GENIbusRXcountHI	Holds a receive counter for total number of telegrams received from the CU 36X on the GENIbus connection.		
00028	GENIbusRXcountLO			
00029	GeneralStatus Bit 0: ScadaPinCodeEnabled	PIN code functionality. 0: No PIN code required 1: PIN code required to perform remote control and configuration. Activation of SCADA PIN code protection takes place via the SMS command SCADACODE. See "CIM 250 SMS commands" (supplement to installation and operating instructions) on the CD-ROM supplied with the GSM module.		
	GeneralStatus Bit 1: WriteAccess	Remote write access. 0: No write access (the PIN code is incorrect). 1: Full write access (the PIN code is either correct or not enabled).		
00030	UnitFamily	Grundfos product family.		
00031	UnitType	Grundfos product type.		
00032	UnitVersion	Grundfos product version.		
00033	GSMBatteryState	State of GSM battery 0: Battery not present 1: Battery must be replaced 2: Battery charging 3: Battery needs charging, but temperature too high 4: Battery needs charging, but temperature too low 5: Battery low 6: Battery OK 255: Battery state not available		
		00034	ProductSoftwareVersionHI	Product software version (BCD diget 1-4 aa.bb)
		00035	ProductSoftwareVersionLO	Product software version (BCD diget 5-8 cc.dd)
		00036	ProductSoftwareDayMonth	Product software date (BCD ddmm)
		00037	ProductSoftwareYear	Product software date (BCD yyyy)

9.4 GSM real time clock

Address	Register name	Description	CIM 200	CIM 250	CIM 500
00080	SetUNIXRealTimeClockHI	Set real time clock (32 bit UNIX format)	-	•	-
00081	SetUNIXRealTimeClockLO	Triggered on value change	-	•	-
00082	SetRtcSecond	Set real time clock (seconds)	-	•	-
00083	SetRtcMinute	Set real time clock (minutes)	-	•	-
00084	SetRtcHour	Set real time clock (hours)	-	•	-
00085	SetRtcDay	Set real time clock (day)	-	•	-
00086	SetRtcMonth	Set real time clock (month)	-	•	-
00087	SetRtcYear	Set real time clock (year)	-	•	-
00088	Bit 0: SetRtc	Triggers setting of real time clock (s/m/h/d/m/y format)	-	•	-
00089	StatusUNIXRealTimeClockHI	Real time clock (32 bit UNIX format)	-	•	-
00090	StatusUNIXRealTimeClockLO		-	•	-
00091	StatusRtcSecond	Real time clock - seconds	-	•	-
00092	StatusRtcMinute	Real time clock - minutes	-	•	-
00093	StatusRtcHour	Real time clock - hours	-	•	-
00094	StatusRtcDay	Real time clock - day of month	-	•	-
00095	StatusRtcMonth	Real time clock - month	-	•	-
00096	StatusRtcYear	Real time clock - year (after 2000)	-	•	-
00097	Bit 0: StatusSetRTCAck	Acknowledge of Set RTC command	-	•	-

9.5 Pit control and configuration register block

Registers in this block can be read by means of function codes 0x03 and/or 0x04. They can be written as holding registers with function codes 0x06 and 0x10.

Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

Address	Register name	Scale	Description
00101	PitControl Bit 0: ResetAlarm	Bool	Control bit that resets alarms and warnings from the CU 36X. 0 = No resetting 1 = Resetting alarm. This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section 9.2 CIM configuration register block , address 00005, for acknowledgement behaviour.
	PitControl Bit 1: RESERVED	-	-
	PitControl Bit 2: ResetEventLog	Bool	Control bit that resets the SCADA event log in the CU 36X. 0 = No resetting 1 = Resetting event log. This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section 9.2 CIM configuration register block , address 00005, for acknowledgement behaviour.
	PitControl Bit 3: InterlockPit	Bool	Control bit that interlocks the pit (stops all pumps) for a specified time interval (see the InterlockTimeout register 00226), meaning that the pit will automatically go back to "Auto" mode after timeout. 0 = No command 1 = Pit interlocked (status is read from OperatingMode register 00203). This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section 9.2 CIM configuration register block , address 00005, for acknowledgement behaviour.
	PitControl Bit 4: AutoPit	Bool	Control bit that sets the pit to "Auto" mode. 0 = No command 1 = Pit in "Auto" mode (status is read from OperatingMode register 00203). This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section 9.2 CIM configuration register block , address 00005, for acknowledgement behaviour.
	PitControl Bit 5: CallBackAck	Bool	Control bit that acknowledges a call-back from the CU 36X. 0: No command 1: Acknowledging the call-back. This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section 9.2 CIM configuration register block , address 00005, for acknowledgement behaviour.
	PitControl Bit 6: ResetUserDefCounter1	Bool	Reset the user-defined counter 1 0: No resetting 1: Reset counter This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section 9.2 CIM configuration register block , address 00005, for acknowledgement behaviour.
	PitControl Bit 7: ResetUserDefCounter2	Bool	Reset the user-defined counter 2 0: No resetting 1: Reset counter This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section 9.2 CIM configuration register block , address 00005, for acknowledgement behaviour.
	PitControl Bit 8: ResetUserDefCounter3	Bool	Reset the user-defined counter 3 0: No resetting 1: Reset counter This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section 9.2 CIM configuration register block , address 00005, for acknowledgement behaviour.
	PitControl Bit 9: CallBackTest	Bool	Activates the call-back test function 0: No command 1: Activates call-back test This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section 9.2 CIM configuration register block , address 00005, for acknowledgement behaviour.

Address	Register name	Scale	Description
00102	RelayControl Bit 0: SetCustomRelay	Bool	Control bit that sets the value of the custom relay. 0 = Relay state logical 0 1 = Relay state logical 1.
	CustomRelayPulse Bit 1: PulseRelay	Bool	Control bit that pulses the custom relay. 0 (no pulse) will be the resulting state. 0 = No pulse 1 = Pulse.
00103	PitPump1Control	Enum	Remote manual control of pump 1. 0 = "Auto" mode (the pump is controlled by the CU 36X) 1 = Forced start 2 = Forced stop.
00104	PitPump2Control	Enum	Remote manual control of pump 2. 0 = "Auto" mode (the pump is controlled by the CU 36X) 1 = Forced start 2 = Forced stop.
00105	PitPump3Control	Enum	Remote manual control of pump 3. 0 = "Auto" mode (the pump is controlled by the CU 36X) 1 = Forced start 2 = Forced stop.
00106	PitPump4Control	Enum	Remote manual control of pump 4. 0 = "Auto" mode (the pump is controlled by the CU 36X) 1 = Forced start 2 = Forced stop.
00107	PitPump5Control	Enum	Remote manual control of pump 5. 0 = "Auto" mode (the pump is controlled by the CU 36X) 1 = Forced start 2 = Forced stop.
00108	PitPump6Control	Enum	Remote manual control of pump 6. 0 = "Auto" mode (the pump is controlled by the CU 36X) 1 = Forced start 2 = Forced stop.
00109	ScadaPinCode	Unscaled	PIN code for SCADA systems, etc. If PitStatus.ScadaPinCodeEnabled (register 00202, bit 4) is enabled, the correct PIN code must be set in this register in order to gain access to remote control and configuration. Verify acceptance in PitStatus.WriteAccess (register 00202, bit 5).
00110	SetEventLogClearID	Unscaled	Selects which records to clear in the event log.
00111	SetInterlockTimeout	1 minute	Interlock timeout value measured in minutes. Status of this register is read in InterlockTimeout (register 00226).
00112	SetRealTimeClockHI	1 second	Setting the real-time clock in the CU 36X in seconds since midnight January 1st 1970 (UNIX time).
00113	SetRealTimeClockLO		First set SetRealTimeClockHI, then SetRealTimeClockLO in order to set a new time in UNIX format.
00114	SetRtcSecond	1 second	Real-time clock: Second of the minute [0; 59].
00115	SetRtcMinute	1 minute	Real-time clock: Minute of the hour [0; 59].
00116	SetRtcHour	1 hour	Real-time clock: Hour of the day [0; 23].
00117	SetRtcDay	1 day	Real-time clock: Day of the month [1; 31].
00118	SetRtcMonth	1 month	Real-time clock: Month of the year [1; 12].
00119	SetRtcYear	1 year	Real-time clock: Year [0; 254] = [year 2000; year 2254].
00120	SetRtc Bit0: SetRtc	Bool	Control bit that sets the new real-time clock in the CU 36X. 1 = Set new real-time clock from the registers 00114 to 00119. This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section 9.2 CIM configuration register block , address 00005, for acknowledgement behaviour.
00121	SetOverflowLevel	0.01 m	Setting a new level for activation of overflow level alarm.*
00122	SetHighLevel	0.01 m	Setting a new level for activation of high-level alarm.*
00123	SetAlarmLevel	0.01 m	Setting a new level for activation of alarm level alarm.*
00124	SetDryRunningLevel	0.01 m	Setting a new level for activation of dry-running alarm.*
00125	SetFoamDrainingLevel	0.01 m	Setting a new level for foam-draining stop.*
00126	SetStartLevelPump1	0.01 m	Setting a new start level, pump 1.*
00127	SetStopLevelPump1	0.01 m	Setting a new stop level, pump 1.*
00128	SetStartLevelPump2	0.01 m	Setting a new start level, pump 2.*
00129	SetStopLevelPump2	0.01 m	Setting a new stop level, pump 2.*
00130	SetStartLevelPump3	0.01 m	Setting a new start level, pump 3.*
00131	SetStopLevelPump3	0.01 m	Setting a new stop level, pump 3.*

Address	Register name	Scale	Description
00132	SetStartLevelPump4	0.01 m	Setting a new start level, pump 4.*
00133	SetStopLevelPump4	0.01 m	Setting a new stop level, pump 4.*
00134	SetStartLevelPump5	0.01 m	Setting a new start level, pump 5.*
00135	SetStopLevelPump5	0.01 m	Setting a new stop level, pump 5.*
00136	SetStartLevelPump6	0.01 m	Setting a new start level, pump 6.*
00137	SetStopLevelPump6	0.01 m	Setting a new stop level, pump 6.*
00138	SetCurrentMaxAlarmGrp1	0.01 A	Set current max. alarm for group 1*
00139	SetCurrentMinAlarmGrp1	0.01 A	Set current min. alarm for group 1*
00140	SetCurrentMaxWarnGrp1	0.01 A	Set current max. warning for group 1*
00141	SetCurrentMinWantGrp1	0.01 A	Set current min. warning for group 1*
00142	SetCurrentMaxAlarmGrp2	0.01 A	Set current max. alarm for group 2*
00143	SetCurrentMinAlarmGrp2	0.01 A	Set current min. alarm for group 2*
00144	SetCurrentMaxWarnGrp2	0.01 A	Set current max. warning for group 2*
00145	SetCurrentMinWantGrp2	0.01 A	Set current min. warning for group 2*
00146	SetSetpointPump1	0.1 %	Set PID control loop setpoint for pump 1*
00147	SetSetpointPump2	0.1 %	Set PID control loop setpoint for pump 2*
00148	SetSetpointPump3	0.1 %	Set PID control loop setpoint for pump 3*
00149	SetSetpointPump4	0.1 %	Set PID control loop setpoint for pump 4*
00150	SetSetpointPump5	0.1 %	Set PID control loop setpoint for pump 5*
00151	SetSetpointPump6	0.1 %	Set PID control loop setpoint for pump 6*
00152	SetControlModePump1	enum	Set control mode for pump 1: 0 = Fixed Frequency 1 = Linear Control 2 = Minimum Control 3 = PID control*
00153	SetControlModePump2	enum	Set control mode for pump 2: 0 = Fixed Frequency 1 = Linear Control 2 = Minimum Control 3 = PID control*
00154	SetControlModePump3	enum	Set control mode for pump 3: 0 = Fixed Frequency 1 = Linear Control 2 = Minimum Control 3 = PID control*
00155	SetControlModePump4	enum	Set control mode for pump 4: 0 = Fixed Frequency 1 = Linear Control 2 = Minimum Control 3 = PID control*
00156	SetControlModePump5	enum	Set control mode for pump 5: 0 = Fixed Frequency 1 = Linear Control 2 = Minimum Control 3 = PID control*
00157	SetControlModePump6	enum	Set control mode for pump 6: 0 = Fixed Frequency 1 = Linear Control 2 = Minimum Control 3 = PID control*
00158	SetFeedbackSensorTypePump1	enum	Sets the feedback sensor type for pump 1: 4 = Flow rate 5 = Level, pressure 6 = Level, Ultrasound 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*
00159	SetFeedbackSensorTypePump2	enum	Sets the feedback sensor type for pump 2: 4 = Flow rate 5 = Level, pressure 6 = Level, Ultrasound 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*

Address	Register name	Scale	Description
00160	SetFeedbackSensorTypePump3	enum	Sets the feedback sensor type for pump 3: 4 = Flow rate 5 = Level, pressure 6 = Level, Ultrasound 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*
00161	SetFeedbackSensorTypePump4	enum	Sets the feedback sensor type for pump 4: 4 = Flow rate 5 = Level, pressure 6 = Level, Ultrasound 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*
00162	SetFeedbackSensorTypePump5	enum	Sets the feedback sensor type for pump 5: 4 = Flow rate 5 = Level, pressure 6 = Level, Ultrasound 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*
00163	SetFeedbackSensorTypePump6	enum	Sets the feedback sensor type for pump 6: 4 = Flow rate 5 = Level, pressure 6 = Level, Ultrasound 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*
00164	SetSetpointTypePump1	enum	Sets the setpoint type for pump 1: 0 = Fixed value 1 = Analog input*
00165	SetSetpointTypePump2	enum	Sets the setpoint type for pump 2: 0 = Fixed value 1 = Analog input*
00166	SetSetpointTypePump3	enum	Sets the setpoint type for pump 3: 0 = Fixed value 1 = Analog input*
00167	SetSetpointTypePump4	enum	Sets the setpoint type for pump 4: 0 = Fixed value 1 = Analog input*
00168	SetSetpointTypePump5	enum	Sets the setpoint type for pump 5: 0 = Fixed value 1 = Analog input*
00169	SetSetpointTypePump6	enum	Sets the setpoint type for pump 6: 0 = Fixed value 1 = Analog input*
00170	SetAISetpointSelectPump1	enum	Analog input to use as setpoint for pump 1: 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*
00171	SetAISetpointSelectPump2	enum	Analog input to use as setpoint for pump 2: 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*
00172	SetAISetpointSelectPump3	enum	Analog input to use as setpoint for pump 3: 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*
00173	SetAISetpointSelectPump4	enum	Analog input to use as setpoint for pump 4: 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*
00174	SetAISetpointSelectPump5	enum	Analog input to use as setpoint for pump 5: 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*
00175	SetAISetpointSelectPump6	enum	Analog input to use as setpoint for pump 6: 13 = User defined Sensor 1 14 = User defined sensor 2 15 = User defined sensor 3*

Address	Register name	Scale	Description
00176	SetFixedFrequencyPump1	Hz	Fixed frequency for pump 1*
00177	SetFixedFrequencyPump2	Hz	Fixed frequency for pump 2*
00178	SetFixedFrequencyPump3	Hz	Fixed frequency for pump 3*
00179	SetFixedFrequencyPump4	Hz	Fixed frequency for pump 4*
00180	SetFixedFrequencyPump5	Hz	Fixed frequency for pump 5*
00181	SetFixedFrequencyPump6	Hz	Fixed frequency for pump 6*
00182	SetH2SLevel	1 ppm	For reception of Hydrogen sulfide (H2S) measurement via GRM
00183	SetH2SSensorFaults Bit 0: SignalFault	Bool	For reception of H2S sensor signal fault via GRM 0 = No fault 1 = Sensor signal fault
00184	SetDosingRef	0.1 litre/h	Set chemical dosing reference for H2S level control

* If ReadWriteSeparation (register 00006, bit 0) is set to "0", the CIM will overwrite this register value with the resulting level.

9.6 Pit status register block

Registers in this block can be read by means of function codes 0x03 and/or 0x04. It is not possible to write to these registers.

Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

Address	Register name	Scale	Description
	AcknowledgeRegister Bit 0: AckResetAlarm	Bool	Indicates if a ResetAlarm control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0 = Not acknowledged 1 = Acknowledged.
	AcknowledgeRegister Bit 1: AckSetRtc	Bool	Indicates if a SetRtc (real-time clock) control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0 = Not acknowledged 1 = Acknowledged.
	AcknowledgeRegister Bit 2: AckResetEventLog	Bool	Indicates if a ResetEventLog control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0 = Not acknowledged 1 = Acknowledged.
	AcknowledgeRegister Bit 3: AckInterlockPit	Bool	Indicates if an InterlockPit control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0 = Not acknowledged 1 = Acknowledged.
	AcknowledgeRegister Bit 4: AckAutoPit	Bool	Indicates if an AutoPit control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0 = Not acknowledged 1 = Acknowledged.
00201	AcknowledgeRegister Bit 5: AckCallBack	Bool	Indicates if a CallBack control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0: Not acknowledged 1: Acknowledged.
	AcknowledgeRegister Bit 6: ResetUserDefCounter1	Bool	Indicates if a ResetUserDefCounter1 control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0 = Not acknowledged 1 = Acknowledged.
	AcknowledgeRegister Bit 7: ResetUserDefCounter2	Bool	Indicates if a ResetUserDefCounter2 control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0 = Not acknowledged 1 = Acknowledged.
	AcknowledgeRegister Bit 8: ResetUserDefCounter3	Bool	Indicates if a ResetUserDefCounter3 control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0 = Not acknowledged 1 = Acknowledged.
	AcknowledgeRegister Bit 9: CallBackTest	Bool	Indicates if a CallBackTest control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0 = Not acknowledged 1 = Acknowledged.
	AcknowledgeRegister Bit 10: RelayPulse	Bool	Indicates if a RelayPulse control bit was acknowledged by the device. This bit is only active if AutoAckControlBits (register 00005, bit 0) is set to "0". 0 = Not acknowledged 1 = Acknowledged.

Address	Register name	Scale	Description
00202	PitStatus Bit 0: RESERVED	-	-
	PitStatus Bit 1: AlarmActive	Bool	Alarm condition. 0 = No active alarms 1 = One or more active alarms.
	PitStatus Bit 2: WarningActive	Bool	Warning condition. 0 = No active warnings 1 = One or more active warnings.
	PitStatus Bit 3: ManualControl	Bool	Manual control condition. 0 = No manual control 1 = Manual control.
	PitStatus Bit 4: ScadaPinCodeEnabled	Bool	PIN code functionality. 0 = No PIN code required 1 = PIN code required to perform remote control and configuration.
	PitStatus Bit 5: WriteAccess	Bool	Remote write access. 0 = No write access (PIN code is incorrect) 1 = Full write access (PIN code is either correct or not enabled).
00203	OperatingMode	enum	Register for reading the actual operating mode of the pit. 0 = Standby (stopped from level control) 1 = Startup delay 2 = Pumping 3 = Stop delay 4 = Pumping max. 5 = Stopped 6 = Foam-draining 7 = Daily emptying 8 = Pump anti-seizing 9 = Manual control (all enabled pumps in manual control mode) 10 = Interlock control (the pit is interlocked) 11 = Mains supply fault 12 = Level sensor fault 13 = All enabled pumps in alarm 14 = All pumps out of operation 15 = CU 36X controller in service mode
00204	PitPumpsPresence Bit 0: Pump1Presence	Bool	Presence of pump 1. 0 = Not present 1 = Present.
	PitPumpsPresence Bit 1: Pump2Presence	Bool	Presence of pump 2. 0 = Not present 1 = Present.
	PitPumpsPresence Bit 2: Pump3Presence	Bool	Presence of pump 3. 0 = Not present 1 = Present.
	PitPumpsPresence Bit 3: Pump4Presence	Bool	Presence of pump 4. 0 = Not present 1 = Present.
	PitPumpsPresence Bit 4: Pump5Presence	Bool	Presence of pump 5. 0 = Not present 1 = Present.
	PitPumpsPresence Bit 5: Pump6Presence	Bool	Presence of pump 6. 0 = Not present 1 = Present.
	PitPumpsPresence Bit 6: Mixer	Bool	Presence of mixer 0 = Not present 1 = Present.

Address	Register name	Scale	Description
00205	PitPumpsDisabled Bit 0: Pump1Disabled	Bool	Enabled/disabled state of pump 1. 0 = Enabled 1 = Disabled.
	PitPumpsDisabled Bit 1: Pump2Disabled	Bool	Enabled/disabled state of pump 2. 0 = Enabled 1 = Disabled.
	PitPumpsDisabled Bit 2: Pump3Disabled	Bool	Enabled/disabled state of pump 3. 0 = Enabled 1 = Disabled.
	PitPumpsDisabled Bit 3: Pump4Disabled	Bool	Enabled/disabled state of pump 4. 0 = Enabled 1 = Disabled.
	PitPumpsDisabled Bit 4: Pump5Disabled	Bool	Enabled/disabled state of pump 5. 0 = Enabled 1 = Disabled.
	PitPumpsDisabled Bit 5: Pump6Disabled	Bool	Enabled/disabled state of pump 6. 0 = Enabled 1 = Disabled.
	PitPumpsDisabled Bit 6: MixerDisabled	Bool	Enabled/disabled state of mixer. 0 = Enabled 1 = Disabled.
00206	PitPumpsRunning Bit 0: Pump1Running	Bool	Running state of pump 1. 0 = Not running 1 = Running.
	PitPumpsRunning Bit 1: Pump2Running	Bool	Running state of pump 2. 0 = Not running 1 = Running.
	PitPumpsRunning Bit 2: Pump3Running	Bool	Running state of pump 3. 0 = Not running 1 = Running.
	PitPumpsRunning Bit 3: Pump4Running	Bool	Running state of pump 4. 0 = Not running 1 = Running.
	PitPumpsRunning Bit 4: Pump5Running	Bool	Running state of pump 5. 0 = Not running 1 = Running.
	PitPumpsRunning Bit 5: Pump6Running	Bool	Running state of pump 6. 0 = Not running 1 = Running.
	PitPumpsRunning Bit 6: MixerRunning	Bool	Running state of mixer. 0 = Not running 1 = Running.
00207	PitPumpsMonitoringFault Bit 0: Pump1MonitoringFault	Bool	Fault state of pump 1 monitoring devices, e.g. IO 111. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	PitPumpsMonitoringFault Bit 1: Pump2MonitoringFault	Bool	Fault state of pump 2 monitoring devices, e.g. IO 111. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	PitPumpsMonitoringFault Bit 2: Pump3MonitoringFault	Bool	Fault state of pump 3 monitoring devices, e.g. IO 111. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	PitPumpsMonitoringFault Bit 3: Pump4MonitoringFault	Bool	Fault state of pump 4 monitoring devices, e.g. IO 111. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	PitPumpsMonitoringFault Bit 4: Pump5MonitoringFault	Bool	Fault state of pump 5 monitoring devices, e.g. IO 111. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	PitPumpsMonitoringFault Bit 5: Pump6MonitoringFault	Bool	Fault state of pump 6 monitoring devices, e.g. IO 111. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	PitPumpsMonitoringFault Bit 6: MixerMonitoringFault	Bool	Monitoring fault on mixer 0 = No fault 1 = Fault in auxiliary equipment or sensors.

Address	Register name	Scale	Description
00208	PitPumpsWarning Bit 0: Pump1Warning	Bool	Warning state of pump 1. 0 = No warning 1 = Warning.
	PitPumpsWarning Bit 1: Pump2Warning	Bool	Warning state of pump 2. 0 = No warning 1 = Warning.
	PitPumpsWarning Bit 2: Pump3Warning	Bool	Warning state of pump 3. 0 = No warning 1 = Warning.
	PitPumpsWarning Bit 3: Pump4Warning	Bool	Warning state of pump 4. 0 = No warning 1 = Warning.
	PitPumpsWarning Bit 4: Pump5Warning	Bool	Warning state of pump 5. 0 = No warning 1 = Warning.
	PitPumpsWarning Bit 5: Pump6Warning	Bool	Warning state of pump 6. 0 = No warning 1 = Warning.
	PitPumpsWarning Bit 6: MixerWarning	Bool	Warning state of mixer. 0 = No warning 1 = Warning.
00209	PitPumpsAlarm Bit 0: Pump1Alarm	Bool	Alarm state of pump 1. 0 = No alarm 1 = Alarm.
	PitPumpsAlarm Bit 1: Pump2Alarm	Bool	Alarm state of pump 2. 0 = No alarm 1 = Alarm.
	PitPumpsAlarm Bit 2: Pump3Alarm	Bool	Alarm state of pump 3. 0 = No alarm 1 = Alarm.
	PitPumpsAlarm Bit 3: Pump4Alarm	Bool	Alarm state of pump 4. 0 = No alarm 1 = Alarm.
	PitPumpsAlarm Bit 4: Pump5Alarm	Bool	Alarm state of pump 5. 0 = No alarm 1 = Alarm.
	PitPumpsAlarm Bit 5: Pump6Alarm	Bool	Alarm state of pump 6. 0 = No alarm 1 = Alarm.
	PitPumpsAlarm Bit 6: MixerAlarm	Bool	Alarm state of mixer. 0 = No alarm 1 = Alarm.
00210	PitAlarms1	Bits	Pit alarm events, item 1. Bit-interpreted. See section 11.13 Alarms and warnings
00211	PitAlarms2	Bits	Pit alarm events, item 2. Bit-interpreted. See section 11.13 Alarms and warnings
00212	PitAlarms3	Bits	Pit alarm events, item 3. Bit-interpreted. See section 11.13 Alarms and warnings
00213	PitWarnings1	Bits	Pit warning events, item 1. Bit-interpreted. See section 11.13 Alarms and warnings
00214	PitWarnings2	Bits	Pit warning events, item 2. Bit-interpreted. See section 11.13 Alarms and warnings
00215	PitWarnings3	Bits	Pit warning events, item 3. Bit-interpreted. See section 11.13 Alarms and warnings
00216	EventLogLatestID	Unscaled	ID code of the latest event log.
00217	NumberOfFloatSwitches	enum	Number of installed float switches in the pit (0-5).

Address	Register name	Scale	Description
00218	FloatSwitchesStatus Bit 0: FloatSwitch1Status	Bool	On/off state of float switch 1 (if installed). 0 = Off 1 = On.
	FloatSwitchesStatus Bit 1: FloatSwitch2Status	Bool	On/off state of float switch 2 (if installed). 0 = Off 1 = On.
	FloatSwitchesStatus Bit 2: FloatSwitch3Status	Bool	On/off state of float switch 3 (if installed). 0 = Off 1 = On.
	FloatSwitchesStatus Bit 3: FloatSwitch4Status	Bool	On/off state of float switch 4 (if installed). 0 = Off 1 = On.
	FloatSwitchesStatus Bit 4: FloatSwitch5Status	Bool	On/off state of float switch 5 (if installed). 0 = Off 1 = On.
	FloatSwitchesStatus Bit 5: ExtraOverflowSwitch	Bool	On/off state of extra overflow float switch (if installed). 0 = Off 1 = On.
00219	FloatSwitch1Function	enum	Function of the float switch. 0 = Not used 1 = Dry running 2 = - 3 = Stop of all pumps 4 = Stop 5 = Stop of first pump 6 = Stop of second pump 11 = Start/stop 12 = Start of first pump/stop 13 = Start 14 = Start of first pump 15 = Start of second pump 20 = Start of all pumps 21 = Alarm level 23 = High level.
00220	FloatSwitch2Function	enum	Function of the float switch. 0 = Not used 1 = Dry running 2 = - 3 = Stop of all pumps 4 = Stop 5 = Stop of first pump 6 = Stop of second pump 11 = Start/stop 12 = Start of first pump/stop 13 = Start 14 = Start of first pump 15 = Start of second pump 20 = Start of all pumps 21 = Alarm level 23 = High level.
00221	FloatSwitch3Function	enum	Function of the float switch. 0 = Not used 1 = Dry running 2 = - 3 = Stop of all pumps 4 = Stop 5 = Stop of first pump 6 = Stop of second pump 11 = Start/stop 12 = Start of first pump/stop 13 = Start 14 = Start of first pump 15 = Start of second pump 20 = Start of all pumps 21 = Alarm level 23 = High level.

Address	Register name	Scale	Description
00222	FloatSwitch4Function	enum	Function of the float switch. 0 = Not used 1 = Dry running 2 = - 3 = Stop of all pumps 4 = Stop 5 = Stop of first pump 6 = Stop of second pump 11 = Start/stop 12 = Start of first pump/stop 13 = Start 14 = Start of first pump 15 = Start of second pump 20 = Start of all pumps 21 = Alarm level 23 = High level.
00223	FloatSwitch5Function	enum	Function of the float switch. 0 = Not used 1 = Dry running 2 = - 3 = Stop of all pumps 4 = Stop 5 = Stop of first pump 6 = Stop of second pump 11 = Start/stop 12 = Start of first pump/stop 13 = Start 14 = Start of first pump 15 = Start of second pump 20 = Start of all pumps 21 = Alarm level 23 = High level.
00224	PitSensors Bits 0: UltrasonicLevelControlSensor	Bool	Presence of ultrasonic level control sensor. 0 = Not present 1 = Present.
	PitSensors Bits 1: PressureSensor	Bool	Presence of pressure sensor. 0 = Not present 1 = Present.
	PitSensors Bits 2: FloatSwitches	Bool	Presence of float switches. 0 = Not present 1 = Present.
	PitSensors Bit 3: FlowSensor	Bool	Presence of flow sensor. 0 = Not present 1 = Present.
	PitSensors Bit 4: Power/EnergySensor	Bool	Presence of power or energy sensor. 0 = Not present 1 = Present.
	PitSensors Bit 5: UserDefinedSensor1	Bool	Presence of user-defined sensor, analog input 1. 0 = Not present 1 = Present.
	PitSensors Bit 6: UserDefinedSensor2	Bool	Presence of user-defined sensor, analog input 2. 0 = Not present 1 = Present.
00225	DayCounterZeroTime	enum	Zero time for today and yesterday counters. Range: 0-23 hours.
00226	InterlockTimeout	1 second	Actual interlock timeout value in minutes. A new value can be set in the SetInterlockTimeout (register 00111).
00227	InterlockRemainTime	1 second	Remaining interlock time.
00228	RealTimeClockHI	1 second	The real-time clock in the CU 361 in seconds since midnight January 1st 1970 (UNIX time). See section 11.11 Real-time clock .
00229	RealTimeClockLO		
00230	RtcSecond	1 second	Second of the minute [0; 59]. See section 11.11 Real-time clock .
00231	RtcMinute	1 minute	Minute of the hour [0; 59]. See section 11.11 Real-time clock .
00232	RtcHour	1 hour	Hour of the day [0; 23]. See section 11.11 Real-time clock .
00233	RtcDay	1 day	Day of the month [1; 31]. See section 11.11 Real-time clock .
00234	RtcMonth	1 month	Month of the year [1; 12]. See section 11.11 Real-time clock .

Address	Register name	Scale	Description
00235	RtcYear	1 year	Year [0; 254] = [year 2000; year 2254]. See section 11.11 Real-time clock .
00236	GSMSignalLevelActual	1 %	Actual value of GSM signal level. 254 = Signal level not detectable. 255 = GSM network not available. Note: Only for CIM 250.
00237	GSMSignalLevelAverage	1 %	Average value of GSM signal level. 254 = Signal level not detectable. 255 = GSM network not available. Note: Only for CIM 250.
00238	IPAddressHI	Unscaled	High-order part of IP address (GPRS only). Note: Only for CIM 250.
00239	IPAddressLO	Unscaled	Low-order part of IP address (GPRS only). Note: Only for CIM 250.
00240	OverflowLevel	0.01 m	Level for activation of overflow level alarm.
00241	HighLevel	0.01 m	Level for activation of high-level alarm.
00242	AlarmLevel	0.01 m	Level for activation of alarm level alarm.
00243	DryRunningLevel	0.01 m	Level for activation of dry-running level alarm.
00244	FoamDrainingLevel	0.01 m	Level for foam-draining stop.
00245	StartLevelPump1	0.01 m	Start level for pump 1.
00246	StopLevelPump1	0.01 m	Stop level for pump 1.
00247	StartLevelPump2	0.01 m	Start level for pump 2.
00248	StopLevelPump2	0.01 m	Stop level for pump 2.
00249	StartLevelPump3	0.01 m	Start level for pump 3.
00250	StopLevelPump3	0.01 m	Stop level for pump 3.
00251	StartLevelPump4	0.01 m	Start level for pump 4.
00252	StopLevelPump4	0.01 m	Stop level for pump 4.
00253	StartLevelPump5	0.01 m	Start level for pump 5.
00254	StopLevelPump5	0.01 m	Stop level for pump 5.
00255	StartLevelPump6	0.01 m	Start level for pump 6.
00256	StopLevelPump6	0.01 m	Stop level for pump 6.
00257	FirstGroup2Pump	enum	First pump in group 2. 0 = - 1 = - 2 = Pump 2 3 = Pump 3 4 = Pump 4 5 = Pump 5 6 = Pump 6.
00258	BatteryVoltage	0.1 V	Voltage level on battery.
00259	IOLogic Bit 0: Output1	Bool	Status of logic output 1. 0 = Off 1 = On.
	IOLogic Bit 1: Output2	Bool	Status of logic output 2. 0 = Off 1 = On.
	IOLogic Bit 2: Output3	Bool	Status of logic output 3. 0 = Off 1 = On.
	IOLogic Bit 3: Output4	Bool	Status of logic output 4. 0 = Off 1 = On.
	IOLogic Bit 4: Output5	Bool	Status of logic output 5. 0 = Off 1 = On.
	IOLogic Bit 5: Output6	Bool	Status of logic output 6. 0 = Off 1 = On.
	IOLogic Bit 6: Output7	Bool	Status of logic output 7. 0 = Off 1 = On.
	IOLogic Bit 7: Output8	Bool	Status of logic output 8. 0 = Off 1 = On.
00260	RandomStartLevelBand	0.01 m	Random start level band (first pump only).

Address	Register name	Scale	Description
00261	ActualCurrentMaxAlarmGrp1	0.1 A	Actual current max alarm for group 1
00262	ActualCurrentMinAlarmGrp1	0.1 A	Actual current min alarm for group 1
00263	ActualCurrentMaxWarnGrp1	0.1 A	Actual current max warning for group 1
00264	ActualCurrentMinWarnGrp1	0.1 A	Actual current min warning for group 1
00265	ActualCurrentMaxAlarmGrp2	0.1 A	Actual current max alarm for group 2
00266	ActualCurrentMinAlarmGrp2	0.1 A	Actual current min alarm for group 2
00267	ActualCurrentMaxWarnGrp2	0.1 A	Actual current max warning for group 2
00268	ActualCurrentMinWarnGrp2	0.1 A	Actual current min warning for group 2
00269	PitAlarms4	Bits	Pit alarm events, item 4. Bit-interpreted. See section 11.13 Alarms and warnings
00270	PitWarn4	Bits	Pit warning events, item 4. Bit-interpreted. See section 11.13 Alarms and warnings

9.7 Pit data register block

Registers in this block can be read by means of function codes 0x03 and/or 0x04. It is not possible to write to these registers.

Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

The table below shows for which CU 36X type the registers are supported.

0xFFFF indicates that the data value is not available.

Address	Register name	Scale	Description
00301	PitWaterLevel	0.01 m	Sensor-measured water level in the pit. Requires a level sensor.
00302	PitSwitchWaterLevel	enum	Float-switch-detected water level in the pit. Requires one or more float switches. Valid range: 0-5 (0x0000 - 0x0005).
00303	PitDepth	0.01 m	Depth of the pit.
00304	PitFlowIn	0.1 litre/s	Actual flow into the pit. Requires a flow sensor or flow calculation from level sensor.
00305	PitAverageFlowIn	0.1 litre/s	Average flow into the pit. Requires a flow sensor or flow calculation from level sensor.
00306	PitFlowOut	0.1 litre/s	Actual flow out of the pit. Requires a flow sensor or flow calculation from level sensor.
00307	PitAverageFlowOut	0.1 litre/s	Average flow out of the pit. Requires a flow sensor or flow calculation from level sensor.
00308	PitPowerHI	1 W	Power consumption of the pit. Requires a power sensor or MP 204.
00309	PitPowerLO		
00310	PitEnergyHI	0.1 kWh	Energy consumption of the pit. Requires a power sensor or MP204.
00311	PitEnergyLO		
00312	PitEnergyYesterday	0.1 kWh	Energy consumption of the pit yesterday. Requires a power sensor or MP 204.
00313	PitEnergyToday	0.1 kWh	Energy consumption of the pit today. Requires a power sensor or MP 204.
00314	PitSpecificEnergy	1 Wh/m ³	Specific energy consumption of the pit. Requires a power sensor or MP 204 and a flow sensor.
00315	PitPumpedVolumeHI	0.1 m ³	Total pumped volume. Requires a flow sensor or flow calculation from level sensor.
00316	PitPumpedVolumeLO		
00317	PitPumpedVolumeYesterday	0.1 m ³	Total pumped volume yesterday. Requires a flow sensor or flow calculation from level sensor.
00318	PitPumpedVolumeToday	0.1 m ³	Total pumped volume today. Requires a flow sensor or flow calculation from level sensor.
00319	PitMixerStartsPerHour	Unscaled	Number of mixer starts per hour. Requires the presence of a mixer.
00320	PitOverflowVolume	0.1 m ³	Pit overflow volume. Requires a level sensor.
00321	PitOverflowVolumeYesterday	0.1 m ³	Pit overflow volume yesterday. Requires a level sensor.
00322	PitOverflowVolumeToday	0.1 m ³	Pit overflow volume today. Requires a level sensor.
00323	PitOverflowTime	1 minute	Pit overflow time. Requires a level sensor or float switches.
00324	PitOverflowTimeYesterday	1 minute	Pit overflow time yesterday. Requires a level sensor or float switches.
00325	PitOverflowTimeToday	1 minute	Pit overflow time today. Requires a level sensor or float switches.
00326	PitOverflowCounter	Unscaled	Number of pit overflows. Requires a level sensor or float switches.
00327	PitOverflowCounterYesterday	Unscaled	Number of pit overflows yesterday. Requires a level sensor or float switches.
00328	PitOverflowCounterToday	Unscaled	Number of pit overflows today. Requires a level sensor or float switches.
00329	PitOperatingTimeHI	1 minute	Total pit operating time (power-on time).
00330	PitOperatingTimeLO		
00331	Pit2PumpsOprTimeHI	1 minute	Total operating time (two pumps operating simultaneously).
00332	Pit2PumpsOprTimeLO		
00333	Pit2PumpsOprTimeYesterday	1 minute	Operating time yesterday (two pumps operating simultaneously).
00334	Pit2PumpsOprTimeToday	1 minute	Operating time today (two pumps operating simultaneously).
00335	Pit3PumpsOprTimeHI	1 minute	Total operating time (three pumps operating simultaneously).
00336	Pit3PumpsOprTimeLO		
00337	Pit3PumpsOprTimeYesterday	1 minute	Operating time yesterday (three pumps operating simultaneously).
00338	Pit3PumpsOprTimeToday	1 minute	Operating time today (three pumps operating simultaneously).
00339	Pit4PumpsOprTimeHI	1 minute	Total operating time (four pumps operating simultaneously).
00340	Pit4PumpsOprTimeLO		
00341	Pit4PumpsOprTimeYesterday	1 minute	Operating time yesterday (four pumps operating simultaneously).

Address	Register name	Scale	Description
00342	Pit4PumpsOprTimeToday	1 minute	Operating time today (four pumps operating simultaneously).
00343	Pit5PumpsOprTimeHI	1 minute	Total operating time (five pumps operating simultaneously).
00344	Pit5PumpsOprTimeLO		
00345	Pit5PumpsOprTimeYesterday	1 minute	Operating time yesterday (five pumps operating simultaneously).
00346	Pit5PumpsOprTimeToday	1 minute	Operating time today (five pumps operating simultaneously).
00347	Pit6PumpsOprTimeHI	1 minute	Total operating time (six pumps operating simultaneously).
00348	Pit6PumpsOprTimeLO		
00349	Pit6PumpsOprTimeYesterday	1 minute	Operating time yesterday (six pumps operating simultaneously).
00350	Pit6PumpsOprTimeToday	1 minute	Operating time today (six pumps operating simultaneously).
00351	UserAnalogInput 1	0.1 %	User-defined measurement, analog input 1.
00352	UserAnalogInput 2	0.1 %	User-defined measurement, analog input 2.
00353	UserAnalogInput 3	0.1 %	User-defined measurement, analog input 3.
00354	Pit0PumpsOprTimeHI	1 minute	Total operating time (no pumps operating).
00355	Pit0PumpsOprTimeLO		
00356	Pit0PumpsOprTimeYesterday	1 minute	Operating time yesterday (no pumps operating).
00357	Pit0PumpsOprTimeToday	1 minute	Operating time today (no pumps operating).
00358	Pit1PumpsOprTimeHI	1 minute	Total operating time (one pump operating).
00359	Pit1PumpsOprTimeLO		
00360	Pit1PumpsOprTimeYesterday	1 minute	Operating time yesterday (one pump operating).
00361	Pit1PumpsOprTimeToday	1 minute	Operating time today (one pump operating).
00362	MixerRuntime	1 minute	Runtime for mixer.
00363	MixerStartCounter	Unscaled	Start counter for mixer.
00364	UserDefCounter1	Unscaled	User-defined counter 1
00365	UserDefCounter2	Unscaled	User-defined counter 2
00366	UserDefCounter3	Unscaled	User-defined counter 3
00367	PitOutletPressure	0.001 bar	Outlet pressure of the pit
00368	PitOverflowVolume32bitHI	0.1 m ³	Pit Overflow Volume, 32 bit value
00369	PitOverflowVolume32bitLO	0.1 m ³	Pit Overflow Volume, 32 bit value
00370	PitOverflowTime32bitHI	1 min	Overflow time, 32 bit value
00371	PitOverflowTime32bitLO	1 min	Overflow time, 32 bit value
00372	UserDefCounter1Today	Unscaled	User defined counter 1 today
00373	UserDefCounter2Today	Unscaled	User defined counter 2 today
00374	UserDefCounter3Today	Unscaled	User defined counter 3 today
00375	UserDefCounter1Yesterday	Unscaled	User defined counter 1 Yesterday
00376	UserDefCounter2Yesterday	Unscaled	User defined counter 2 Yesterday
00377	UserDefCounter3Yesterday	Unscaled	User defined counter 3 Yesterday
00378	H2SLevelActual	1 ppm	Actual Hydrogen Sulfide (H2S) level
00379	H2SLevelToday	1 ppm	Average Hydrogen Sulfide (H2S) level today
00380	H2SLevelYesterday	1 ppm	Average Hydrogen Sulfide (H2S) level yesterday
00381	DosingFeedTankLevel	0.01 m	Level in dosing feed tank
00382	DosingVolumeTotalHI	0.001 m ³	Dosed precipitation chemical volume in total
00383	DosingVolumeTotalLO		
00384	DosingVolumeToday	0.001 m ³	Dosed precipitation chemical volume today
00385	DosingVolumeYesterday	0.001 m ³	Dosed precipitation chemical volume yesterday
00386	DosingRefActual	0.1 litre/h	The actual chemical dosing reference (setpoint)

9.8 Pump 1 register block

All register values are read-only, and 0xFFFF indicates that the data value is not available.

Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

Address	Register name	Scale	Description
00401	Pump1Status Bit 0: Presence	Bool	Presence of pump. 0 = Not present 1 = Present.
	Pump1Status Bit 1: Running	Bool	Running state of pump. 0 = Not running 1 = Running.
	Pump1Status Bit 2: MonitoringFault	Bool	Fault state of pump monitoring devices. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	Pump1Status Bit 3: Warning	Bool	Warning state of pump. 0 = No warning 1 = Warning.
	Pump1Status Bit 4: Alarm	Bool	Alarm state of pump. 0 = No alarm 1 = Alarm.
	Pump1Status Bit 5: IO111Present	Bool	Presence of auxiliary equipment IO 111. 0 = Not present 1 = Present.
	Pump1Status Bit 6: IO111Fault	Bool	Fault state of auxiliary equipment IO 111. 0 = No fault 1 = Fault.
	Pump1Status Bit 7: MP204Present	Bool	Presence of auxiliary equipment MP 204. 0 = Not present 1 = Present.
	Pump1Status Bit 8: MP204Fault	Bool	Fault state of auxiliary equipment MP 204. 0 = No fault 1 = Fault.
	Pump1Status Bit 9: CUEPresent	Bool	Presence of auxiliary equipment CUE. 0 = Not present 1 = Present.
	Pump1Status Bit 10: CUEFault	Bool	Fault state of auxiliary equipment CUE. 0 = No fault 1 = Fault.
	Pump1Status Bit 11: PumpDisabled	Bool	Enabled/disabled state of pump. 0 = Enabled 1 = Disabled (e.g. for temporary maintenance).
00402	Pump1ControlSource	enum	Control source of pump. 0 = Auto 1 = Switch 2 = Display 3 = Remote-controlled by bus.
00403	Pump1ConnectionType	enum	Pump connection type. 0 = The pump is controlled from the CU 36X output relay. 1 = The pump is controlled from the IO 351B output relay. 2 = The pump is controlled from the CU 36X and VFD. 3 = The pump is controlled from the IO 351B and VFD.
00404	Pump1OperatingTimeHI	1 minute	Total operating time.
00405	Pump1OperatingTimeLO		
00406	Pump1TimeToServiceHI	1 minute	Time to next service.
00407	Pump1TimeToServiceLO		
00408	Pump1OperatingTimeYesterday	1 minute	Operating time yesterday.
00409	Pump1OperatingTimeToday	1 minute	Operating time today.
00410	Pump1LatestOperatingTime	1 second	Operating time last time it was operated.
00411	Pump1StartCounterHI	Unscaled	Total number of pump starts.
00412	Pump1StartCounterLO		
00413	Pump1StartCounterYesterday	Unscaled	Total number of pump starts yesterday.
00414	Pump1StartCounterToday	Unscaled	Total number of pump starts today.
00415	Pump1StartsPerHour	Unscaled	Number of pump starts within the last hour.
00416	Pump1Flow	0.1 litre/s	Calculated average or measured pump flow.
00417	Pump1LatestFlow	0.1 litre/s	Latest calculated/measured flow (capacity).

Address	Register name	Scale	Description
00418	Pump1Current	0.1 A	Motor current.
00419	Pump1LatestCurrent	0.1 A	Latest motor current.
00420	Pump1Voltage	0.1 V	Voltage.
00421	Pump1Insulation	10 kΩ	Motor insulation resistance.
00422	Pump1WaterInOil	0.1 %	Motor water-in-oil measurement.
00423	Pump1Alarms1	Bits	See section 11.13 Alarms and warnings
00424	Pump1Alarms2	Bits	See section 11.13 Alarms and warnings
00425	Pump1Alarms3	Bits	See section 11.13 Alarms and warnings
00426	Pump1Warnings1	Bits	See section 11.13 Alarms and warnings
00427	Pump1Warnings2	Bits	See section 11.13 Alarms and warnings
00428	Pump1Warnings3	Bits	See section 11.13 Alarms and warnings
00429	Pump1MotorTemperature1	1 °C	Motor temperature 1.
00430	Pump1MotorTemperature2	1 °C	Motor temperature 2.
00431	Pump1PowerHI	1 W	Power consumption.
00432	Pump1PowerLO		
00433	Pump1EnergyHI	0.1 kWh	Energy consumption.
00434	Pump1EnergyLO		
00435	Pump1CosPhi	0.01	Motor cos φ.
00436	Pump1Frequency	0.1 Hz	Motor-applied frequency.
00437	Pump1VFDmode	enum	Mode of variable-frequency drive. 0 = VFD not controlled 1 = - 2 = Stopped 3 = Reverse start 4 = Start flushing 5 = Normal 6 = Run flushing 7 = Stop flushing 8 = Specific-energy test.
00438	Pump1Torque	0.1 Nm	Motor torque.
00439	Pump1iAsym	0.1 %	Line current asymmetry.
00440	Pump1Sensors.WIO Bit 0: WaterInOilSensor	Bool	Presence of water-in-oil (WIO) sensor. 0 = Not present 1 = Present.
	Pump1Sensors.Current Bit 1: MotorCurrentSensor	Bool	Presence of current sensor. 0 = Not present 1 = Present.
00441	Pump1Alarms4	Bits	See section 11.13 Alarms and warnings
00442	Pump1Warnings4	Bits	See section 11.13 Alarms and warnings
00443	Pump1AntiBlockingCounter	Bits	Number of anti blockings in the pump
00444	Pump1AISetpointSelect	enum	Analog input used as setpoint for pump 1: 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00445	Pump1SetpointType	enum	Setpoint type for pump 1: 0 = Fixed value 1 = Analog input
00446	Pump1FeedbackSensorType	enum	Feedback sensor type for pump 1: 4 = Flow rate 5 = Level, pressure 6 = Level, Ultrasound 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00447	Pump1ControlMode	enum	Control mode for pump 1: 0 = Fixed frequency 1 = Linear control 2 = Minimum control 3 = PID control
00448	Pump1ActualSetpoint	1 %	Actual setpoint for pump 1
00449	Pump1FixedFrequency	0.01 Hz	Fixed frequency for pump 1

9.9 Pump 2 register block

All register values are read-only, and 0xFFFF indicates that the data value is not available.

Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

Address	Register name	Scale	Description
00451	Pump2Status Bit 0: Presence	Bool	Presence of pump. 0 = Not present 1 = Present.
	Pump2Status Bit 1: Running	Bool	Running state of pump. 0 = Not running 1 = Running.
	Pump2Status Bit 2: MonitoringFault	Bool	Fault state of pump monitoring devices. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	Pump2Status Bit 3: Warning	Bool	Warning state of pump. 0 = No warning 1 = Warning.
	Pump2Status Bit 4: Alarm	Bool	Alarm state of pump. 0 = No alarm 1 = Alarm.
	Pump2Status Bit 5: IO111Present	Bool	Presence of auxiliary equipment IO 111. 0 = Not present 1 = Present.
	Pump2Status Bit 6: IO111Fault	Bool	Fault state of auxiliary equipment IO 111. 0 = No fault 1 = Fault.
	Pump2Status Bit 7: MP204Present	Bool	Presence of auxiliary equipment MP 204. 0 = Not present 1 = Present.
	Pump2Status Bit 8: MP204Fault	Bool	Fault state of auxiliary equipment MP 204. 0 = No fault 1 = Fault.
	Pump2Status Bit 9: CUEPresent	Bool	Presence of auxiliary equipment CUE. 0 = Not present 1 = Present.
	Pump2Status Bit 10: CUEFault	Bool	Fault state of auxiliary equipment CUE. 0 = No fault 1 = Fault.
Pump2Status Bit 11: PumpDisabled	Bool	Enabled/disabled state of pump. 0 = Enabled 1 = Disabled (e.g. for temporary maintenance).	
00452	Pump2ControlSource	enum	Control source of pump. 0 = Auto 1 = Switch 2 = Display 3 = Remote-controlled by bus.
00453	Pump2ConnectionType	enum	Pump connection type. 0 = The pump is controlled from the CU 36X output relay. 1 = The pump is controlled from the IO 351B output relay. 2 = The pump is controlled from the CU 36X and VFD. 3 = The pump is controlled from the IO 351B and VFD.
00454	Pump2OperatingTimeHI	1 minute	Total operating time.
00455	Pump2OperatingTimeLO		
00456	Pump2TimeToServiceHI	1 minute	Time to next service.
00457	Pump2TimeToServiceLO		
00458	Pump2OperatingTimeYesterday	1 minute	Operating time yesterday.
00459	Pump2OperatingTimeToday	1 minute	Operating time today.
00460	Pump2LatestOperatingTime	1 second	Operating time last time it was operated.
00461	Pump2StartCounterHI	Unscaled	Total number of pump starts.
00462	Pump2StartCounterLO		
00463	Pump2StartCounterYesterday	Unscaled	Total number of pump starts yesterday.
00464	Pump2StartCounterToday	Unscaled	Total number of pump starts today.
00465	Pump2StartsPerHour	Unscaled	Number of pump starts within the last hour.
00466	Pump2Flow	0.1 litre/s	Calculated average or measured pump flow.
00467	Pump2LatestFlow	0.1 litre/s	Latest calculated/measured flow (capacity).

Address	Register name	Scale	Description
00468	Pump2Current	0.1 A	Motor current.
00469	Pump2LatestCurrent	0.1 A	Latest motor current.
00470	Pump2Voltage	0.1 V	Voltage.
00471	Pump2Insulation	10 kΩ	Motor insulation resistance.
00472	Pump2WaterInOil	0.1 %	Motor water-in-oil measurement.
00473	Pump2Alarms1	Bits	See section 11.13 Alarms and warnings
00474	Pump2Alarms2	Bits	See section 11.13 Alarms and warnings
00475	Pump2Alarms3	Bits	See section 11.13 Alarms and warnings
00476	Pump2Warnings1	Bits	See section 11.13 Alarms and warnings
00477	Pump2Warnings2	Bits	See section 11.13 Alarms and warnings
00478	Pump2Warnings3	Bits	See section 11.13 Alarms and warnings
00479	Pump2MotorTemperature1	1 °C	Motor temperature 1.
00480	Pump2MotorTemperature2	1 °C	Motor temperature 2.
00481	Pump2PowerHI	1 W	Power consumption.
00482	Pump2PowerLO		
00483	Pump2EnergyHI	0.1 kWh	Energy consumption.
00484	Pump2EnergyLO		
00485	Pump2CosPhi	0.01	Motor cos φ.
00486	Pump2Frequency	0.1 Hz	Motor-applied frequency.
00487	Pump2VFDmode	enum	Mode of variable-frequency drive. 0 = VFD not controlled 1 = - 2 = Stopped 3 = Reverse start 4 = Start flushing 5 = Normal 6 = Run flushing 7 = Stop flushing 8 = Specific-energy test.
00488	Pump2Torque	0.1 Nm	Motor torque.
00489	Pump2Asym	0.1 %	Line current asymmetry.
00490	Pump2Sensors.WIO Bit 0: WaterInOilSensor	Bool	Presence of water-in-oil (WIO) sensor. 0 = Not present 1 = Present.
	Pump2Sensors.Current Bit 1: MotorCurrentSensor	Bool	Presence of current sensor. 0 = Not present 1 = Present.
00491	Pump2Alarms4	Bits	See section 11.13 Alarms and warnings
00492	Pump2Warnings4	Bits	See section 11.13 Alarms and warnings
00493	Pump2AntiBlockingCounter	Bits	Number of anti blockings in the pump
00494	Pump2AISetpointSelect	enum	Analog input used as setpoint for pump 2: 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00495	Pump2SetpointType	enum	Setpoint type for pump 2: 0 = Fixed value 1 = Analog input
00496	Pump2FeedbackSensorType	enum	Feedback sensor type for pump 2: 4 = Flow rate 5 = Level, pressure 6 = Level, ultrasound 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00497	Pump2ControlMode	enum	Control mode for pump 2: 0 = Fixed frequency 1 = Linear control 2 = Minimum control 3 = PID control
00498	Pump2ActualSetpoint	1 %	Actual setpoint for pump 2
00499	Pump2FixedFrequency	0.01 Hz	Fixed frequency for pump 2

9.10 Pump 3 register block

All register values are read-only, and 0xFFFF indicates that the data value is not available.

Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

Address	Register name	Scale	Description
00501	Pump3Status Bit 0: Presence	Bool	Presence of pump. 0 = Not present 1 = Present.
	Pump3Status Bit 1: Running	Bool	Running state of pump. 0 = Not running 1 = Running.
	Pump3Status Bit 2: MonitoringFault	Bool	Fault state of pump monitoring devices. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	Pump3Status Bit 3: Warning	Bool	Warning state of pump. 0 = No warning 1 = Warning.
	Pump3Status Bit 4: Alarm	Bool	Alarm state of pump. 0 = No alarm 1 = Alarm.
	Pump3Status Bit 5: IO111Present	Bool	Presence of auxiliary equipment IO 111. 0 = Not present 1 = Present.
	Pump3Status Bit 6: IO111Fault	Bool	Fault state of auxiliary equipment IO 111. 0 = No fault 1 = Fault.
	Pump3Status Bit 7: MP204Present	Bool	Presence of auxiliary equipment MP 204. 0 = Not present 1 = Present.
	Pump3Status Bit 8: MP204Fault	Bool	Fault state of auxiliary equipment MP 204. 0 = No fault 1 = Fault.
	Pump3Status Bit 9: CUEPresent	Bool	Presence of auxiliary equipment CUE. 0 = Not present 1 = Present.
	Pump3Status Bit 10: CUEFault	Bool	Fault state of auxiliary equipment CUE. 0 = No fault 1 = Fault.
Pump3Status Bit 11: PumpDisabled	Bool	Enabled/disabled state of pump. 0 = Enabled 1 = Disabled (e.g. for temporary maintenance).	
00502	Pump3ControlSource	enum	Control source of pump. 0 = Auto 1 = Switch 2 = Display 3 = Remote-controlled by bus.
00503	Pump3ConnectionType	enum	Pump connection type. 0 = The pump is controlled from the CU 36X output relay. 1 = The pump is controlled from the IO 351B output relay. 2 = The pump is controlled from the CU 36X and VFD. 3 = The pump is controlled from the IO 351B and VFD.
00504	Pump3OperatingTimeHI	1 minute	Total operating time.
00505	Pump3OperatingTimeLO		
00506	Pump3TimeToServiceHI	1 minute	Time to next service.
00507	Pump3TimeToServiceLO		
00508	Pump3OperatingTimeYesterday	1 minute	Operating time yesterday.
00509	Pump3OperatingTimeToday	1 minute	Operating time today.
00510	Pump3LatestOperatingTime	1 second	Operating time last time it was operated.
00511	Pump3StartCounterHI	Unscaled	Total number of pump starts.
00512	Pump3StartCounterLO		
00513	Pump3StartCounterYesterday	Unscaled	Total number of pump starts yesterday.
00514	Pump3StartCounterToday	Unscaled	Total number of pump starts today.
00515	Pump3StartsPerHour	Unscaled	Number of pump starts within the last hour.
00516	Pump3Flow	0.1 litre/s	Calculated average or measured pump flow.
00517	Pump3LatestFlow	0.1 litre/s	Latest calculated/measured flow (capacity).

Address	Register name	Scale	Description
00518	Pump3Current	0.1 A	Motor current.
00519	Pump3LatestCurrent	0.1 A	Latest motor current.
00520	Pump3Voltage	0.1 V	Voltage.
00521	Pump3Insulation	10 kΩ	Motor insulation resistance.
00522	Pump3WaterInOil	0.1 %	Motor water-in-oil measurement.
00523	Pump3Alarms1	Bits	See section 11.13 Alarms and warnings
00524	Pump3Alarms2	Bits	See section 11.13 Alarms and warnings
00525	Pump3Alarms3	Bits	See section 11.13 Alarms and warnings
00526	Pump3Warnings1	Bits	See section 11.13 Alarms and warnings
00527	Pump3Warnings2	Bits	See section 11.13 Alarms and warnings
00528	Pump3Warnings3	Bits	See section 11.13 Alarms and warnings
00529	Pump3MotorTemperature1	1 °C	Motor temperature 1.
00530	Pump3MotorTemperature2	1 °C	Motor temperature 2.
00531	Pump3PowerHI	1 W	Power consumption.
00532	Pump3PowerLO		
00533	Pump3EnergyHI	0.1 kWh	Energy consumption.
00534	Pump3EnergyLO		
00535	Pump3CosPhi	0.01	Motor cos φ.
00536	Pump3Frequency	0.1 Hz	Motor-applied frequency.
00537	Pump3VFDmode	enum	Mode of variable-frequency drive. 0 = VFD not controlled 1 = - 2 = Stopped 3 = Reverse start 4 = Start flushing 5 = Normal 6 = Run flushing 7 = Stop flushing 8 = Specific-energy test.
00538	Pump3Torque	0.1 Nm	Motor torque.
00539	Pump3Asym	0.1 %	Line current asymmetry.
00540	Pump3Sensors.WIO Bit 0: WaterInOilSensor	Bool	Presence of water-in-oil (WIO) sensor. 0 = Not present 1 = Present.
	Pump3Sensors.Current Bit 1: MotorCurrentSensor	Bool	Presence of current sensor. 0 = Not present 1 = Present.
00541	Pump3Alarms4	Bits	See section 11.13 Alarms and warnings
00542	Pump3Warnings4	Bits	See section 11.13 Alarms and warnings
00543	Pump3AntiBlockingCounter	Bits	Number of anti blockings in the pump
00544	Pump3AISetpointSelect	enum	Analog input used as setpoint for pump 3: 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00545	Pump3SetpointType	enum	Setpoint type for pump 3: 0 = Fixed value 1 = Analog input
00546	Pump3FeedbackSensorType	enum	Feedback sensor type for pump 3: 4 = Flow rate 5 = Level, pressure 6 = Level, ultrasound 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00547	Pump3ControlMode	enum	Control mode for pump 3: 0 = Fixed frequency 1 = Linear control 2 = Minimum control 3 = PID control
00548	Pump3ActualSetpoint	1 %	Actual setpoint for pump 3
00549	Pump3FixedFrequency	0.01 Hz	Fixed frequency for pump 3

9.11 Pump 4 register block

All register values are read-only, and 0xFFFF indicates that the data value is not available.

Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

Address	Register name	Scale	Description
00551	Pump4Status Bit 0: Presence	Bool	Presence of pump. 0 = Not present 1 = Present.
	Pump4Status Bit 1: Running	Bool	Running state of pump. 0 = Not running 1 = Running.
	Pump4Status Bit 2: MonitoringFault	Bool	Fault state of pump monitoring devices. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	Pump4Status Bit 3: Warning	Bool	Warning state of pump. 0 = No warning 1 = Warning.
	Pump4Status Bit 4: Alarm	Bool	Alarm state of pump. 0 = No alarm 1 = Alarm.
	Pump4Status Bit 5: IO111Present	Bool	Presence of auxiliary equipment IO 111. 0 = Not present 1 = Present.
	Pump4Status Bit 6: IO111Fault	Bool	Fault state of auxiliary equipment IO 111. 0 = No fault 1 = Fault.
	Pump4Status Bit 7: MP204Present	Bool	Presence of auxiliary equipment MP 204. 0 = Not present 1 = Present.
	Pump4Status Bit 8: MP204Fault	Bool	Fault state of auxiliary equipment MP 204. 0 = No fault 1 = Fault.
	Pump4Status Bit 9: CUEPresent	Bool	Presence of auxiliary equipment CUE. 0 = Not present 1 = Present.
	Pump4Status Bit 10: CUEFault	Bool	Fault state of auxiliary equipment CUE. 0 = No fault 1 = Fault.
	Pump4Status Bit 11: PumpDisabled	Bool	Enabled/disabled state of pump. 0 = Enabled 1 = Disabled (e.g. for temporary maintenance).
00552	Pump4ControlSource	enum	Control source of pump. 0 = Auto 1 = Switch 2 = Display 3 = Remote-controlled by bus.
00553	Pump4ConnectionType	enum	Pump connection type. 0 = The pump is controlled from the CU 36X output relay. 1 = The pump is controlled from the IO 351B output relay. 2 = The pump is controlled from the CU 36X and VFD. 3 = The pump is controlled from the IO 351B and VFD.
00554	Pump4OperatingTimeHI	1 minute	Total operating time.
00555	Pump4OperatingTimeLO		
00556	Pump4TimeToServiceHI	1 minute	Time to next service.
00557	Pump4TimeToServiceLO		
00558	Pump4OperatingTimeYesterday	1 minute	Operating time yesterday.
00559	Pump4OperatingTimeToday	1 minute	Operating time today.
00560	Pump4LatestOperatingTime	1 second	Operating time last time it was operated.
00561	Pump4StartCounterHI	Unscaled	Total number of pump starts.
00562	Pump4StartCounterLO		
00563	Pump4StartCounterYesterday	Unscaled	Total number of pump starts yesterday.
00564	Pump4StartCounterToday	Unscaled	Total number of pump starts today.
00565	Pump4StartsPerHour	Unscaled	Number of pump starts within the last hour.
00566	Pump4Flow	0.1 litre/s	Calculated average or measured pump flow.
00567	Pump4LatestFlow	0.1 litre/s	Latest calculated/measured flow (capacity).

Address	Register name	Scale	Description
00568	Pump4Current	0.1 A	Motor current.
00569	Pump4LatestCurrent	0.1 A	Latest motor current.
00570	Pump4Voltage	0.1 V	Voltage.
00571	Pump4Insulation	10 kΩ	Motor insulation resistance.
00572	Pump4WaterInOil	0.1 %	Motor water-in-oil measurement.
00573	Pump4Alarms1	Bits	See section 11.13 Alarms and warnings
00574	Pump4Alarms2	Bits	See section 11.13 Alarms and warnings
00575	Pump4Alarms3	Bits	See section 11.13 Alarms and warnings
00576	Pump4Warnings1	Bits	See section 11.13 Alarms and warnings
00577	Pump4Warnings2	Bits	See section 11.13 Alarms and warnings
00578	Pump4Warnings3	Bits	See section 11.13 Alarms and warnings
00579	Pump4MotorTemperature1	1 °C	Motor temperature 1.
00580	Pump4MotorTemperature2	1 °C	Motor temperature 2.
00581	Pump4PowerHI	1 W	Power consumption.
00582	Pump4PowerLO		
00583	Pump4EnergyHI	0.1 kWh	Energy consumption.
00584	Pump4EnergyLO		
00585	Pump4CosPhi	0.01	Motor cos φ.
00586	Pump4Frequency	0.1 Hz	Motor-applied frequency.
00587	Pump4VFDmode	enum	Mode of variable-frequency drive. 0 = VFD not controlled 1 = - 2 = Stopped 3 = Reverse start 4 = Start flushing 5 = Normal 6 = Run flushing 7 = Stop flushing 8 = Specific-energy test.
00588	Pump4Torque	0.1 Nm	Motor torque.
00589	Pump4Asym	0.1 %	Line current asymmetry.
00590	Pump4Sensors.WIO Bit 0: WaterInOilSensor	Bool	Presence of water-in-oil (WIO) sensor. 0 = Not present 1 = Present.
	Pump4Sensors.Current Bit 1: MotorCurrentSensor	Bool	Presence of current sensor. 0 = Not present 1 = Present.
00591	Pump4Alarms4	Bits	See section 11.13 Alarms and warnings
00592	Pump4Warnings4	Bits	See section 11.13 Alarms and warnings
00593	Pump4AntiBlockingCounter	Bits	Number of anti blockings in the pump
00594	Pump4AISetpointSelect	enum	Analog input used as setpoint for pump 4: 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00595	Pump4SetpointType	enum	Setpoint type for pump 4: 0 = Fixed value 1 = Analog input
00596	Pump4FeedbackSensorType	enum	Feedback sensor type for pump 4: 4 = Flow rate 5 = Level, pressure 6 = Level, ultrasound 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00597	Pump4ControlMode	enum	Control mode for pump 4: 0 = Fixed frequency 1 = Linear control 2 = Minimum control 3 = PID control
00598	Pump4ActualSetpoint	1 %	Actual setpoint for pump 4
00599	Pump4FixedFrequency	0.01 Hz	Fixed frequency for pump 4

9.12 Pump 5 register block

All register values are read-only, and 0xFFFF indicates that the data value is not available.

Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

Address	Register name	Scale	Description
00601	Pump5Status Bit 0: Presence	Bool	Presence of pump. 0 = Not present 1 = Present.
	Pump5Status Bit 1: Running	Bool	Running state of pump. 0 = Not running 1 = Running.
	Pump5Status Bit 2: MonitoringFault	Bool	Fault state of pump monitoring devices. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	Pump5Status Bit 3: Warning	Bool	Warning state of pump. 0 = No warning 1 = Warning.
	Pump5Status Bit 4: Alarm	Bool	Alarm state of pump. 0 = No alarm 1 = Alarm.
	Pump5Status Bit 5: IO111Present	Bool	Presence of auxiliary equipment IO 111. 0 = Not present 1 = Present.
	Pump5Status Bit 6: IO111Fault	Bool	Fault state of auxiliary equipment IO 111. 0 = No fault 1 = Fault.
	Pump5Status Bit 7: MP204Present	Bool	Presence of auxiliary equipment MP 204. 0 = Not present 1 = Present.
	Pump5Status Bit 8: MP204Fault	Bool	Fault state of auxiliary equipment MP 204. 0 = No fault 1 = Fault.
	Pump5Status Bit 9: CUEPresent	Bool	Presence of auxiliary equipment CUE. 0 = Not present 1 = Present.
	Pump5Status Bit 10: CUEFault	Bool	Fault state of auxiliary equipment CUE. 0 = No fault 1 = Fault.
	Pump5Status Bit 11: PumpDisabled	Bool	Enabled/disabled state of pump. 0 = Enabled 1 = Disabled (e.g. for temporary maintenance).
00602	Pump5ControlSource	enum	Control source of pump. 0 = Auto 1 = Switch 2 = Display 3 = Remote-controlled by bus.
00603	Pump5ConnectionType	enum	Pump connection type. 0 = The pump is controlled from the CU 36X output relay. 1 = The pump is controlled from the IO 351B output relay. 2 = The pump is controlled from the CU 36X and VFD. 3 = The pump is controlled from the IO 351B and VFD.
00604	Pump5OperatingTimeHI	1 minute	Total operating time.
00605	Pump5OperatingTimeLO		
00606	Pump5TimeToServiceHI	1 minute	Time to next service.
00607	Pump5TimeToServiceLO		
00608	Pump5OperatingTimeYesterday	1 minute	Operating time yesterday.
00609	Pump5OperatingTimeToday	1 minute	Operating time today.
00610	Pump5LatestOperatingTime	1 second	Operating time last time it was operated.
00611	Pump5StartCounterHI	Unscaled	Total number of pump starts.
00612	Pump5StartCounterLO		
00613	Pump5StartCounterYesterday	Unscaled	Total number of pump starts yesterday.
00614	Pump5StartCounterToday	Unscaled	Total number of pump starts today.
00615	Pump5StartsPerHour	Unscaled	Number of pump starts within the last hour.
00616	Pump5Flow	0.1 litre/s	Calculated average or measured pump flow.
00617	Pump5LatestFlow	0.1 litre/s	Latest calculated/measured flow (capacity).

Address	Register name	Scale	Description
00618	Pump5Current	0.1 A	Motor current.
00619	Pump5LatestCurrent	0.1 A	Latest motor current.
00620	Pump5Voltage	0.1 V	Voltage.
00621	Pump5Insulation	10 kΩ	Motor insulation resistance.
00622	Pump5WaterInOil	0.1 %	Motor water-in-oil measurement.
00623	Pump5Alarms1	Bits	See section 11.13 Alarms and warnings
00624	Pump5Alarms2	Bits	See section 11.13 Alarms and warnings
00625	Pump5Alarms3	Bits	See section 11.13 Alarms and warnings
00626	Pump5Warnings1	Bits	See section 11.13 Alarms and warnings
00627	Pump5Warnings2	Bits	See section 11.13 Alarms and warnings
00628	Pump5Warnings3	Bits	See section 11.13 Alarms and warnings
00629	Pump5MotorTemperature1	1 °C	Motor temperature 1.
00630	Pump5MotorTemperature2	1 °C	Motor temperature 2.
00631	Pump5PowerHI	1 W	Power consumption.
00632	Pump5PowerLO		
00633	Pump5EnergyHI	0.1 kWh	Energy consumption.
00634	Pump5EnergyLO		
00635	Pump5CosPhi	0.01	Motor cos φ.
00636	Pump5Frequency	0.1 Hz	Motor-applied frequency.
00637	Pump5VFDmode	enum	Mode of variable-frequency drive. 0 = VFD not controlled 1 = - 2 = Stopped 3 = Reverse start 4 = Start flushing 5 = Normal 6 = Run flushing 7 = Stop flushing 8 = Specific-energy test.
00638	Pump5Torque	0.1 Nm	Motor torque.
00639	Pump5Asym	0.1 %	Line current asymmetry.
00640	Pump5Sensors.WIO Bit 0: WaterInOilSensor	Bool	Presence of water-in-oil (WIO) sensor. 0 = Not present 1 = Present.
	Pump5Sensors.Current Bit 1: MotorCurrentSensor	Bool	Presence of current sensor. 0 = Not present 1 = Present.
00641	Pump5Alarms4	Bits	See section 11.13 Alarms and warnings
00642	Pump5Warnings4	Bits	See section 11.13 Alarms and warnings
00643	Pump5AntiBlockingCounter	Bits	Number of anti blockings in the pump
00644	Pump5AISetpointSelect	enum	Analog input used as setpoint for pump 5: 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00645	Pump5SetpointType	enum	Setpoint type for pump 5: 0 = Fixed value 1 = Analog input
00646	Pump5FeedbackSensorType	enum	Feedback sensor type for pump 5: 4 = Flow rate 5 = Level, pressure 6 = Level, ultrasound 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00647	Pump5ControlMode	enum	Control mode for pump 5: 0 = Fixed frequency 1 = Linear control 2 = Minimum control 3 = PID control
00648	Pump5ActualSetpoint	1 %	Actual setpoint for pump 5
00649	Pump5FixedFrequency	0.01 Hz	Fixed frequency for pump 5

9.13 Pump 6 register block

All register values are read-only, and 0xFFFF indicates that the data value is not available.

Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

Address	Register name	Scale	Description
00651	Pump6Status Bit 0: Presence	Bool	Presence of pump. 0 = Not present 1 = Present.
	Pump6Status Bit 1: Running	Bool	Running state of pump. 0 = Not running 1 = Running.
	Pump6Status Bit 2: MonitoringFault	Bool	Fault state of pump monitoring devices. 0 = No fault 1 = Fault in auxiliary equipment or sensors.
	Pump6Status Bit 3: Warning	Bool	Warning state of pump. 0 = No warning 1 = Warning.
	Pump6Status Bit 4: Alarm	Bool	Alarm state of pump. 0 = No alarm 1 = Alarm.
	Pump6Status Bit 5: IO111Present	Bool	Presence of auxiliary equipment IO 111. 0 = Not present 1 = Present.
	Pump6Status Bit 6: IO111Fault	Bool	Fault state of auxiliary equipment IO 111. 0 = No fault 1 = Fault.
	Pump6Status Bit 7: MP204Present	Bool	Presence of auxiliary equipment MP 204. 0 = Not present 1 = Present.
	Pump6Status Bit 8: MP204Fault	Bool	Fault state of auxiliary equipment MP 204. 0 = No fault 1 = Fault.
	Pump6Status Bit 9: CUEPresent	Bool	Presence of auxiliary equipment CUE. 0 = Not present 1 = Present.
	Pump6Status Bit 10: CUEFault	Bool	Fault state of auxiliary equipment CUE. 0 = No fault 1 = Fault.
	Pump6Status Bit 11: PumpDisabled	Bool	Enabled/disabled state of pump. 0 = Enabled 1 = Disabled (e.g. for temporary maintenance).
00652	Pump6ControlSource	enum	Control source of pump. 0 = Auto 1 = Switch 2 = Display 3 = Remote-controlled by bus.
00653	Pump6ConnectionType	enum	Pump connection type. 0 = The pump is controlled from the CU 36X output relay. 1 = The pump is controlled from the IO 351B output relay. 2 = The pump is controlled from the CU 36X and VFD. 3 = The pump is controlled from the IO 351B and VFD.
00654	Pump6OperatingTimeHI	1 minute	Total operating time.
00655	Pump6OperatingTimeLO		
00656	Pump6TimeToServiceHI	1 minute	Time to next service.
00657	Pump6TimeToServiceLO		
00658	Pump6OperatingTimeYesterday	1 minute	Operating time yesterday.
00659	Pump6OperatingTimeToday	1 minute	Operating time today.
00660	Pump6LatestOperatingTime	1 second	Operating time last time it was operated.
00661	Pump6StartCounterHI	Unscaled	Total number of pump starts.
00662	Pump6StartCounterLO		
00663	Pump6StartCounterYesterday	Unscaled	Total number of pump starts yesterday.
00664	Pump6StartCounterToday	Unscaled	Total number of pump starts today.
00665	Pump6StartsPerHour	Unscaled	Number of pump starts within the last hour.
00666	Pump6Flow	0.1 litre/s	Calculated average or measured pump flow.
00667	Pump6LatestFlow	0.1 litre/s	Latest calculated/measured flow (capacity).

Address	Register name	Scale	Description
00668	Pump6Current	0.1 A	Motor current.
00669	Pump6LatestCurrent	0.1 A	Latest motor current.
00670	Pump6Voltage	0.1 V	Voltage.
00671	Pump6Insulation	10 kΩ	Motor insulation resistance.
00672	Pump6WaterInOil	0.1 %	Motor water-in-oil measurement.
00673	Pump6Alarms1	Bits	See section 11.13 Alarms and warnings
00674	Pump6Alarms2	Bits	See section 11.13 Alarms and warnings
00675	Pump6Alarms3	Bits	See section 11.13 Alarms and warnings
00676	Pump6Warnings1	Bits	See section 11.13 Alarms and warnings
00677	Pump6Warnings2	Bits	See section 11.13 Alarms and warnings
00678	Pump6Warnings3	Bits	See section 11.13 Alarms and warnings
00679	Pump6MotorTemperature1	1 °C	Motor temperature 1.
00680	Pump6MotorTemperature2	1 °C	Motor temperature 2.
00681	Pump6PowerHI	1 W	Power consumption.
00682	Pump6PowerLO		
00683	Pump6EnergyHI	0.1 kWh	Energy consumption.
00684	Pump6EnergyLO		
00685	Pump6CosPhi	0.01	Motor cos φ.
00686	Pump6Frequency	0.1 Hz	Motor-applied frequency.
00687	Pump6VFDmode	enum	Mode of variable-frequency drive. 0 = VFD not controlled 1 = - 2 = Stopped 3 = Reverse start 4 = Start flushing 5 = Normal 6 = Run flushing 7 = Stop flushing 8 = Specific-energy test.
00688	Pump6Torque	0.1 Nm	Motor torque.
00689	Pump6Asym	0.1 %	Line current asymmetry.
00690	Pump6Sensors.WIO Bit 0: WaterInOilSensor	Bool	Presence of water-in-oil (WIO) sensor. 0 = Not present 1 = Present.
	Pump6Sensors.Current Bit 1: MotorCurrentSensor	Bool	Presence of current sensor. 0 = Not present 1 = Present.
00691	Pump6Alarms4	Bits	See section 11.13 Alarms and warnings
00692	Pump6Warnings4	Bits	See section 11.13 Alarms and warnings
00693	Pump6AntiBlockingCounter	Bits	Number of anti blockings in the pump
00694	Pump6AISetpointSelect	enum	Analog input used as setpoint for pump 6: 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00695	Pump6SetpointType	enum	Setpoint type for pump 6: 0 = Fixed value 1 = Analog input
00696	Pump6FeedbackSensorType	enum	Feedback sensor type for pump 6: 4 = Flow rate 5 = Level, pressure 6 = Level, ultrasound 13 = User defined sensor 1 14 = User defined sensor 2 15 = User defined sensor 3
00697	Pump6ControlMode	enum	Control mode for pump 6: 0 = Fixed frequency 1 = Linear control 2 = Minimum control 3 = PID control
00698	Pump6ActualSetpoint	1 %	Actual setpoint for pump 6
00699	Pump6FixedFrequency	0.01 Hz	Fixed frequency for pump 6

9.14 Alarm simulation register block

Address	Register name	Scale	Description
00701	SimulationEventCode	enum	Event code to simulate.
00702	SimulationEventSource	enum	Event source to simulate.
00703	SimulationEventDeviceNo	enum	Event device number to simulate.
00704	SimulationEventActionType	enum	0 = Warning 1 = Alarm 2 = Disabled.
00705	SimulationActivate	Bool	Activation of simulation features. 0 = Deactivate simulation 1 = Activate simulation.
00706	SimulationStatus Bit 0: SimulationActive	Bool	State of simulation. 0 = Not active 1 = Active.

9.15 User register block

Address	Register name	Scale	Description
00751-00800	UserRegisters	Unscaled	This area is for device labelling by the user. Neither the CU 36X nor the CIM will modify this area. The user area values are stored in the device and will remain after a power-off.

9.16 Name string register block

Address	Register name	Scale	Description
00801-00920	NameRegisterArea	UTF-8 chars.	Name string read from the Dedicated Controls CU 36X. UTF-8 is a variable-length character encoding for Unicode. It can represent any character in the Unicode standard. It may take up to 60 seconds for a change to be visible.

9.17 Hour log register block

Generally the Modbus master application can select the relevant log series and the relevant number of hours back in time. Typically several communication sessions (request telegrams) are needed to read the data.

The communication interface ensures that logged data is protected against internal update during the time it is accessed from Modbus, so that the Hour log constitutes a time-consistent block (data coherency). Every time the real-time clock increments by one hour, all the logged data in the hour log is shifted one hour back in time (and the oldest data set is cleared). The exact time where this happens will be delayed a few seconds relative to the hour incrementation, so to be sure to read hour log data that has been correctly updated, we recommend reading data at least 30 seconds after the hour incrementation.

Address	Register name	Scale	Description
02001-02072	PitOverflowTimeHourLog1...72	1 minute	Pit, incremental overflow time, hour log 1...72.
02073-02144	PitOverflowCntHourLog1...72	Unscaled	Pit, incremental number of overflows, hour log 1...72.
02145-02216	PitOverflowVolumeHourLog1...72	0.1 m ³	Pit, incremental overflow volume, hour log 1...72.
02217-02288	PitSpecificEnergyHourLog1...72	1 Wh/m ³	Pit, specific energy, hour log 1...72.
02289-02360	PitVolumeHourLog1...72	0.1 m ³	Pit, incremental pumped volume, hour log 1...72.
02361-02432	PitEnergyHourLog1...72	0.1 kWh	Pit, incremental energy consumption, hour log 1...72.
02433-02504	Pit2PumpsOprTimeHourLog1...72	1 minute	Pit, incremental operating time (two pumps operating simultaneously), hour log 1...72.
02505-02576	Pit3PumpsOprTimeHourLog1...72	1 minute	Pit, incremental operating time (three pumps operating simultaneously), hour log 1...72.
02577-02648	Pit4PumpsOprTimeHourLog1...72	1 minute	Pit, incremental operating time (four pumps operating simultaneously), hour log 1...72.
02649-02720	Pit5PumpsOprTimeHourLog1...72	1 minute	Pit, incremental operating time (five pumps operating simultaneously), hour log 1...72.
02721-02792	Pit6PumpsOprTimeHourLog1...72	1 minute	Pit, incremental operating time (six pumps operating simultaneously), hour log 1...72.
02793-02864	Pump1OprTimeHourLog1...72	1 minute	Pump 1, incremental operating time, hour log 1...72.
02865-02936	Pump1StartCntHourLog1...72	Unscaled	Pump 1, incremental number of starts, hour log 1...72.
02937-03008	Pump1AvgFlowHourLog1...72	0.1 litre/s	Pump 1, average flow, hour log 1...72.
03009-03080	Pump1AvgCurrentHourLog1...72	0.1 A	Pump 1, average current, hour log 1...72.
03081-03152	Pump2OprTimeHourLog1...72	1 minute	Pump 2, incremental operating time, hour log 1...72.
03153-03224	Pump2StartCntHourLog1...72	Unscaled	Pump 2, incremental number of starts, hour log 1...72.
03225-03296	Pump2AvgFlowHourLog1...72	0.1 litre/s	Pump 2, average flow, hour log 1...72.
03297-03368	Pump2AvgCurrentHourLog1...72	0.1 A	Pump 2, average current, hour log 1...72.
03369-03440	Pump3OprTimeHourLog1...72	1 minute	Pump 3, incremental operating time, hour log 1...72.
03441-03512	Pump3StartCntHourLog1...72	Unscaled	Pump 3, incremental number of starts, hour log 1...72.
03513-03584	Pump3AvgFlowHourLog1...72	0.1 litre/s	Pump 3, average flow, hour log 1...72.
03585-03656	Pump3AvgCurrentHourLog...72	0.1 A	Pump 3, average current, hour log 1...72.
03657-03728	Pump4OprTimeHourLog1...72	1 minute	Pump 4, incremental operating time, hour log 1...72.
03729-03800	Pump4StartCntHourLog1...72	Unscaled	Pump 4, incremental number of starts, hour log 1...72.
03801-03872	Pump4AvgFlowHourLog1...72	0.1 litre/s	Pump 4, average flow, hour log 1...72.
03873-03944	Pump4AvgCurrentHourLog...72	0.1 A	Pump 4, average current, hour log 1...72.
03945-04016	Pump5OprTimeHourLog1...72	1 minute	Pump 5, incremental operating time, hour log 1...72.
04017-04088	Pump5StartCntHourLog1...72	Unscaled	Pump 5, incremental number of starts, hour log 1...72.
04089-04160	Pump5AvgFlowHourLog1...72	0.1 litre/s	Pump 5, average flow, hour log 1...72.
04161-04232	Pump5AvgCurrentHourLog...72	0.1 A	Pump 5, average current, hour log 1...72.
04233-04304	Pump6OprTimeHourLog1...72	1 minute	Pump 6, incremental operating time, hour log 1...72.
04305-04376	Pump6StartCntHourLog1...72	Unscaled	Pump 6, incremental number of starts, hour log 1...72.
04377-04448	Pump6AvgFlowHourLog1...72	0.1 litre/s	Pump 6, average flow, hour log 1...72.
04449-04521	Pump6AvgCurrentHourLog...72	0.1 A	Pump 6, average current, hour log 1...72.

9.18 Event log register block

The event log contains the latest 50 event entries. Each entry consists of seven registers, containing information about the event.

Address	Register name	Scale	Description
06001	NoOfEventsInLog	Unscaled	Number of events in the event log.
06002	EventIDLog1	Unscaled	Event ID for logged event No 1.
06003	EventCodeLog1	enum	Event code for logged event No 1.
06004	EventSourceLog1	enum	Event source for logged event No 1. 0 = System 1 = CU 36X 2 = IO 351B 3 = IO 111, pump 4 = MP 204, pump 5 = Analog input 6 = Pump 7 = Add-on CIM module 8 = Battery/UPS 9 = Mixer 10 = Analog input, level sensor 11 = Analog input, flow sensor 12 = Analog input, power sensor 13 = Analog input, user-defined sensor 14 = CUE (variable-frequency drive).
06005	EventDeviceNo	Unscaled	Device number related to the event or its recognition. 0 = No related number 1 = Value of related number, pump 1 2 = Value of related number, pump 2 3 = Value of related number, pump 3 4 = Value of related number, pump 4 5 = Value of related number, pump 5 6 = Value of related number, pump 6.
06006	EventTypeAndConditionLog1	enum	Event type and condition of logged event No 1. 0 = - 1 = Alarm condition appears 2 = Alarm condition disappears 3 = Warning condition appears 4 = Warning condition disappears.
06007	EventTimeStampLog1HI	1 second	Seconds since midnight January 1st 1970 (UNIX time).
06008	EventTimeStampLog1LO		
06009-06344	Event log 2...49	-	-
06345	EventIDLog50	Unscaled	Event ID for logged event No 50.
06346	EventCodeLog50	enum	Event code for logged event No 50.
06347	EventSourceLog50	enum	Event source for logged event No 50.
06348	EventDeviceNo	Unscaled	Device number related to the event or its recognition.
06349	EventTypeAndConditionLog50	enum	Event type and condition of logged event No 50.
06350	EventTimeStampLog50HI	1 second	Seconds since midnight January 1st 1970 (UNIX time).
06351	EventTimeStampLog50LO		

9.19 Data log index register block

This is an index area for the configurable data log. The log data index registers are read-only.

See section [11.3 Reading the configurable data log series](#) for detailed information on how to read the configurable log series.

By default the configurable logs are not set up. This can only be done with a PC Tool or via the CU 36X control panel. For further information, see installation and operating instructions for Dedicated Controls.

Address	Register name	Scale	Description
07001	NoOfLogSeries	Unscaled	Number of available log series [0; 64].
07002	LogSeries1ItemNo	Unscaled	Log series 1 item number. See section 11.3 Reading the configurable data log series .
07003	LogSeries1RegAddr	Unscaled	Register start address of log series 1.
07004	LogSeries1SamplingTime	1 second	Time period between samples in log series 1.
07005	LogSeries1NoOfSamples	Unscaled	Number of samples in log series 1, N_1 .
07006	LogSeries2ItemNo	Unscaled	Log series 2 item number. See section 11.3 Reading the configurable data log series .
07007	LogSeries2RegAddr	Unscaled	Register start address of log series 2.
07008	LogSeries2SamplingTime	1 second	Time period between samples in log series 2.
07009	LogSeries2NoOfSamples	Unscaled	Number of samples in log series 2, N_2 .
...	LogSeries#ItemNo	Unscaled	Log series # item number. See section 11.3 Reading the configurable data log series .
...	LogSeries#RegAddr	Unscaled	Register start address of log series #.
...	LogSeries#SamplingTime	1 second	Time period between samples in log series #.
...	LogSeries#NoOfSamples	Unscaled	Number of samples in log series #, $N_{\#}$.
07254	LogSeriesLItemNo	Unscaled	Log series "L" item number (last series). See section 11.3 Reading the configurable data log series .
07255	LogSeriesLRegAddr	Unscaled	Register start address of log series "L".
07256	LogSeriesLSamplingTime	1 second	Time period between samples in log series "L".
07257	LogSeriesLNoOfSamples	Unscaled	Number of samples in log series "L", N_L .
07258	LogSeriesEndMark	Unscaled	End mark to end the index. Is always 0.

... indicates variable register address.

9.20 Data log series register block

Data area for the configurable data log series (max. 64 series).
The log data are read-only and have a fixed starting address, so log series 1 always starts at register 07301.

See section [11.3 Reading the configurable data log series](#) for detailed information on how to read the configurable log series.

Address	Register name	Scale	Description
07301	LogSeries1ItemNo	Unscaled	Log series 1 item number. See section 11.3 Reading the configurable data log series .
07302	LogSeries1SamplingTime	1 second	Time period between samples in log series 1, configurable on the CU 36X control panel.
07303	LogSeries1NoOfSamples	Unscaled	Number of samples in log series 1, N_1 , configurable on the CU 36X control panel.
07304	LogSeries1TimeStampHI	1 second	Log series 1 Unix time stamp. Subtracting "Sampling time" gives the time stamp of sample No 2 in this series, etc.
07305	LogSeries1TimeStampLO		
07306	LogSeries1Sample1	-	Value of log series 1 sample No 1.
...	LogSeries1SampleN1	-	Value of log series 1 sample No N_1 (last sample in series).
...	LogSeries2ItemNo	-	Log series 2 item number. See section 11.3 Reading the configurable data log series .
...	LogSeries2SamplingTime	-	Time period between samples in log series 2, configurable on the CU 36X control panel.
...	LogSeries2TimeStampHI	-	Log series 2 Unix time stamp. Subtracting "Sampling time" gives the time stamp of sample No 2 in this series, etc.
...	LogSeries2TimeStampLO		
...	LogSeries2Sample1	-	Value of log series 2 sample No 1.
...	...	-	-
...	LogSeries2SampleN2	-	Value of log series 2 sample No N_2 (last sample in series).
...	LogSeries#ItemNo	-	Log series # item number. See section 11.3 Reading the configurable data log series .
...	LogSeries#SamplingTime	-	Time period between samples in log series #.
...	LogSeries#NoOfSamples	-	Number of samples in log series #, $N_{\#}$.
...	LogSeries#TimeStampHI	-	Log series # Unix time stamp. Subtracting "Sampling time" gives the time stamp of sample No 2 in this series, etc.
...	LogSeries#TimeStampLO		
...	LogSeries#Sample1	-	Value of log series # sample No 1.
...	...	-	-
...	LogSeries#SampleN#	-	Value of log series # sample No $N_{\#}$ (last sample in series).
...	LogSeriesLItemNo	-	Log series "L" item number. See section 11.3 Reading the configurable data log series .
...	LogSeriesLSamplingTime	-	Time period between samples in log series "L".
...	LogSeriesLNoOfSamples	-	Number of samples in log series "L", N_L .
...	LogSeriesLTimeStampHI	-	Log series "L" Unix time stamp. Subtracting "Sampling time" gives the time stamp of sample No 2 in this series, etc.
...	LogSeriesLTimeStampLO		
...	LogSeriesLSample1	-	Value of log series "L" sample No 1.
...	...	-	-
...	LogSeriesLSampleN1	-	Value of log series "L" sample No N_L (last sample in series).

... indicates variable register address.

10. Modbus RTU commissioning, step-by-step guides

Note If the sensor configuration is changed, restart the CIM unit to ensure a correct scaling of the sensor value.

10.1 Hardware setup (CIM 200)

Step	Action
1	Install the CIM 200 in the Grundfos pump according to the pump documentation.
2	Complete the pump configuration, e.g. sensor configuration and local mode. This can be done either on the pump control panel, via the R100 or Grundfos GO Remote or Grundfos PC Tool E-Products.
3	Select the Modbus slave address (1-247).
4	Select the bit rate of the Modbus slave.
5	Select parity and stop bits of the Modbus slave (even parity with 1 stop bit or no parity with 2 stop bits).
6	If necessary, set line termination.
7	Connect the necessary cables from the CIM 200 to the Modbus network.
8	Confirm that the GENiBus LED is constantly green and that the Modbus LED is either off (if no master is actively polling the slave) or flashing green (indicating error-free communication).

The CIM 200 is now ready to be accessed via the Modbus network.

10.2 Hardware setup (CIM 250 GSM call-up)

Step	Action
1	Install the CIM 250 in the Grundfos pump according to the pump documentation.
2	Fit a GSM antenna to the CIM module SMA connector. See section 6.1.1 Fitting a GSM antenna .
3	Insert the SIM card in the CIM 250. See section 6.1.2 Inserting the SIM card .
4	Power on the Grundfos product
5	Observe that LED2 turns steady green (see section 6.2 Status LEDs), indicating that the CIM module is fitted correctly.
6	Observe that LED1 blinks yellow and changes to yellow pulsing after approximately 30 s (see section 6.2 Status LEDs), indicating that the GSM connection is working. By making a call-up from a phone the connection can be verified (LED1 turns steady yellow).
7	For configuring the CIM 250 for a call-up connection, follow the instructions in the "CIM 250 SMS commands installation and operating instructions" (included on CIM/CIU support files CD), section 2.1-3.
8	To verify the GSM settings after completion, the SMS command GSMSETTINGS can be used.

The CIM 250 is now ready to be accessed from a Modbus RTU master via GSM call-up (or via SMS commands).

10.3 Hardware setup (CIM 250 GPRS connection)

Step	Action
1	Install the CIM 250 in the Grundfos product according to the product documentation.
2	Fit a GSM antenna to the CIM module SMA connector. See section 6.1.1 Fitting a GSM antenna .
3	Insert the SIM card in the CIM 250. See section 6.1.2 Inserting the SIM card .
4	Power on the Grundfos product
5	Observe that LED2 turns steady green. See section 6.2 Status LEDs .
6	Observe that LED1 blinks yellow and changes to yellow pulsing after approximately 30 s (see section 6.2 Status LEDs), indicating that the GSM connection is working.
7	For configuring the CIM 250 for a GPRS connection, follow the instructions in the "CIM 250 SMS commands installation and operating instructions" (included on CIM support files CD), sections 2.1, 2.2 and 2.4.
8	To verify the GPRS setting after completion, the SMS command GPRSSETTING can be used. To verify that the GPRS connection is working, the SMS command GPRSSTATUS can be used. The connection state should be "Context active" if ready and "Connected" if a Modbus TCP master is already communicating.

The CIM 250 is now ready to be accessed from a Modbus TCP master via GPRS (or via SMS commands).

10.4 Modbus TCP communication setup (CIM 500)

Step	Action
1	Install the CIM 500 in the Grundfos Grundfos product according to the pump documentation.
2	Select position 1 at the protocol rotary switch. See section 7.2 Setting the Industrial Ethernet protocol .
3	Power on the Grundfos product, and observe LED2 turn steady green and LED1 remaining off.
4	Complete the pump configuration, e.g. sensor configuration and selection of local Operating mode, local Control mode and local Setpoint (e.g. via Go Remote)
5	Connect one of the CIM 500 Ethernet ports (RJ45) to a PC using an Ethernet cable.
6	Configure the PC Ethernet port to the same subnetwork as the CIM 500 (e.g. 192.168.1.1) and the subnet mask to 255.255.255.0. See section "A.1 How to configure an IP address on your PC" on page 81.
7	Open your internet browser and make contact to the CIM 500 Web server. Default address: 192.168.1.100
8	Log on to the Web server. Default: User: admin Password: Grundfos.
9	In the menu column to the left select: Configuration > Real time Ethernet protocol
10	Key in an IP address belonging to the same subnet as your PC (e.g. 192.168.1.2).
11	Key in the subnet mask 255.255.255.0, and leave the rest of the settings at their factory default values.
12	Click [Submit] to transfer the new settings, and close the Web browser.

CIM 500 is now ready to be accessed from a Modbus TCP master via one of its Ethernet ports. Use the IP address selected under step 9. The Modbus address (Unit ID) in the Modbus TCP telegram is not used.

- The CIM 500 LED 1 will be flashing green when Modbus TCP communication takes place.
- You can use the two Ethernet ports for daisy chaining of CIM 500 modules.
- It is possible to have connection to the Web server simultaneously with a connection to a Modbus TCP master.
- It is possible to have connection to more Modbus TCP masters simultaneously, e.g. to have connection to PC Tool CIM while connected to another Modbus TCP master.

11. Detailed descriptions of functionality

11.1 SCADA PIN code protection

It is always possible to get read access via Modbus, but if the CU 36X control unit is SCADA PIN-code-protected (PitStatus.ScadaPinCodeEnabled, register 00202, bit 4 = 1), write access requires that the user has entered the correct PIN-code in (ScadaPinCode, register 00109).

Writing the correct PIN code value will trigger the write access control, and write access will be open, which can be verified with the status bit PitStatus.WriteAccess (register 00202, bit 5 = 1).

To remove write access, the SCADA PIN code input register (ScadaPinCode, register 00109) can be set with a value of 0.

The SCADA PIN code protection cannot be enabled or disabled via Modbus.

11.2 Reading the event log

The event log has a size of 350 registers containing the latest 50 alarm and warning events. The number of contained event logs can be read from NoOfEventsInLog (register 06001).

Each event is represented as an event record of seven registers:

- EventID
- EventCode
- EventSource
- EventDeviceNo
- EventTypeAndCondition
- EventTimeStampHI
- EventTimeStampLO.

The EventID is a unique "tag" for the event record. These IDs are incremented successively corresponding to the succession of the events they represent. The event log can be handled in three ways:

- Reading the complete log (all 50 event records) regularly and afterwards sorting "new" ones from "old" ones.
- Reading the event ID of the latest record EventLogLatestID (register 00216) and comparing with the event ID of the latest record that has been read previously to see how many "new" records have been generated. Then afterwards reading only the "new" ones.
- Clearing the event log with PitControl.ResetEventLog (register 00101, bit 2) after it has been read. Then the event log will always contain "new" events only.

Note

The CIM module ensures that logged data is protected against internal update during the time it is accessed from Modbus, so that the event log constitutes a time-consistent block (data coherency).

11.3 Reading the configurable data log series

LogSeriesItemNo

The log series item numbers are shown in the table below. Note that the scaling of the registers with the present values is identical to the scaling of the logged data values except for power values where the scaling has been changed from [1 W] to [10 W] to fit into 16 bit.

Log series item No	Log item register	Scale
0001	PitWaterLevel	0.01 m
0002	PitSwitchWaterLevel	Unscaled
0003	PitFlowIn	0.1 litre/s
0004	PitAverageFlowIn	0.1 litre/s
0005	PitFlowOut	0.1 litre/s
0006	PitAverageFlowOut	0.1 litre/s
0007	PitPower	10 W*
0008	PitSpecificEnergy	1 Wh/m ³
0010	PitMixerStartPerH	Unscaled
0011	PitOutletPressure	0.001 bar
0012	PitEstimatedFlowOut	0.1 litre/s
0500	UserAnalogInput1	0.1 %
0501	UserAnalogInput2	0.1 %
0502	UserAnalogInput3	0.1 %
1000	Pump1Flow	0.1 litre/s
1001	Pump1LatestFlow	0.1 litre/s
1002	Pump1Current	0.1 A
1003	Pump1Insulation	10 kΩ
1004	Pump1WaterInOil	0.1 %
1005	Pump1MotorTemperature1	1 °C
1006	Pump1MotorTemperature2	1 °C
1007	Pump1CosPhi	0.01
1008	Pump1Power	10 W*
1009	Pump1Voltage	0.1 V
1010	Pump1LatestCurrent	0.1 A
1011	Pump1StartsPerH	Unscaled
1012	Pump1LatestOperatingTime	1 second
1013	Pump1Frequency	0.01 Hz
1014	Pump1Torque	0.1 Nm
1015	Pump1CurrentAsymmetry	0.1 %
2000	Pump2Flow	0.1 litre/s
2001	Pump2LatestFlow	0.1 litre/s
2002	Pump2Current	0.1 A
2003	Pump2Insulation	10 kΩ
2004	Pump2WaterInOil	0.1 %
2005	Pump2MotorTemperature1	1 °C
2006	Pump2MotorTemperature2	1 °C
2007	Pump2CosPhi	0.01
2008	Pump2Power	10 W*
2009	Pump2Voltage	0.1 V
2010	Pump2LatestCurrent	0.1 A
2011	Pump2StartsPerH	Unscaled
2012	Pump2LatestOperatingTime	1 second
2013	Pump2Frequency	0.01 Hz
2014	Pump2Torque	0.1 Nm
2015	Pump2CurrentAsymmetry	0.1 %
3000	Pump3Flow	0.1 litre/s
3001	Pump3LatestFlow	0.1 litre/s
3002	Pump3Current	0.1 A
3003	Pump3Insulation	10 kΩ
3004	Pump3WaterInOil	0.1 %

Log series item No	Log item register	Scale
3005	Pump3MotorTemperature1	1 °C
3006	Pump3MotorTemperature2	1 °C
3007	Pump3CosPhi	0.01
3008	Pump3Power	10 W*
3009	Pump3Voltage	0.1 V
3010	Pump3LatestCurrent	0.1 A
3011	Pump3StartsPerH	Unscaled
3012	Pump3LatestOperatingTime	1 second
3013	Pump3Frequency	0.01 Hz
3014	Pump3Torque	0.1 Nm
3015	Pump3CurrentAsymmetry	0.1 %
4000	Pump4Flow	0.1 litre/s
4001	Pump4LatestFlow	0.1 litre/s
4002	Pump4Current	0.1 A
4003	Pump4Insulation	10 kΩ
4004	Pump4WaterInOil	0.1 %
4005	Pump4MotorTemperature1	1 °C
4006	Pump4MotorTemperature2	1 °C
4007	Pump4CosPhi	0.01
4008	Pump4Power	10 W*
4009	Pump4Voltage	0.1 V
4010	Pump4LatestCurrent	0.1 A
4011	Pump4StartsPerH	Unscaled
4012	Pump4LatestOperatingTime	1 second
4013	Pump4Frequency	0.01 Hz
4014	Pump4Torque	0.1 Nm
4015	Pump4CurrentAsymmetry	0.1 %
5000	Pump5Flow	0.1 litre/s
5001	Pump5LatestFlow	0.1 litre/s
5002	Pump5Current	0.1 A
5003	Pump5Insulation	10 kΩ
5004	Pump5WaterInOil	0.1 %
5005	Pump5MotorTemperature1	1 °C
5006	Pump5MotorTemperature2	1 °C
5007	Pump5CosPhi	0.01
5008	Pump5Power	10 W*
5009	Pump5Voltage	0.1 V
5010	Pump5LatestCurrent	0.1 A
5011	Pump5StartsPerH	Unscaled
5012	Pump5LatestOperatingTime	1 second
5013	Pump5Frequency	0.01 Hz
5014	Pump5Torque	0.1 Nm
5015	Pump5CurrentAsymmetry	0.1 %
6000	Pump6Flow	0.1 litre/s
6001	Pump6LatestFlow	0.1 litre/s
6002	Pump6Current	0.1 A
6003	Pump6Insulation	10 kΩ
6004	Pump6WaterInOil	0.1 %
6005	Pump6MotorTemperature1	1 °C
6006	Pump6MotorTemperature2	1 °C
6007	Pump6CosPhi	0.01
6008	Pump6Power	10 W*
6009	Pump6Voltage	0.1 V
6010	Pump6LatestCurrent	0.1 A
6011	Pump6StartsPerH	Unscaled
6012	Pump6LatestOperatingTime	1 second
6013	Pump6Frequency	0.01 Hz

Log series item No	Log item register	Scale
6014	Pump6Torque	0.1 Nm
6015	Pump6CurrentAsymmety	0.1 %

* The data item PitPowerHI/LO (registers 00308 and 00309) has a resolution of 1 W, but the logging is in 10 W.

Log series max. limits

Total number of samples	40000 registers
Log series max. length	8192 registers (max. value for LogSeriesNoOfSamples)
Maximum number of log series	64 (max. value for NoOfLogSeries (register 07001))

11.4 Separation of reads and writes

The functional profile supports Modbus holding registers, which means that registers can be both read and written. By default, most of the register values meant for writing by the Modbus master will also be updated by the CU 36X control unit itself, to reflect the actual value used by the CU 36X.

Differences arise due to internal value limitations and because some settings and control values can have other sources (e.g. service port and display) that can change the actual values. To avoid such conflicts, the profile has the option of read/write separation with the option Config.ReadWriteSeparation (register 00006, bit 1 = 1). Using this option means that all writing registers [W] use an associated reading location [R] where the resulting status of the writing always can be verified. In this case reading and writing never take place via the same registers (Pit Event Simulation registers being the only exceptions). Reading a writing register only means reading what has previously been written to the Modbus interface, and in the general case this will not reflect what value the CU 36X control unit is actually using.

Example 1

Setting and reading overflow level with ReadWriteSeparation disabled (default).

The user writes a new value to SetOverflowLevel (register 00121).

The resulting overflow level is then read from SetOverflowLevel (register 00121).

Note ReadWriteSeparation is disabled by default.

Example 2

Setting and reading overflow level with ReadWriteSeparation enabled.

The user writes a new value to SetOverflowLevel (register 00121).

The resulting overflow level is then read from OverflowLevel (register 00240), hence separating reads from writes.

11.5 Control bit acknowledgement

All control bits in the functional profile are triggered on the rising edge of a bit. The system supports two different approaches to control bit acknowledgement: Auto and manual.

The AutoAckControlBits setting (register 00005) sets the desired approach:

0 = Disabled.

Control bits are not automatically lowered when accepted by the device. The user must lower the control bit manually before the control bit can be triggered again. When a control bit is accepted by the device, the corresponding control bit acknowledgement will be raised, and the user can lower the control bit.

1 = Enabled.

Control bits are automatically lowered when accepted by the device, so the user does not have to lower it manually (default).

Example 1

ResetAlarm with auto-acknowledgement enabled (default).

The user sets the PitControl.ResetAlarm control bit (register 00101, bit 0) to 1 to reset an alarm. When accepted by the slave, the PitControl.ResetAlarm control bit is automatically reset to 0. The user can then set the PitControl.ResetAlarm control bit to 1 again to reset an alarm again.

Note AutoAckEnabled is the default setting.

Example 2

ResetAlarm with auto-acknowledgement disabled.

The user sets the PitControl.ResetAlarm control bit (register 00101, bit 0) to 1 to reset an alarm. When accepted by the slave, the AcknowledgeRegister.AckResetAlarm (register 00201, bit 0) is set to 1, and the PitControl.ResetAlarm is still 1. The user must then manually set PitControl.ResetAlarm to 0 before another alarm can be reset. When doing so, the AcknowledgeRegister.AckResetAlarm will revert to 0 as well.

11.6 GSM call-up connection

The call-up function in the Dedicated Controls wastewater system is used for SCADA system communication via the GSM network. Connection is established when the SCADA system dials the CIM 250. The CIM 250 will automatically "pick up the phone" and wait for data traffic in the form of Modbus RTU telegrams.

If legal data traffic has not been initiated within one minute, the CIM 250 will hang up the line. This silence timeout is active during the whole communication session. Whenever the SCADA system has completed the Modbus communication, it hangs up the line. This is detected by the CIM 250, which also hangs up the line, and the call-up communication session is thereby completed. See fig. 18.

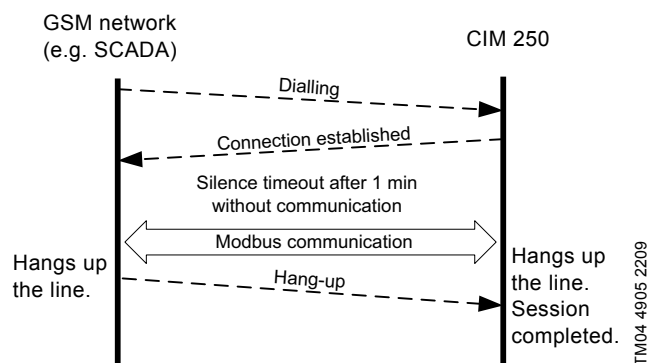


Fig. 18 Illustration of a GSM call-up session

If SCADA PIN code protection is enabled, the ScadaPinCode (register 00109) has to be written with the correct value before write access will be opened. It will then remain open until the call-up session is completed. The next call-up session also has to write the ScadaPinCode to be able to write registers. See installation and operating instructions for Dedicated Controls.

Relevant settings in the CU 36X:

To find the parameter in the CU 36X, go to Settings > Communication settings > SCADA settings >

- SCADA PIN code enabled
- SCADA PIN code.

11.7 GSM call-back connection

If an alarm appears in the Dedicated Controls wastewater system and the SCADA call-back function in the CU 36X has been enabled in general and also enabled for this particular alarm, the CIM 250 will attempt to establish a phone connection to the SCADA system. Dialling timeout is one minute, and if connection is not established, the CIM 250 will hang up and enter a call-back wait state. Call-back will be retried after one minute. This goes on forever as long as the alarm condition persists. See fig. 19.

If connection is established, the CIM 250 will wait up to one minute for data traffic. If no communication is initiated from the SCADA system, the CIM 250 will hang up, enter a call-back wait state and retry after one minute. See fig. 19.

The SCADA system is expected to start Modbus communication when called. When the appropriate data have been requested or written, the SCADA system must send a call-back acknowledgement to the CIM 250 to signal that it has received the information needed (Modbus writes to PitControl.CallBackAck, register 00101, bit 5). This is to prevent several call-backs based on the same event.

If SCADA PIN code protection is enabled, the ScadaPinCode (register 00109) has to be written with the correct value before write access will be opened. It will then remain open until the call-back session is completed.

To finally end the sequence, the SCADA system hangs up the line. This is detected by the CIM 250, which also hangs up the line, and the call-back communication session is thereby completed.

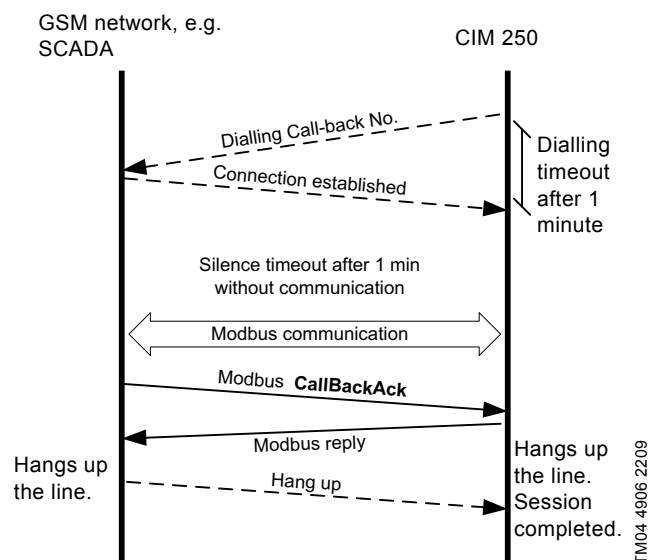


Fig. 19 Principle illustration of a call-back session

To find the parameter in the CU 36X, go to Settings > Communication settings > SCADA settings >

- SCADA call-back enabled
- SCADA call-back phone number
- SCADA PIN code enabled
- SCADA PIN code.

Settings > Alarm settings >

- SCADA call-back enabled for particular alarms.

11.8 Use of SMS messages

The setting up and the use of the SMS functions are described in the installation and operating instructions for Dedicated Controls.

To find the parameter in the CU 36X, go to Settings > Communication settings >

- SMS numbers
- SMS schedule
- SMS heartbeat message
- SMS authentication.

Apart from the SMS functionality described in the previous sections which is related to the Dedicated Controls wastewater system, the CIM 250 will send SMS messages in case of faults or other special conditions of the CIM 250 itself.

Such messages do not depend on the CU 36X. They cannot be disabled, but are generated by the CIM 250 and sent to all numbers in the phone book.

Note No SMS message will be sent if the phone book is empty (for instance if the CIM 250 has not been initialised).

The message is triggered by an event. If the CIM 250 is switched off and on (the battery must also be removed), it will send the message again if the cause of the message still exists.

11.8.1 No connection to product

If the communication between the CIM 250 and the CU 36X is interrupted for more than one minute, the CIM 250 will send this message to all numbers in the phone book.

[Installation name]

GSM Module Error:

No connection to product

Note If the cause of the interruption is the fact that the power supply to the product was interrupted, the CIM 250 will send this message instead: No mains supply, using battery. See below.

11.8.2 No mains supply, using battery

If the CIM 250 detects that it is being supplied from the optional CIM 250 battery, it will send this message to all numbers in the phone book:

[Installation name]

GSM Module Error:

No mains supply, using battery

This fault may disappear by itself, as the message is typically triggered by a short power cut. In case of this special fault (but not the other ones), the CIM 250 will send a message, telling that the fault has disappeared:

[Installation name]

GSM Module:

Mains supply returned

If the battery is worn out or the CIM 250 has no battery, the CIM 250 will not detect that the power supply to the CU 36X has been interrupted, as it will loose power supply itself. Therefore, it cannot send a message. To inform the user that there has been a power cut, the CIM 250 will always send an SMS message when the power supply has returned:

[Installation name]

GSM Module:

Power on occurred

11.8.3 Change GSM module battery

If the CIM 250 detects that the optional CIM 250 battery is worn out and must be replaced, it will send this message to all numbers in the phone book:

[Installation name]

GSM Module Error:

Change GSM Module battery

11.8.4 GSM module battery low

If the CIM 250 detects that the optional CIM 250 battery level is low, it will send this message to all numbers in the phone book:

[Installation name]

GSM Module Error:

GSM Module battery low

11.9 GPRS connection

GPRS (General Packet Radio Service) is a wireless, "always on" connection that remains active as long as the CIM 250 is within range of the service. With GPRS it is possible to establish a wireless connection to the internet and thus enable a remote connection to a SCADA system computer or another PC application. Typical data rates are 32-48 kbit/s.

The GPRS itself takes care of the wireless data transfer via the GSM network. It plays the same role as Ethernet in a wired network. On top of GPRS is the TCP/IP protocol, which enables easy integration with the internet. The Modbus TCP protocol is used on the application layer communicating with a TCP port number (default 502). The difference when compared to the fieldbus protocol Modbus RTU is the exclusion of the 16-bit CRC checksum and the adding of a Modbus application program header as illustrated below.

11.9.1 Subscription

The GSM service providers have different technical solutions for GPRS to choose from. You have to select the service provider and the technical solution that best suit your needs, and it must be based on static IP addressing. You will get the following from the GSM service provider:

- A Subscriber Identity Module (SIM card).
- An Access Point Name (APN) (e.g. "internet").
- Username (is fixed and cannot be changed by the user).
- Password (is fixed and cannot be changed by the user).
- A static IP address.

Solutions based on a VPN (Virtual Private Network) involve the use of special routers, e.g. GRE routers, Generic Routing Encapsulation, which you will also get from the service provider.

11.9.2 Installation

Specific settings for GPRS communication in the CU 36X:

To find the parameter in the CU 36X, go to Settings > Communication settings > GPRS settings >

- APN
- Username
- Password.

There are some advanced GPRS settings which have default values that usually work, but in special cases, it might be necessary to change some of them. This can only be done with the Grundfos PC Tool WW Controls:

- Authentication: Normal/Secure. Only used by some service providers. Default: Normal.
- Roaming: Enabled/Disabled. Default: Disabled.
- Modbus TCP port number. Default: 502.
- GENipro port number. Default: 49152.

Other relevant settings in the CU 36X:

To find the parameter in the CU 36X, go to Settings > Communication settings > SCADA settings >

- SCADA PIN code enabled
- SCADA PIN code.

11.9.3 Status

In the CU 36X display Status > System > GSM/GPRS, you will see the following information:

- GPRS connection state
 - Detached: No connection to any GPRS service.
 - Attached: Connection to GPRS service established.
 - Context active: IP address has been assigned, ready for a client to establish a socket connection.
 - Connected: A client has established a socket connection. The system is ready for TCP/IP data exchange (or already exchanging data).
- Total GPRS data sent (in kb).
- Total GPRS data received (in kb).
- IP address (e.g. 218.214.34.201).

The same display also supplies statistical information about SMS messages, call-up connections and GSM signal strength.

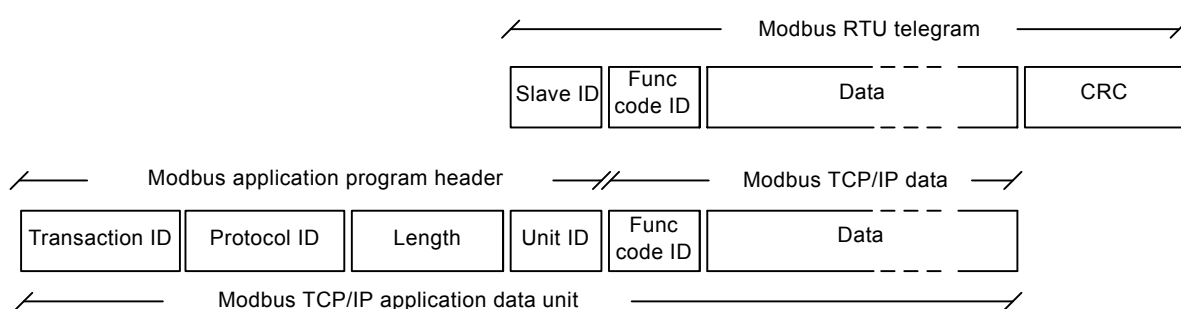


Fig. 20 Modbus TCP telegram

11.9.4 Operation

When powering on a CU 36X with the correct GSM/GPRS setting, the following GPRS connection sequence will take place:

1. The CIM 250 locates the GSM/GPRS service. The connection state changes from "Detached" to "Attached".
2. The CIM 250 attempts to connect to the APN it has been given and requests an IP address. The base station looks through its record of legal SIM cards and finds the IP address (the address associated with this SIM card) to assign to the CIM 250. After the CIM 250 has got the IP address, the connection state changes to "Context active".
3. The CIM 250 is now ready for a client (e.g. SCADA system) to establish a socket connection and begin TCP/IP data exchange. When a client connects the CU 36X, the connection state will change to "Connected", and the GSM status LED1 will indicate when data transfer takes place. See section [5.5 Status LEDs](#).

Note

When no GPRS data is being transferred, the connection states "Attached", "Context active" and "Connected". All show the same LED1 status (short pulse).

A client, e.g. SCADA, establishes connection to a CU 36X by specifying the IP address and the TCP port 502. Data transfer is always initiated from the client in the form of a Modbus TCP telegram embedded in a TCP/IP frame and directed to TCP port 502. To the client software, the connection to the CU 36X is completely transparent.

The protection against unauthorised data access is high. The access to the GSM network from the internet can only take place via the VPN tunnel. See fig. 22. Moreover, data transfer requires a Modbus master client, knowledge of the Modbus functional profile and the use of a SCADA PIN code, if enabled.

The CIM 250 supervises the GPRS/GSM system to ensure that it is still working. An automatic procedure ensures restarting of the CIM 250 and repetition of the GPRS connection sequence in case a deadlock situation has occurred. It also closes down socket connections that are left open by the client and unused for more than 24 hours.

It is possible to use SMS communication while GPRS communication is active. However, in the "Connected" state the delay time between reception and reply will increase.

If the connection state is different from "Connected", it is possible to establish a call-up connection. When the call-up connection is established, GPRS data exchange will be blocked until the call-up is terminated by the caller.

A total of three Modbus clients can be connected to the Modbus TCP port of the CU 36X and communicate simultaneously. Each connection, called a socket connection, is handled independently. If all three sockets are used simultaneously, a "Silence timeout" of only 5 minutes is used to prevent a complete occupation for a long time.

If an alarm appears in the Dedicated Controls wastewater system and the SCADA call-back function in the CU 36X has been enabled in general and also enabled for this particular alarm, the CIM 250 will attempt to establish a GPRS connection to the SCADA system.

If the GPRS connection state is "Connected" (one or more socket connections are established), the call-back function in the CU 36X will use the GPRS connection and perform a GPRS call-back to all clients connected to port 502. Otherwise it will use a standard GSM call-back. See section [11.7 GSM call-back connection](#).

A common standard for call-back via GPRS does not exist. In the CU 36X, this function is implemented as a Modbus TCP write telegram sent from the CIM 250. See fig. 21.

Transaction ID	0x** Has the value of the latest transaction ID 0x** minus 10
Protocol ID	0x00
Length	0x00 0x06
Slave address	Selected slave address, 0xE7 shown is default value
Function code	0x06 Write single register
Register address	0x01 0x00
Value to write	0xFF Value 0xFF00 written to register 0x00 0x0001

TM04 4909 2809


Fig. 21 Modbus TCP telegram used for call-back via GPRS

The call-back telegram is a "Write single register" function that writes the value of 0x00FF to a specific register address in the Modbus TCP master. Which register address to write to can be programmed in the ScadaGprsCallBackRegister (register 00007). In fig. 22 the address is 0x0001. The Modbus TCP master must interpret this as a call-back request from the CU 36X and start polling for data within one minute, otherwise the Modbus TCP write telegram will be resent.

The SCADA system must complete its communication with the CIM 250 by issuing a call-back acknowledgement.


If call-back is to be used, the SCADA system software (Modbus TCP driver) must support this procedure.

If more clients are "Connected" simultaneously, they will all receive the call-back, and any of them will be able to terminate the call-back sequence.

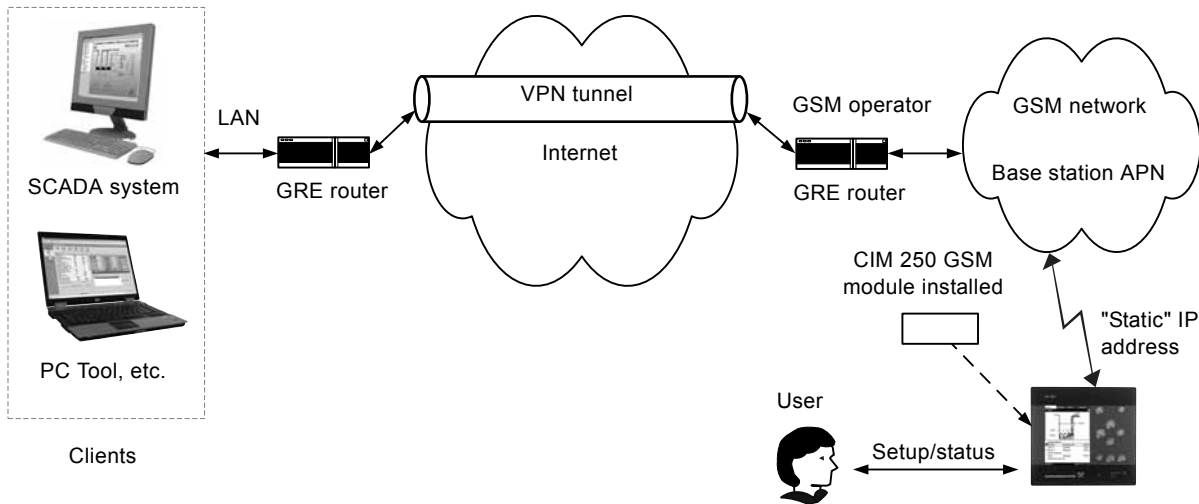

TM04 4908 2209

Fig. 22 GPRS via VPN tunnel

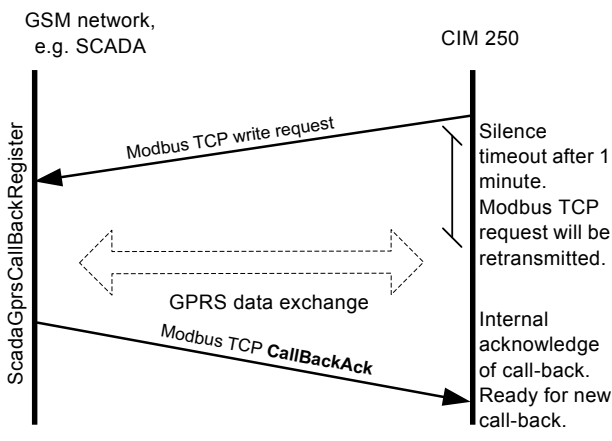

TM04 4910 2209

Fig. 23 GPRS call-back sequence

Relevant settings in the CU 36X:

To find the parameter in the CU 36X, go to Settings > Communication settings > SCADA settings >

- SCADA call-back enabled.

Settings > Alarm settings > System alarms >

- SCADA call-back for particular alarms.

11.10 Interlocking

11.10.1 Interlocking from SCADA system via GSM/GPRS

Interlocking can be done from a Modbus master (like a SCADA system) via the Modbus interface.

To find the parameter in the CU 36X, go to Settings > Communication settings > SCADA settings >

- SCADA PIN code (if PIN code protection is used).
- SCADA PIN code enabled/disabled.

Settings > Communication settings > Interlock settings >

- Incoming interlock enabled.

For further information, see installation and operating instructions for Dedicated Controls.

Interlocking procedure

1. The Modbus master (e.g. SCADA system or PLC) writes the correct SCADA PIN code to the ScadaPinCode (register 00109) if PIN code protection is enabled.

Note

The SCADA system can verify that write access is granted by reading the PitStatus.WriteAccess (register 00202, bit 5) which will be logical 1 if write access is granted.

2. The CU 36X Modbus slave verifies that the written ScadaPinCode (register 00109) register value corresponds to the SCADA PIN code entered by the user (CU 36X or PC Tool WW Controls). If the codes match, the slave will accept data writing from SCADA.
3. The Modbus master writes the InterlockTimeout (register 00226) if this value should be controlled from the master application. If it is not written, the existing value will be used.
4. The Modbus master raises the interlock bit PitControl.InterlockPit (register 00101, bit 3), which will bring the CU 36X into "interlock" mode. An interlock timeout is initiated, corresponding to the current value of the InterlockTimeout (register 00226) in the Modbus profile.

Note

Whenever a rising edge PitControl.InterlockPit is generated, the interlock timeout will be reinitialised with the value of the InterlockTimeout register. This is used to prolong an interlock mode.

5. The Modbus master can any time bring the CU 36X Modbus slave back into "Auto" mode by raising the PitControl.AutoPit, register 00101, bit 4.

11.10.2 Interlocking from another controller via SMS

Figure 11 and 13 illustrates the CU 36X SMS interlocking mechanism. The CU 36X interlock master issues an SMS command containing a 4-digit PIN code "pppp" matching the SMS PIN code of the interlock slave CU 36X. Following the PIN code is the interlock command "INTERLOCK" with an interlock timeout value mmmm counting in minutes. Timeout values allowed: 1-1440 minutes (= 24 hours).

If the interlock is accepted (correct PIN code, correct command and valid interlock timeout value), the interlock slave will change its operating mode to "Interlock control".

The SMS PIN code in the interlock SMS command is optional if the authentication method is "Both" and the interlock master phone number is present in the interlock slave SMS phone number list.

The interlock timeout value, however, is always optional. If it is not included, the previously received value will be used.

By issuing the "Auto" command, the interlock master can instantly terminate interlocking: "pppp AUTO".

The function of interlocking by SMS has the natural consequence that interlocking is also possible via a mobile phone. In this case, the user will be able to see the acknowledgement SMS (positive or negative) replied back from the CU 36X.

The CU 36X interlock master can interlock up to three CU 36X interlock slaves, each represented by a set of parameters that have to be configured in the master for each of them.

To find the parameter in the CU 36X, go to Settings > Communication settings > Interlock settings > Interlock, pit 1 >

- Outgoing interlock slave phone number
- Outgoing interlock SMS PIN code
- Outgoing interlock SMS PIN code enabled
- Outgoing interlock timeout.

The interlock slave has to be configured as described in the installation and operating instructions for Dedicated Controls.

To find the parameter in the CU 36X, go to Settings > Communication settings > SMS authentication >

- SMS PIN code pppp
- SMS authentication method ("Via phone number", "Via PIN code", "Both" or "None").

Settings > Communication settings > Interlock settings >

- Incoming interlock enabled.

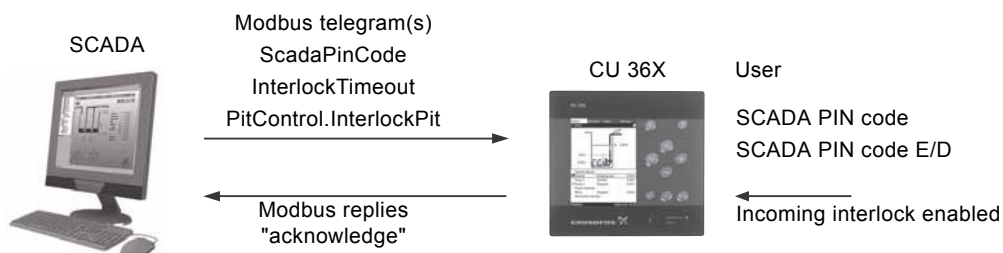


Fig. 24 Interlocking from SCADA

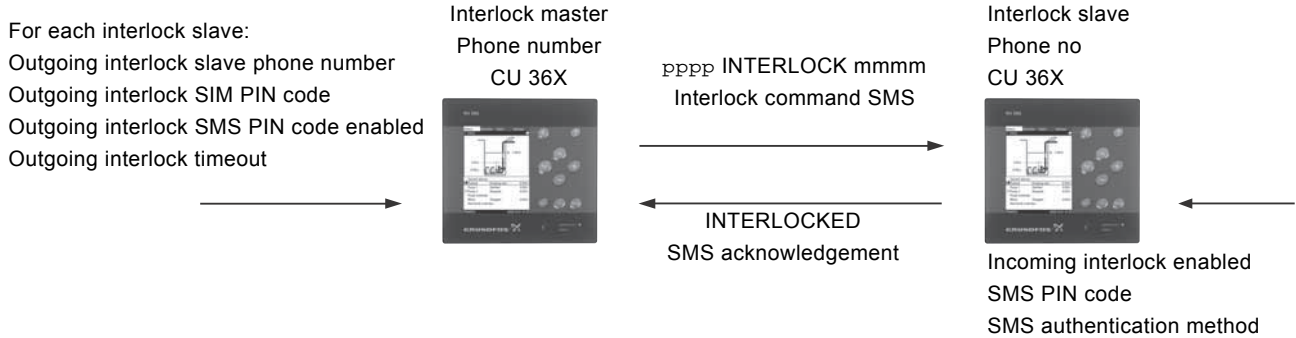


Fig. 25 Interlocking from another controller

11.11 Real-time clock

The real-time clock can be set and/or read from the CU 36X in two ways: Unix format or standard format.

All time stamps in the event log and in the data log are also Unix time format. Read the time with UNIXRealTimeClockHI (register 00228) and UNIXRealTimeClockLO (register 00229), or set a new time with SetRealTimeClockHI (register 00112) and SetRealTimeClockLO (register 00113). The new time will be activated in the CU 36X when writing the LO-order register. We recommend writing the HI/LO registers in the same telegram.

11.11.1 Unix time format

For further information, see

- http://www.devshed.com/c/a/Administration/UNIX-Time_Format_Demystified/1/
- <http://www.epochconverter.com/>

11.11.2 Standard format

In the standard format, there are registers for specifying second, minute, hour, day, month and year (year, offset by 2000) in a human-readable way. With registers from 00230 to 00235 the actual values can be read, and with registers 00114 to 00119 new values can be set. The new values will be activated when writing the value "1" to SetRtc (register 00120, bit 0).

11.12 Event simulation

It is possible to simulate alarm/warning events by writing appropriate values to the following registers:

- SimulationEventCode (register 00701)
- SimulationEventSource (register 00702)
- SimulationEventDeviceNo (register 00703)
- SimulationEventActionType (register 00704).

Afterwards it is possible to trigger the simulated event via SimulationActivate (register 00705, bit 0). The event recording will take place as if the event was real, but the system operation will not be influenced.

The SimulationStatus (register 00706, bit 0) can be used to check if event simulation is active. If the bit value is 0, there is no active alarm simulation.

By writing a '0' to SimulationEventCode (register 00701) and afterwards setting the SimulationActivate (register 00705, bit 0) control bit, the simulated event is cancelled. It can also be cancelled with the PitControl.ResetAlarm (register 00101, bit 0) control bit.

Event simulation procedure

- Write a valid event code (see section [9.14 Alarm simulation register block](#)) to SimulationEventCode (register 00701).
- Write an event source number (see section [9.14 Alarm simulation register block](#)) to SimulationEventSource (register 00702).
- Write a device number (see section [9.14 Alarm simulation register block](#)) to SimulationEventDeviceNo (register 00703).
- Write an action type number (see section [9.14 Alarm simulation register block](#)) to SimulationEventActionType (register 00704).
- Activate the alarm simulation with the above settings by writing 1 to SimulationActivate (register 00705, bit 0).

11.13 Alarms and warnings

These registers reflect the actual alarm/warning conditions of the pit or the pump. Alarms/warnings which have acknowledgement type "Auto-ack", will be cleared automatically when normal conditions are restored. Alarms/warnings which have acknowledgement type "Manual-ack", require a PitControl.ResetAlarm command to be cleared.

Note Warnings use the same bit interpretation as alarms.

Description	Data item	Code	Event source
Pit alarms 1 (register 00210), Pit warnings 1 (register 00213)			
Overflow alarm	PitAlarms/Warnings1.0	192	System
High-level alarm	PitAlarms/Warnings1.1	191	System
Alarm level alarm	PitAlarms/Warnings1.2	190	System
Dry-running alarm	PitAlarms/Warnings1.3	57	System
Mains supply fault	PitAlarms/Warnings1.4	6	System
Level float switch sequence inconsistency	PitAlarms/Warnings1.5	205	System
Inconsistency between float switches and sensor	PitAlarms/Warnings1.6	204	System
Signal fault, level/pressure sensor	PitAlarms/Warnings1.7	168	AI (level sensor)
Signal fault, flow sensor	PitAlarms/Warnings1.8	169	AI (flow sensor)
Signal fault, power meter sensor	PitAlarms/Warnings1.9	186	AI (power sensor)
Fault, mixer contactor feedback	PitAlarms/Warnings1.10	221	DI (mixer contactor)
Communication fault, I/O module	PitAlarms/Warnings1.11	226	IO 351B
CIM fault (Communication Interface Module)	PitAlarms/Warnings1.12	159	Add-on CIM module
SIM card fault	PitAlarms/Warnings1.13	160	Add-on CIM module
Communication fault, main system (SCADA)	PitAlarms/Warnings1.14	15	System
Power-on notice	PitAlarms/Warnings1.15	247	System
Pit alarms 2 (register 00211), Pit warnings 2 (register 00214)			
Fault, battery/UPS	PitAlarms/Warnings2.0	248	Battery/UPS
Hardware fault, type 1	PitAlarms/Warnings2.1	72	CU 36X/IO 351B
Ethernet: No IP address from DHCP server	PitAlarms/Warnings2.2	231	System
Ethernet: Auto-disabled due to misuse	PitAlarms/Warnings2.3	232	System
Time for service, mixer	PitAlarms/Warnings2.4	222	Mixer
Maximum number of mixer starts per hour exceeded	PitAlarms/Warnings2.5	223	System
User-defined relay activated	PitAlarms/Warnings2.6	246	CU 36X
External fault signal	PitAlarms/Warnings2.8	3	System
Combi alarm No 1	PitAlarms/Warnings2.9	227	System
Combi alarm No 2	PitAlarms/Warnings2.10	227	System
Combi alarm No 3	PitAlarms/Warnings2.11	227	System
Combi alarm No 4	PitAlarms/Warnings2.12	227	System
Signal fault, user-defined sensor 1	PitAlarms/Warnings2.13	188	User-defined sensor, analog input 1
Signal fault, user-defined sensor 2	PitAlarms/Warnings2.14	188	User-defined sensor, analog input 2
Signal fault, user-defined sensor 3	PitAlarms/Warnings2.15	188	User-defined sensor, analog input 3
Pit alarms 3 (register 00212), Pit warnings 3 (register 00215)			
Discharge pressure sensor signal fault	PitAlarms/Warnings3.0	168	AI (Pressure sensor)
Water on floor alarm	PitAlarms/Warnings3.1	229	System
Gas detected alarm	PitAlarms/Warnings3.2	235	System
Uster event 1 alarm	PitAlarms/Warnings3.3	249	System
Uster event 2 alarm	PitAlarms/Warnings3.4	250	System
Uster event 3 alarm	PitAlarms/Warnings3.5	251	System
Uster event 4 alarm	PitAlarms/Warnings3.6	252	System
H2S signal sensor fault	PitAlarms/Warnings3.7	118	
RESERVED	PitAlarms/Warnings3.8-15		
Pit alarms 4 (register 00269), Pit warnings 4 (register 00270)			
Dosing pump over pressure alarm	PitAlarms/Warnings4.0	210	Dosing pump

Description	Data item	Code	Event source
Dosing pump mean pressure to low (Under pressure)	PitAlarms/Warnings4.1	211	Dosing pump
Gas in dosing pump head, deaerating problem	PitAlarms/Warnings4.2	35	Dosing pump
Dosing pump cavitation	PitAlarms/Warnings4.3	208	Dosing pump
Dosing pump pressure valve leakage	PitAlarms/Warnings4.4	36	Dosing pump
Dosing pump suction valve leakage	PitAlarms/Warnings4.5	37	Dosing pump
Dosing pump venting valve defect	PitAlarms/Warnings4.6	38	Dosing pump
Dosing pump time for service is exceed	PitAlarms/Warnings4.7	12	Dosing pump
Dosing pump soon time for service	PitAlarms/Warnings4.8	33	Dosing pump
Dosing pump capacity too low (Performance requirement not met)	PitAlarms/Warnings4.9	17	Dosing pump
Dosing pump diaphragm break	PitAlarms/Warnings4.10	19	Dosing pump
Dosing pump blocked motor/pump	PitAlarms/Warnings4.11	51	Dosing pump
Dosing pump pre-empty tank	PitAlarms/Warnings4.12	206	Dosing pump
Dosing pump empty tank (Dry Running)	PitAlarms/Warnings4.13	57	Dosing pump
Dosing pump cable breakdown on Flow Monitor (Flow sensor signal fault)	PitAlarms/Warnings4.14	169	Dosing pump
Dosing pump Cable breakdown on Analogue (Reference input signal fault)	PitAlarms/Warnings4.15	47	Dosing pump

Description	Data item	Code	Event source
Pump alarms 1 (registers 00423 (pump 1), 00473 (pump 2), 00523 (pump 3), 00573 (pump 4), 00623 (pump 5), 00673 (pump 6))			
Pump warnings 1 (registers 00426 (pump 1), 00476 (pump 2), 00526 (pump 3), 00576 (pump 4), 00626 (pump 5), 00676 (pump 6))			
Motor temperature alarm, PTC1	PumpAlarms/warnings1.0	69	IO 111, pump No [1; 6]
Motor temperature alarm, PTC2	PumpAlarms/warnings1.1	70	IO 351B/MP 204/CUE, pump No [1; 6]
Motor stator temperature high (T1, Pt1000/Pt100)	PumpAlarms/warnings1.2	64	IO 111/CUE, pump No [1; 6]
Motor stator temperature high (T2, Pt1000/Pt100)	PumpAlarms/warnings1.3	71	MP 204, pump No [1; 6]
Motor support bearing temperature high (Pt100)	PumpAlarms/warnings1.4	145	IO 111, pump No [1; 6]
Motor main bearing temperature high (Pt100)	PumpAlarms/Warnings1.5	146	IO 111, pump No [1; 6]
Motor insulation resistance low	PumpAlarms/Warnings1.6	20	IO 111/MP 204, pump No [1; 6]
Motor low voltage (no voltage)	PumpAlarms/Warnings1.7	40	MP 204/CUE, pump No [1; 6]
Motor high voltage	PumpAlarms/Warnings1.8	32	MP 204/CUE, pump No [1; 6]
Motor phase sequence reversal	PumpAlarms/Warnings1.9	9	MP 204, pump No [1; 6]
Motor overload (maximum current)	PumpAlarms/Warnings1.10	48	AI/MP 204/CUE, pump No [1; 6]
Motor underload (minimum current)	PumpAlarms/Warnings1.11	56	AI/MP 204, pump No [1; 6]
Motor protector test trip	PumpAlarms/Warnings1.12	27	DI/MP 204, pump No [1; 6]
Motor missing phase	PumpAlarms/Warnings1.13	2	MP 204/CUE, pump No [1; 6]
Motor current asymmetry	PumpAlarms/Warnings1.14	111	MP 204, pump No [1; 6]
Load continues even if the motor relay is off	PumpAlarms/Warnings1.15	26	MP 204, pump No [1; 6]
Pump alarms 2 (registers 00424 (pump 1), 00474 (pump 2), 00524 (pump 3), 00574 (pump 4), 00624 (pump 5), 00674 (pump 6))			
Pump warnings 2 (registers 00427 (pump 1), 00477 (pump 2), 00527 (pump 3), 00577 (pump 4), 00627 (pump 5), 00677 (pump 6))			
Motor protector commanded (test) trip	PumpAlarms/Warnings2.0	18	MP 204, pump No [1; 6]
Common phase error	PumpAlarms/Warnings2.1	241	DI/CUE, pump No [1; 6]
Motor moisture switch	PumpAlarms/Warnings2.2	22	IO 111, pump No [1; 6]
Motor/pump vibration high	PumpAlarms/Warnings2.3	24	IO 111, pump No [1; 6]
Motor water-in-oil content too high (water in oil)	PumpAlarms/Warnings2.4	11	AI/IO 111, pump No [1; 6]
Motor fault in mains supply	PumpAlarms/Warnings2.5	6	DI, pump No [1; 6]
Motor contactor feedback fault	PumpAlarms/Warnings2.6	220	DI, pump No [1; 6]
Motor max. starts per hour limit exceeded	PumpAlarms/Warnings2.7	21	System, pump No [1; 6]
Motor operating time service limit exceeded	PumpAlarms/Warnings2.8	12	Pump No [1; 6]
Too many pump auto-restarts (per 24 h)	PumpAlarms/Warnings2.9	4	MP 204, pump No [1; 6]
Pump low flow	PumpAlarms/Warnings2.10	58	Pump No [1; 6]
Pump max. continuous runtime limit exceeded	PumpAlarms/Warnings2.11	245	System, pump No [1; 6]
Motor cos ϕ too high	PumpAlarms/Warnings2.12	112	MP 204, pump No [1; 6]
Motor cos ϕ too low	PumpAlarms/Warnings2.13	113	MP 204, pump No [1; 6]
Pump alarms 3 (registers 00425 (pump 1), 00475 (pump 2), 00525 (pump 3), 00575 (pump 4), 00625 (pump 5), 00675 (pump 6))			
Pump warnings 3 (registers 00428 (pump 1), 00478 (pump 2), 00528 (pump 3), 00578 (pump 4), 00628 (pump 5), 00678 (pump 6))			
Pump malfunction due to auxiliary component fault	PumpAlarms/Warnings3.0	224	Pump No [1; 6]
Communication fault, pump module	PumpAlarms/Warnings3.1	225	IO 111, pump No [1; 6]
On/Off/Auto switch fault	PumpAlarms/Warnings3.2	244	DI, pump No [1; 6]
Signal fault, Pt100 sensor	PumpAlarms/Warnings3.3	175	IO 111/MP 204/CUE, pump No [1; 6]
Signal fault, PTC sensor	PumpAlarms/Warnings3.4	181	IO 111, pump No [1; 6]
Signal fault, water-in-oil (WIO)	PumpAlarms/Warnings3.5	170	AI, pump No [1; 6]
Signal fault, bearing temperature sensor (Pt100), general or top bearing	PumpAlarms/Warnings3.6	179	IO 111, pump No [1; 6]
Signal fault, bearing temperature sensor (Pt100), middle bearing	PumpAlarms/Warnings3.7	180	IO 111, pump No [1; 6]
Communication fault, pump	PumpAlarms/Warnings3.8	10	IO 111, pump No [1; 6]
Setup conflict	PumpAlarms/Warnings3.9	25	IO 111, pump No [1; 6]
General hardware fault	PumpAlarms/Warnings3.10	72	IO 111/MP 204, pump No [1; 6]
Signal fault, motor current sensor	PumpAlarms/Warnings3.11	88	AI, pump No [1; 6]
Inrush fault	PumpAlarms/Warnings3.12	155	CUE, pump No [1; 6]
Signal fault, sensor 2	PumpAlarms/Warnings3.13	93	CUE, pump No [1; 6]
Motor bearing temperature high (Pt100) in drive end (DE)	PumpAlarms/Warnings3.14	148	CUE, pump No [1; 6]
Motor bearing temperature high (Pt100) in non-drive end (NDE)	PumpAlarms/Warnings3.15	149	CUE, pump No [1; 6]

Description	Data item	Code	Event source
Pump alarms 4 (registers 00441 (pump 1), 00491 (pump 2), 00541 (pump 3), 00591 (pump 4), 00641 (pump 5), 00691 (pump 6))			
Pump warnings 4 (registers 00442 (pump 1), 00492 (pump 2), 00542 (pump 3), 00592 (pump 4), 00642 (pump 5), 00692 (pump 6))			
Leakage current	PumpAlarms/Warnings4.0	1	CUE, pump No [1; 6]
Signal fault, temperature 3 sensor	PumpAlarms/Warnings4.1	176	CUE, pump No [1; 6]
Signal fault, (feedback) sensor 1	PumpAlarms/Warnings4.2	89	CUE, pump No [1; 6]
Overcurrent	PumpAlarms/Warnings4.3	49	CUE, pump No [1; 6]
Motor current protection activated	PumpAlarms/Warnings4.4	55	CUE, pump No [1; 6]
Change bearings	PumpAlarms/Warnings4.5	30	CUE, pump No [1; 6]
Lubricate bearings	PumpAlarms/Warnings4.6	240	CUE, pump No [1; 6]
Automatic motor model recognition failed	PumpAlarms/Warnings4.7	242	CUE, pump No [1; 6]
Communication fault, twin-head pump	PumpAlarms/Warnings4.8	77	CUE, pump No [1; 6]
Signal fault, temperature 1 sensor	PumpAlarms/Warnings4.9	91	CUE, pump No [1; 6]
Dry running	PumpAlarms/Warnings4.10	57	CUE, pump No [1; 6]
VFD not ready	PumpAlarms/Warnings4.11	213	IO 351B, pump No [1; 6]
Other	PumpAlarms/Warnings4.12	16	CUE, pump No [1; 6]
Pump blocked	PumpAlarms/Warnings4.13	51	CUE, pump No [1; 6]
Power sensor signal fault	PumpAlarms/Warnings4.14	186	AI, pump No [1; 6]

12. Modbus RTU telegram examples

Note CRC fields are not shown in the following examples.

The Modbus data model states that registers numbered X are addressed in telegrams as X - 1, e.g. register 00104 (setpoint) is addressed as 00103 in a Modbus telegram.

Note

12.1 Modbus telegram overview

The maximum size of a Modbus RTU telegram is 256 bytes. Telegrams must be separated by a silent interval of at least 3.5 character times.

The standard Modbus RTU telegram format is shown in the table below.

Slave address	Function code	Data	CRC
1 byte	1 byte	0 to 252 bytes	2 bytes

A telegram starts with the slave address occupying one byte. Then comes a variable-size data field. For each telegram, a CRC is calculated and appended to the telegram (two bytes total). All bytes in the telegram, except for the CRC itself, are included in the check.

Note The CRC bytes are not shown in the examples in the following sections.

12.2 Read holding registers (0x03)

This function is used for reading holding registers from the slave. The request telegram specifies the starting address (the address of the first register to be read) and the number of holding registers to read. In the telegram, register addresses start from zero, meaning that registers numbered 0-16 are addressed as 0-15.

Example of request from master to slave

Field	Value
Address	0x01
Function code	0x03
Start address HI	0x00
Start address LO	0x6B
Quantity HI	0x00
Quantity LO	0x03

In the request, the slave with address 1 is asked to deliver three contiguous registers starting from address 0x006b = 107 (meaning register 108).

Example of response from slave to master

Field	Value
Address	0x01
Function code	0x03
Byte count	0x06
Register 108 HI	0x00
Register 108 LO	0x01
Register 109 HI	0x00
Register 109 LO	0x01
Register 110 HI	0x00
Register 110 LO	0x01

In the response, the byte count is six since there are three registers of two bytes. All three registers hold the value of 0x0001.

12.3 Read input registers (0x04)

This function is used for reading input registers from the slave. Input registers are read-only registers by definition. The request telegram specifies the starting address (the address of the first register to be read) and the number of holding registers to read. In the telegram, register addresses start from zero, meaning that registers numbered 0-16 are addressed as 0-15.

Example of request from master to slave

Field	Value
Address	0x01
Function code	0x04
Start address HI	0x10
Start address LO	0x10
Quantity HI	0x00
Quantity LO	0x03

In the request, the slave with address 1 is asked to deliver three contiguous registers starting from address 0x1010 = 4112 (meaning register 4113).

Example of response from slave to master

Field	Value
Address	0x01
Function code	0x04
Byte count	0x06
Register 4113 HI	0x22
Register 4113 LO	0x22
Register 4114 HI	0x22
Register 4114 LO	0x22
Register 4115 HI	0x22
Register 4115 LO	0x22

In the response, the byte count is six since there are three registers of two bytes. All three registers hold the value of 0x2222.

12.4 Write single register (0x06)

This function is used for writing a single holding register in the slave. The request telegram specifies the address of the register that is to be written. Register addresses start from zero, meaning that a register numbered 10 is addressed as 9.

The normal response is an echo of the request, indicating that the value was written.

Example of request from master to slave

Field	Value
Address	0x01
Function code	0x06
Address HI	0x10
Address LO	0x00
Value HI	0xAF
Value LO	0xFE

In the request, the slave with address 1 is asked to write the value of 0xAFFE to the register at address 0x1000.

Example of response from slave to master

Field	Value
Address	0x01
Function code	0x06
Address HI	0x10
Address LO	0x00
Value HI	0xAF
Value LO	0xFE

The response is an echo of the request.

12.5 Write multiple registers (0x10)

This function is used for writing a block of contiguous holding registers in the slave. Register addresses start from zero, meaning that a register numbered 100 is addressed as 99.

Example of request from master to slave

Field	Value
Address	0x01
Function code	0x10
Start address HI	0x00
Start address LO	0x20
Quantity HI	0x00
Quantity LO	0x02
Byte count	0x04
Register 33 HI	0x00
Register 33 LO	0x01
Register 34 HI	0xB0
Register 34 LO	0xB0

In the request, the slave with address 1 is asked to write the value of 0x0001 to the register at address 0x0020 and the value of 0xB0B0 to the register at address 0x0021.

Example of response from slave to master

Field	Value
Address	0x01
Function code	0x10
Start address HI	0x00
Start address LO	0x20
Quantity written HI	0x00
Quantity written LO	0x02

The response returns the function code, starting address and quantity of registers written.

12.6 Diagnostics (0x08)

This function provides a test for checking the communication system between the master and the Grundfos slave. It contains a single-byte subcode to identify the test to be performed.

The following subcodes are supported:

Subcode	Name
0x00	Return query data Data in this request are to be echoed in the response. The response must be identical to the request, so this function is often used to verify Modbus communication.
0x01	Restart communications All communication counters are cleared, and the device is restarted.
0x02	Return diagnostics register Returns the 16-bit diagnostics register. See section 12.7 Diagnostics register interpretation .
0x04	Force listen only Forces the device into listen-only mode. This effectively mutes the device, making it unable to communicate on the network. To bring the device back to normal mode, a "Restart communications" command (code 0x08, subcode 0x01) must be issued.
0x0A	Clear counters and diagnostics register Clears all counters and the diagnostics register (these are also cleared on power-up/restart).
0x0B	Return bus message count Returns the number of messages detected by the slave.
0x0C	Return bus CRC error count Returns the number of CRC errors in the slave.
0x0D	Return bus exception count Returns the number of Modbus exception responses that the slave has transmitted.
0x0E	Return slave message count Returns the number of messages that the slave has processed.
0x0F	Return slave no response count Returns the number of messages for which the slave has sent no response.
0x12	Return bus character overrun count Returns the number of overruns in the slave.
0x14	Clear overrun counter Clears the overrun counter (this is also cleared on power-up/restart).

Example of request from master to slave

Field	Value
Address	0x01
Function code	0x08
Subcode	0x00
Data	0xAB
Data	0xCD

The response is identical to the request.

Example of response from slave to master

Field	Value
Address	0x01
Function code	0x08
Subcode	0x00
Data	0xAB
Data	0xCD

12.7 Diagnostics register interpretation

The diagnostics register is interpreted as follows:

Bit	Description
0	Communication failure (with the Grundfos product).
1	EEPROM self-test failed (the test is carried out when system is booted).
2	Grundfos product not supported.
3	Modbus address offset is different from default value, i.e. it differs from 0.
4	Using software-defined Modbus transmission speed.
5	RESERVED
6	RESERVED
7	RESERVED
8	RESERVED
9	RESERVED
10	RESERVED
11	RESERVED
12	RESERVED
13	RESERVED
14	RESERVED
15	RESERVED

A bit value of 1 means true, unless otherwise specified. The diagnostics register is read using function code 0x08 and subcode 0x02.

13. Application example

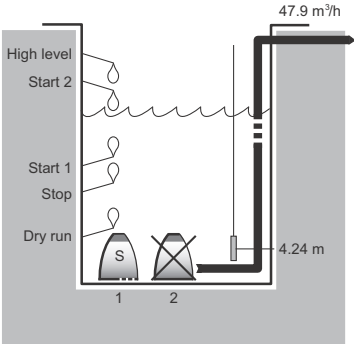

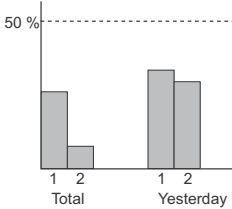
Pit operation	Pit status	Pump 1	Pump 2	Setup	Event log	Hour log	Data log
				<p>Alarm/warning</p> <ul style="list-style-type: none"> Grey Pump OK. Yellow Pump warning. Red Pump alarm (device alarm or monitoring fault). <p>Run/stop</p> <ul style="list-style-type: none"> Grey Pump not running. Green Pump running. <p>Manual</p> <ul style="list-style-type: none"> S Switch. D Display. R Remote. 	<p>Setup: Opens a display for configuration of all the control levels.</p> <p>Event log: Opens a display for viewing the SCADA event log.</p> <p>Hour log: Opens a display for viewing the hourly logged values 3 days backwards.</p> <p>Data log: Opens a display for viewing the configurable data log series.</p> <p>Crossover: The pump has been disabled.</p>		
<p>Pump 1</p> <p>Operating mode: Start from switch</p> <p>Average flow XXX.X m³/h</p> <p>Latest flow XXXXX m³/h</p> <p>Starts total XXXXX</p> <p>Starts yesterday XXXXX</p> <p>Starts today XXXXX</p> <p>Starts per hour XXXXX/h</p> <p>Opr. time total XXXXX/h : XX min.</p> <p>Opr. time yesterday XXXXX/h : XX min.</p> <p>Opr. time today XXXXX/h : XX min.</p> <p>Latest opr. time XXXXX/h : XX min.</p> <p>Time to service XXXXX/h</p>		<p>Pit status</p> <p>Water level XX.XX m</p> <p>Pit depth XX.XX m</p> <p>Actual flow XXX.XX m³/h</p> <p>Average flow XXX.XX m³/h</p> <p>Power XXX.XX kW</p> <p>Energy total XXXXXX kWh</p> <p>Energy yesterday XXXXXX kWh</p> <p>Energy today XXXXXX kWh</p> <p>Specific energy XX.XXX kWh/m³</p> <p>Operating time XXXXX h : XX min.</p> <p>Volume total XXXXX m³</p> <p>Volume yesterday XXXXX.X m³</p> <p>Volume today XXXXX.X m³</p> <p>Mixer starts per hour XXX.X /h</p>		<p>Pit operation</p> <p>Operating mode:</p> <p>Interlock from SCADA</p> <p>Custom relay</p> <p>Auto Interlock Alarm ack.</p> <p>Time Feb 26 2008 08.20</p> <p>Set time..</p>			
<p>Motor</p> <p>Temperature XXX °C</p> <p>Actual current XXX.X A</p> <p>Latest current XXX.X A</p> <p>Water in oil XX.X %</p>		<p>Overflow</p> <p>Total volume XXXXX m³</p> <p>Overflow time XXXXX h</p> <p>Number of overflows XXXXX</p> <p>Overflow volume yesterday XXXXX m³</p> <p>Overflow time yesterday XX h : XX min.</p> <p>No. of overflows yesterday XXX</p> <p>Overflow volume today XXXXX m³</p> <p>Overflow time today XX h : XX min.</p> <p>No. of overflows today XXX</p>					
<p>Remote pump control</p> <p>Stop Start Auto</p>							
<p>Active alarms/warnings</p> <p>Alarms None</p> <p>Warnings Water-in-oil sensor signal fault</p>		<p>Opr. time, simultaneous opr. of two pumps</p> 					
		<p>Active alarms/warnings</p> <p>Alarms None</p> <p>Warnings None</p>					

Fig. 26 Application example

13.1 Adaptation of pit graphics to installation values

- Pump object graphics (the shown register addresses are for pump 1):
 - Presence (pump object drawn or not)
Pump#Status.Presence (register 00401, bit 0)
 - Disabled (cross marking) Pump#Status.
Disabled (register 00401, bit 11)
 - Pumping mode (Running = green, Stopped = grey)
Pump#Status.Running (register 00401, bit 1).
- Pump top colour (the shown register addresses are for pump 1):
 - Red if an alarm is present in Pump#Status.Alarm (register 00401, bit 4) or a monitoring fault (fault in auxiliary device) in Pump#Status.MonitoringFault (register 00401, bit 2)
 - Yellow if a warning is present in Pump#Status.Warning (register 00401, bit 3)
 - Grey if everything is OK for the pump in question.
- Pump control source (the shown register addresses are for pump 1): Pump#ControlSource (register 00402 [enum]). Letter marking of pump icon:
 - Auto = no marking
 - Switch = "S"
 - Display = "D"
 - Remote = "R".
- Number of float switches: NumberOfFloatSwitches (register 00217).
- Function of float switches 1 to 5:
 - FloatSwitch1Function (register 00219 [enum])
 - FloatSwitch2Function (register 00220 [enum])
 - FloatSwitch3Function (register 00221 [enum])
 - FloatSwitch4Function (register 00222 [enum])
 - FloatSwitch5Function (register 00223 [enum]).
- Displayed switch position:
 - Switch on (1) = up
 - Switch off (0) = down.
- Value of float switches 1 to 5: FloatSwitchesStatus (register 00218).
- Type of level and flow measurements: PitSensors (register 00224 [enum]).
- Water level: PitWaterLevel (register 00301 [0.01 m]) shown as a level sensor value and as a drawing of the water surface. If a level sensor is not present, the level can be expressed relative to the position of the installed float switches: PitSwitchWaterLevel (register 00302 [enum]).
- Flow value:
 - PitFlowOut (register 00306 [0.1 l/s]) or
 - PitAverageFlowOut (register 00307 [0.1 l/s]).

13.2 Main status

13.2.1 Pit operation display

Note

Before trying to operate the CU 361 control unit, remember to write the ScadaPinCode (register 00109) if PIN code protection has been enabled.

- Operating mode: OperatingMode (register 00203 [enum]).
- The "Interlock" button will issue the PitControl.InterlockPit (register 00101, bit 3) command, which brings the pit into operating mode "Interlocked", and the "Auto" button will issue the PitControl.AutoPit (register 00101, bit 4) command, which brings it back into one of the automation modes.
- The "Alarm Ack" button will issue the PitControl.ResetAlarm (register 00101, bit 0) command, which will clear any alarm/warning indication (not logs) which does not represent a present alarm/warning condition, and will make the system assume automation control without any auto-acknowledgement delay.
- The "Custom relay" buttons are "radio buttons". Selecting "On" will issue the value 1 to data item SetCustomRelay (register 00102), and selecting "Off" will issue the value 0.
- Time (real-time clock in the CU 36X control unit):
 - Reading and displaying the time is done by using RealTimeClockHI/LO (register 00228/00229 [unix time]) or RtcSecond (register 00230), RtcMinute (register 00231), RtcHour (register 00232), RtcDay (register 00233), RtcMonth (register 00234), RtcYear (register 00235) if this time format is preferred.
 - The "Set time..." button opens a dialogue that can write the data item SetRealTimeClockHI/LO (register 00112/00113 [unix time]).

13.2.2 Pit status display

- Water level: PitWaterLevel (register 00301 [0.01 m]).
- Pit depth: PitDepth (register 00303 [0.01 m]).
- Actual flow: PitFlowOut (register 00306 [0.1 l/s]).
- Average flow: PitAverageFlowOut (register 00307).
- Total power consumption: PitPowerHI/LO (register 00308/00309 [1 W]).
- Total energy consumption: PitEnergyHI/LO (register 00310/00311 [0.1 kWh]).
- Energy consumption yesterday: PitEnergyYesterday (register 00312 [0.1 kWh]).
- Energy consumption today: PitEnergyToday (register 00313 [0.1 kWh]).
- Total pumping efficiency: PitSpecificEnergy (register 00314 [1 Wh/m³]).
- Total operating time: PitOperatingTimeHI/LO (register 00329/00330 [1 min.]).
- Total pumped volume: PitPumpedVolumeHI/LO (register 00315/00316 [0.1 m³]).
- Pumped volume yesterday: PitPumpedVolumeYesterday (register 00317 [0.1 m³]).
- Pumped volume today: PitPumpedVolumeToday (register 00318 [0.1 m³]).
- Number of mixer starts per hour: PitMixerStartsPerHour (register 00319).
- Total overflow volume: PitOverflowVolume (register 00320 [0.1 m³]).
- Overflow volume yesterday (24 h): PitOverflowVolumeYesterday (register 00321 [0.1 m³]).
- Overflow volume today: PitOverflowVolumeToday (register 00322 [0.1 m³]).
- Total overflow time: PitOverflowTime (register 00323 [1 min.]).
- Overflow time yesterday (24 h): PitOverflowTimeYesterday (register 00324 [1 min.]).
- Overflow time today (24 h): PitOverflowTimeToday (register 00325 [1 min.]).
- Total number of overflows: PitOverflowCounter (register 00326).
- Number of overflows yesterday (24 h): PitOverflowCounterYesterday (register 00327).
- Number of overflows today (24 h): PitOverflowCounterToday (register 00328).
- One-pump operating time: (Pump1OprTimeHI/LO + Pump2OprTimeHI/LO - Pit2PumpsOprTimeHI/LO).
- Two-pump operating time (two pumps operating simultaneously): Pit2PumpsOprTimeHI/LO (register 00331/00332 [1 min.]).
- One-pump operating time yesterday (24 h): (Pump1OprTimeYesterday + Pump2OprTimeYesterday - Pit2PumpsOprTimeYesterday).
- Two-pump operating time yesterday (two pumps operating simultaneously): Pit2PumpsOprTimeYesterday (register 00333 [1 min.]).
- Calculation of relative operating times:
 - 1 pump = (Pump1OprTimeHI/LO + Pump2OprTimeHI/LO - Pit2PumpsOprTimeHI/LO) / PitOperatingTimeHI/LO (register 00329/00330)
 - 2 pumps = Pit2PumpsOprTimeHI/LO / PitOperatingTimeHI/LO.
- Active alarms and warnings:
 - PitAlarms1 (register 00210 [bits])
 - PitAlarms2 (register 00211 [bits])
 - PitAlarms3 (register 00212 [bits])
 - PitWarnings1 (register 00213 [bits])
 - PitWarnings2 (register 00214 [bits])
 - PitWarnings3 (register 00215 [bits]).

13.2.3 Pump status display

The data item registers mentioned below are for pump 1. Adding 50 to the register addresses will give you the equivalent register addresses for pump 2.


- Operating mode (Started, Stopped): Pump1Status.Running (register 00401, bit 1).
- Control source (Auto, Switch, Display, Remote): Pump1ControlSource (register 00402 [enum]).

Note

The above information can be combined in a text like "Operating mode" from "Control source".

- Average flow: Pump1Flow (register 00416 [0.1 l/s]).
- Latest measured flow: Pump1LatestFlow (register 00417 [0.1 l/s]).
- Total number of pump starts: Pump1StartCounterHI/LO (register 00411/00412).
- Number of pump starts yesterday (24 h): Pump1StartCounterYesterday (register 00413).
- Number of pump starts today: Pump1StartCounterToday (register 00414).
- Number of pump starts per hour: Pump1StartsPerHour (register 00415).
- Total operating time: Pump1OprTimeHI/LO (register 00404/00405 [1 min.]).
- Operating time yesterday (24 h): Pump1OprTimeYesterday (register 00408 [1 min.]).
- Operating time today: Pump1OprTimeToday (register 00409 [1 min.]).
- Latest operating time: Pump1LatestOprTime (register 00410 [1 s]).
- Time to service: Pump1TimeToServiceHI/LO (register 00406/00407 [1 min.]).
- Motor temperature: Pump1MotorTemperature1 (register 00429 [1 °C]).
- Motor current:
 - Pump1Current (register 00418 [0.1 A])
 - Pump1LatestCurrent (register 00419 [0.1 A]).
- Motor, water in oil: Pump1WaterInOil (register 00422 [0.1 %]).
- Commanding the pumps (Manual from Remote):
 - Stop will issue the value PitPump1Control (register 00103 [enum]) = 2, which brings the pump into operating mode Stop from Remote.
 - Start will issue the value PitPump1Control (register 00103 [enum]) = 1, which brings the pump into operating mode Start from Remote.
 - Auto will issue the value PitPump1Control (register 00103 [enum]) = 0, which brings the pump back into its previous state.

- See fig. 27 for logic and priority for the pump control, and note that the control sources "Switch" and "Display" have higher priority than Remote.

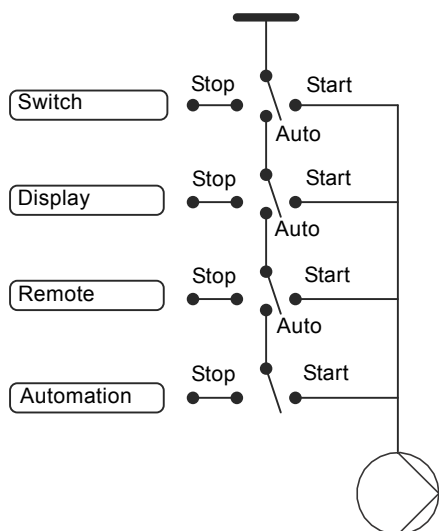

TMD4 3680 4808

Fig. 27 Logic and priority for the pump control

Note Before trying to operate the pumps, remember to write the ScadaPinCode (register 00109) if PIN code protection has been enabled.

- Active alarms and warnings:
 - Pump1Alarms1 (register 00423 [bits])
 - Pump1Alarms2 (register 00424 [bits])
 - Pump1Alarms3 (register 00425 [bits])
 - Pump1Warnings1 (register 00426 [bits])
 - Pump1Warnings2 (register 00427 [bits])
 - Pump1Warnings3 (register 00428 [bits]).

Display bar

The blue bar at the top of the screen is used to open and close specific displays that can show specific data and change settings of the pit control system.

The descriptions below refer to fig. 26.

- The "Pit operation" button opens the "Pit operation" display.
- The "Pit status" button opens the "Pit status" display.
- The "Pump 1" and "Pump 2" buttons open the "Pump 1" and "Pump 2" displays.
- The "Setup" button opens the display for showing and changing all the pump control levels. It might look as shown below.

Pumping control levels			
Overflow level	XXX cm	Cancel	Update
High level	XXX cm		
Alarm level	XXX cm		
Dry-running level	XXX cm		
Foam-draining level	XXX cm		
		Pump 1	Pump 2
Start level	XXX cm	XXX cm	
Stop level	XXX cm	XXX cm	

- Overflow level: SetOverflowLevel (register 00121 [0.01 m]).
- High level: SetHighLevel (register 00122 [0.01 m]).
- Alarm level: SetAlarmLevel (register 00123 [0.01 m]).
- Dry-running level: SetDryRunningLevel (register 00124 [0.01 m]).
- Foam-draining level: SetFoamDrainingLevel (register 00125 [0.01 m]).
- Start levels for pumps 1 and 2:
 - SetStartLevelPump1 (register 00126 [0.01 m])
 - SetStartLevelPump2 (register 00128 [0.01 m]).
- Stop levels for pumps 1 and 2:
 - SetStopLevelPump1 (register 00127 [0.01 m])
 - SetStopLevelPump2 (register 00129 [0.01 m]).

Note These registers only reflect the actual values if the WriteSetup.ReadWriteSeparation (register 00006) bit is set to 0. Otherwise, reading back the actual values has to take place via the corresponding read-only registers, e.g. OverflowLevel (register 00240).

Note Before trying to change the settings, remember to write the ScadaPinCode (register 00109) if PIN code protection has been enabled.

- The "Event log" button opens the display for showing a scrollable list of event records (alarms and warnings). The event log in the CU 36X contains the 50 latest events with the newest one at the top.

Each record takes up seven registers and has the following format:

<ID> <Code> <Description> <Source> <Type> <Time stamp>

The complete event log takes up 7 x 50 = 350 registers and is located in the register area register 06001 to 06351.

An example is shown below

Event log

ID	Code	Description	Source	Type	Time
341	192	Overflow	System	Alarm appearing	05-08-2008 09:25
342	192	Overflow	System	Alarm disappearing	05-08-2008 11:09
343	222	Time for service, mixer	Mixer	Warning appearing	07-08-2008 02:38
344	6	Motor insulation resistance low	Pump 2	Warning appearing	11-08-2008 08:24

Note The time stamp is in Unix time format. In the display example, it has been converted to a human-readable format.

Hour log

- The "Hour log" button opens the display for showing the hour log. The table below illustrates the structure of the data in the Modbus registers and a way of visualising them.

Data	Hour						Registers
	1	2	3	...	71	72	
Pit overflow time [min.]	0	4	6		0	0	02001-02072
Number of pit overflows	0	1	3		0	0	02073-02144
Overflow volume [0.1 m ³]	0	12	34		0	0	02145-02216
Specific energy [Wh/m ³]	240	262	198		308	287	02217-02288
Pumped volume [m ³]	67	69	72		45	23	02289-02360
Energy consumption [0.1 kWh]	342	456	514		178	123	02361-02432
Operating time (two pumps operating simultaneously) [min.]	8	20	48		0	4	02433-02504
Pump 1, operating time [min.]	23	56	60		14	12	02793-02864
Pump 1, number of starts	4	1	1		4	3	02865-02936
Pump 1, average flow [0.1 l/s]	452	468	458		433	446	02937-03008
Pump 1, average current [0.1 A]	252	248	241		240	242	03009-03080
Pump 2, operating time [min.]	21	52	63		15	11	03081-03152
Pump 2, number of starts	7	2	1		2	3	03153-03224
Pump 2, average flow [0.1 l/s]	458	451	471		438	444	03225-03296
Pump 2, average current [0.1 A]	250	239	240		229	240	03297-03368

Data Log

- The "Data log" button opens the display for showing the configurable data log.

The illustrations in fig. 28 show a way of visualising the pit water level, motor current for pump 1 and motor current for pump 2.

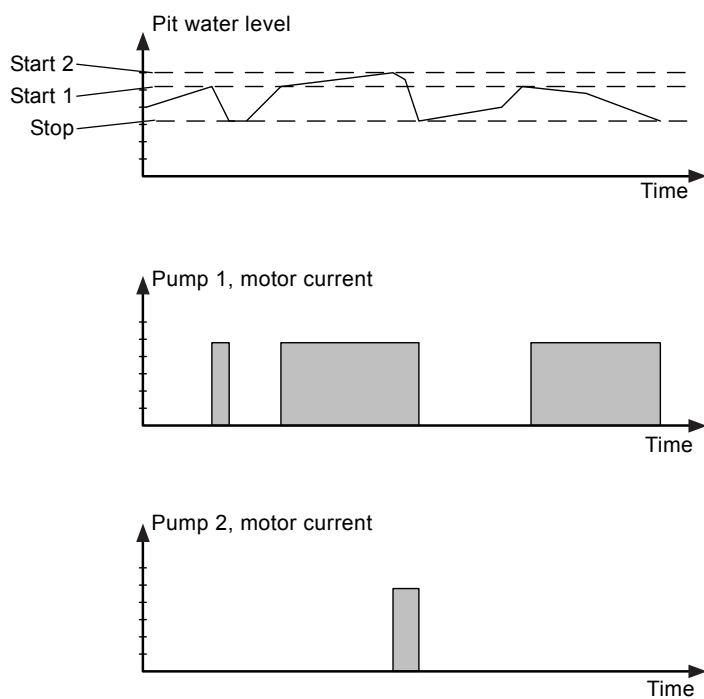


Fig. 28 Data logging

14. Modbus function code overview

The supported function codes are shown in the table below:

Type	Code	Hex	Name
16-bit data (registers)	03	0x03	Read holding registers
	04	0x04	Read input registers
	06	0x06	Write single register
	16	0x10	Write multiple registers
Diagnostics	08	08	Diagnostics See section 12.6 Diagnostics (0x08) for subcodes.

Note Reading or writing coils are not supported.

The same data are available in both holding registers and input registers, meaning that either function (0x03 or 0x04) can be used for reading data.

15. Modbus telegram examples

Note CRC fields are not shown in the following examples.

The Modbus data model states that registers numbered X are addressed in telegrams as X - 1, e.g. register 00104 (setpoint) is addressed as 00103 in a Modbus telegram.

Note

15.1 Diagnostics: return query data

This function is useful to ensure that the communication path and slave configuration are correct. It will echo the request in the response.

In the example, slave address 0x01 is used.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x08	Diagnostics
Subcode	0x00	Echo request
Data	0xAB	Test data
Data	0xCD	Test data

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x08	Diagnostics
Subcode	0x00	Echo request
Data	0xAB	Test data
Data	0xCD	Test data

If there is no response from the slave, see section [16.1.2 CIM 200 Modbus communication faults](#).

15.2 Reading the CIM configuration register block

This section shows how to read the CIM configuration register block (a total of four registers).

In the example, slave address 0x01 is used.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x04	Read input registers
Start address HI	0x00	Start address
Start address LO	0x00	= 0x0001
Quantity HI	0x00	Number of registers
Quantity LO	0x04	= 0x0004

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x04	Read input registers
Byte count	0x08	8 bytes follow
00001 HI	0x0A	SlaveMinimumReplyDelay
00001 LO	0x00	= 0x000A (10 ms)
00002 HI	0x00	RegisterOffset
00002 LO	0x00	= 0x0000 (no offset)
00003 HI	0x00	Reserved value
00003 LO	0x00	= 0x0000
00004 HI	0x00	ModbusBitRate
00004 LO	0x04	= 0x0004 (19200, software-defined)

If there is no response from the slave, see section [16.1.2 CIM 200 Modbus communication faults](#).

15.3 Reading the pit water level

This section shows how to read and interpret the water level of the pit.

In the example, slave address 0x01 is used.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x04	Read input registers
Start address HI	0x01	Start address (00301)
Start address LO	0x2C	= 0x012D
Quantity HI	0x00	Number of registers
Quantity LO	0x01	= 0x0001

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x04	Read input registers
Byte count	0x02	2 bytes follow
00301 HI	0x00	Pit water level
00301 LO	0xDC	= 0x00DC (220)

A pit water level value of 220 [0.01 m] equals a water level of 2.20 metres.

If there is no response from the slave, see section [16.1.2 CIM 200 Modbus communication faults](#).

15.4 Reading the pit alarms

This section shows how to read and interpret the three alarm registers of the pit. The pit alarms start at Modbus register address 209 = 0x00D1.

In the example, slave address 0x01 is used.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x04	Read input registers
Start address HI	0x00	Start address (00209)
Start address LO	0xD0	= 0x00D1
Quantity HI	0x00	Number of registers
Quantity LO	0x03	= 0x0003

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x04	Read input registers
Byte count	0x06	6 bytes follow
00209 HI	0x00	Pit alarms 1
00209 LO	0x08	
00210 HI	0x00	Pit alarms 2
00210 LO	0x00	
00211 HI	0x00	Pit alarms 3
00211 LO	0x00	

If there is no response from the slave, see section [16.1.2 CIM 200 Modbus communication faults](#).

When reading the three pit alarm registers, the following data becomes available:

Pit alarms 1 = 0b 0000 0000 0000 1000

Pit alarms 2 = 0b 0000 0000 0000 0000

Pit alarms 3 = 0b 0000 0000 0000 0000.

As seen from the alarms table, the bit for dry-running alarm is set in pit alarms 1.

15.5 Setting pit auto mode

This section shows how to set "Auto" mode in the CU 36X.

In the example, slave address 0x01 is used. Note that the register is reset by the CIM 200 when the command has been acknowledged. The value is only triggered on rising edge.

The register on address 00101 is set to the following:

Bit	Description
0	0 (do not reset)
1	0 (do not reset alarms)
2	0 (do not reset history)
3	0 (do not reset event log)
4	0 (do not interlock the pit)
5	1 (set pit to "Auto" mode)

Hence the value to set is 0b000000000100000 = 0x0020.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	ControlRegister address
Start address LO	0x64	= 00101 (0x0065)
Value HI	0x00	ControlRegister value
Value LO	0x20	= 32 (0x0020)

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	ControlRegister address
Start address LO	0x64	= 00101 (0x0065)
Value HI	0x00	ControlRegister value
Value LO	0x03	= 32 (0x0020)

If there is no response from the slave, see section [16.1.2 CIM 200 Modbus communication faults](#).

Note Writing control bits that are mutual exclusive may lead to unpredictable results.

15.6 Interlocking the pit

This shows how to interlock the CU 36X.

In the example, slave address 0x01 is used. Note that the register is reset by the CIM 200 when the command has been acknowledged. The value is only triggered on rising edge.

The register on address 00101 is set to the following:

Bit	Description
0	0 (do not reset)
1	0 (do not reset alarms)
2	0 (do not reset history)
3	0 (do not reset event log)
4	1 (interlock the pit)
5	0 (set pit in "Auto" mode)

Hence the value to set is 0b000000000010000 = decimal 16 = 0x0010.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	ControlRegister address
Start address LO	0x64	= 00101 (0x0065)
Value HI	0x00	ControlRegister value
Value LO	0x10	= 16 (0x0010)

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	ControlRegister address
Start address LO	0x64	= 00101 (0x0065)
Value HI	0x00	ControlRegister value
Value LO	0x10	= 16 (0x0010)

If there is no response from the slave, see section [16.1.2 CIM 200 Modbus communication faults](#).

16. Fault finding

16.1 CIM 200

Faults in a CIM/ 200 can be detected by observing the status of the two communication LEDs. See the table below and section [4. Specifications](#).

16.1.1 LED status

Fault (LED status)	Possible cause	Remedy
1. Both LEDs (LED1 and LED2) remain off when the power supply is connected.	a) The CIM 250 is fitted incorrectly in the CU 36X.	Ensure that the CIM 250 is fitted/connected correctly.
	b) The CIM 200 is defective.	Replace the CIM 200.
2. The LED for internal communication (LED2) is flashing red.	a) No internal communication between the CIM 200 and the Grundfos product.	Ensure that the CIM 200 is fitted correctly in the Grundfos CU36X.
3. The LED for internal communication (LED2) is constantly red.	a) The CIM 200 does not support the Grundfos product connected.	Contact the nearest Grundfos company.
4. The Modbus LED (LED1) is constantly red.	a) Fault in the CIM 200 Modbus configuration.	<ul style="list-style-type: none"> • Check the transmission speed (switches SW4 and SW5). If the switches are set to "software-defined", an invalid value may have been set via Modbus. Try one of the preselected transmission speeds, e.g. 19200 bits/s. • Check that the Modbus address (switches SW6 and SW7) has a valid value [1-247].
		<ul style="list-style-type: none"> • Check the transmission speed (switches SW4 and SW5). See section 5.1 Setting the Modbus transmission speed. • Check the parity setting (switch SW3). See section 5.2 Setting the parity. • Check the cable connection between the CIM 200 and the Modbus network. • Check the termination resistor settings (switches SW1 and SW2). See section 5.4 Termination resistor.
5. The Modbus LED (LED1) is flashing red.	a) Fault in the Modbus communication (fault in parity or cyclic redundancy check).	<ul style="list-style-type: none"> • Check the transmission speed (switches SW4 and SW5). See section 5.1 Setting the Modbus transmission speed. • Check the parity setting (switch SW3). See section 5.2 Setting the parity. • Check the cable connection between the CIM 200 and the Modbus network. • Check the termination resistor settings (switches SW1 and SW2). See section 5.4 Termination resistor.

16.1.2 CIM 200 Modbus communication faults

Fault	Possible cause	Remedy
1. The slave does not respond to telegrams.	a) Configuration or wiring error.	<ul style="list-style-type: none"> • Check the visual diagnostics on the Modbus slave. Is the Grundfos GENIbus LED flashing green and the Modbus LED off or flashing green? • Ensure that the cable between the Modbus master and the Modbus slave is connected correctly. See section 5. Modbus RTU, CIM 200 setup for wiring recommendations. • Ensure that the slave address is configured correctly, and that the correct slave address is used in the Modbus master poll. See section 5.3 Modbus address selection for slave address selection. • Ensure that the transmission speed and stop bit/parity settings are configured correctly in both master and slave. • Ensure that each end of the Modbus trunk cable is terminated, if necessary. See section 5.4 Termination resistor for line termination of the Grundfos slave. • Ensure that the bus topology for a Modbus network is correct.
	b) The slave may be in listen-only mode.	Either send a restart communications diagnostics command, or restart the Grundfos product manually.
	c) If the holding register of address 00001 "SlaveMinimumReplyDelay" is set too high, the master may time out before receiving the response from the slave.	Increase the timeout span in the master in order to communicate.
2. The slave responds with exception response 0x01: "Invalid function".	a) The master is trying to use an unsupported function in the CIM.	See section 8. Modbus function code overview for supported function codes. Note that reading and writing coils are not supported, so only register functions and diagnostics will be valid.
3. The slave responds with exception response 0x02: "Invalid data address".	a) The master is trying to read or write an invalid data address. If a master tries to read register addresses that are not listed in the tables, the slave will respond with this exception response. Some masters may automatically try to read large blocks in one telegram, which will cause problems if some of the registers in the block are not supported. An example would be reading the CIM configuration and CIM status blocks in one telegram. This is not possible since there are unused addresses between the blocks.	<ul style="list-style-type: none"> • Avoid reading or writing invalid data addresses. • Ensure that register X is addressed as X - 1 in Modbus telegrams, according to the Modbus standard.
	b) The register address offset may have been changed from default.	Read the holding register at address 00002 "Register Offset" to see if this value is different from 0. If so, write the value 0 to this address to make the slave return to the default used in this functional profile.
4. The slave returns data value 0xFFFF (65535).	a) The value is unavailable. A data value of 0xFFFF does not necessarily indicate an error condition. It means that the value is unavailable from the Grundfos product.	See section 10. Modbus RTU commissioning, step-by-step guides for available data.
5. The slave does not change Modbus transmission speed with register 0004.	a) Configuration error.	Set the transmission speed switches to "Software-defined". Otherwise, the value in register 0004 will be ignored by the slave.
	b) An invalid value may be set in register 00004.	See section 5.1 Setting the Modbus transmission speed for invalid values, and set correct value in register 00004.

16.2 CIM 250

Faults in the CIM 250 can be detected by observing the status of the two communication LEDs. See the table below and section [3.3 Modbus GSM/GPRS \(CIM 250\)](#).

16.2.1 LED status

Fault (LED status)	Possible cause	Remedy
1. Both LEDs (LED1 and LED2) remain off when the power supply is connected.	a) The CIM 250 is fitted incorrectly in the CU 36X.	Ensure that the CIM 250 is fitted/connected correctly.
	b) The CIM 250 is defective.	Replace the CIM 250.
2. The LED for internal communication (LED2) is flashing red.	a) No internal communication between the CU36X and the Grundfos product.	Ensure that the CIM 250 is fitted correctly in the CU 36X.
3. The LED for internal communication (LED2) is constantly red.	a) The CIM 250 does not support the Grundfos product connected.	Contact the nearest Grundfos company.
4. The LED for GSM/GPRS communication (LED1) keeps flashing yellow. See signal 1 in fig. 13 on page 11.	a) The SIM card has not been inserted in CIM 250.	Insert the SIM card. See section 6.1.2 Inserting the SIM card .
	b) The SIM card has not been inserted correctly in CIM 250.	Insert the SIM card. See section 6.1.2 Inserting the SIM card .
	c) The SIM card PIN code is not correct.	Enter the correct PIN code. See section 6.1.2 Inserting the SIM card .
	d) No connection to the GSM network.	<ul style="list-style-type: none"> • Check the connection to the antenna. • Check the GSM coverage of the area using e.g. a mobile phone. • Use an external antenna and experiment with the position.
5. The LED for GSM/GPRS communication is pulsating yellow with single pulse, but the CIM 250 cannot send or receive SMS messages.	a) The CIM 250 has not been initialised.	Follow the configuration procedure in "CIM 250 SMS commands" (supplement to installation and operating instructions) on the CD-ROM supplied with the GSM module.

16.2.2 CIM 250 Modbus GSM/GPRS communication faults

Fault	Possible cause	Remedy
1. The slave does not respond to telegrams.	a) Configuration or installation error.	<ul style="list-style-type: none"> Ensure that the CIM 250 has contact with the GSM network. The LED1 should be pulsing yellow. If the LED1 signal is incorrect, see section 6. Modbus GSM/GPRS, CIM 250 setup for correct installation of the CIM 250. Ensure that the correct slave address is used in the Modbus master poll. See register 00003 SoftwareDefinedModbusAddress (factory value is 00231).
	b) The slave may be in listen-only mode.	Either send a restart communications diagnostics command, or restart the Grundfos product manually.
	c) If the holding register of address 00001 "SlaveMinimumReplyDelay" is set too high, the master may time out before receiving the response from the slave.	Increase the reply delay in the master, or reduce the "SlaveMinimumReplyDelay" in order to communicate.
2. The slave responds with exception response 0x01: "Invalid function".	a) The master is trying to use an unsupported function in the CIM 250.	See section 12. Modbus RTU telegram examples for supported function codes. Note that reading and writing coils are not supported, so only register functions and diagnostics will be valid.
3. The slave responds with exception response 0x02: "Invalid data address".	a) The master is trying to read or write an invalid data address. If a master tries to read register addresses that are not listed in the tables, the slave will respond with this exception response. Some masters may automatically try to read large blocks in one telegram, which will cause problems if some of the registers in the block are not supported. An example would be reading the CIM configuration and CIM status register blocks in one telegram. This is not possible since there are unused addresses among the blocks.	Avoid reading or writing invalid data addresses. Ensure that register X is addressed as X - 1 in Modbus telegrams, according to the Modbus standard.
4. The slave returns data value 0xFFFF (65535).	a) The availability of data will in some cases depend on a configuration or the actual conditions of the system (e.g. trying to request data from a Grundfos product which is not present will return "data not available" (0xFFFF)).	See section 10. Modbus RTU commissioning, step-by-step guides for available data.
5. The slave does not react to control actions or to writing of settings.	a) The CIM 250 is SCADA PIN-code-protected (GeneralStatus register 00029, bit 0 = 1), and an incorrect PIN code has been written.	Write access requires a correct PIN code (ScadaPinCode, register 00011). Writing the correct PIN code value will trigger the write access control, and write access will be open, which can be verified with GeneralStatus, register 00029, bit 1 = 1.

16.3 CIM 500

Faults in the CIM 500 can be detected by observing the status of the two communication LEDs. See the table below and section [4.4 CIM 500 Modbus TCP](#).

16.3.1 LED status

Fault (LED status)	Possible cause	Remedy
1. Both LEDs (LED1 and LED2) remain off when the power supply is connected.	a) The CIM 250 is fitted incorrectly in the CU 36X.	Ensure that the CIM 250 is fitted/connected correctly.
	b) The CIM 500 is defective.	Replace the CIM 500.
2. The LED for internal communication (LED2) is flashing red.	a) No internal communication between the CIM 500 and the Grundfos product.	Check that the CIM 500 is fitted correctly in the Grundfos product.
3. The LED for internal communication (LED2) is permanently red.	a) The CIM 500 does not support the Grundfos product connected.	Contact the nearest Grundfos company.
4. The Ethernet LED (LED1) is permanently red.	a) Fault in the CIM 500 Modbus TCP configuration.	Check that the rotary switch SW1 is set to 1. Check that Modbus TCP IP address configuration is correct. See section " A.4 Modbus TCP configuration " on page 91.
5. LED1 is permanently red and green at the same time.	a) Error in firmware download.	Use the Web server to download the firmware again.
6. LED2 is permanently red and green at the same time.	a) Memory fault.	Replace the CIM 500.

16.3.2 CIM 500 Modbus TCP communication faults

Fault	Possible cause	Remedy
1. The slave does not respond to telegrams	a) Configuration or wiring error	<ul style="list-style-type: none"> • Check the visual diagnostics on the Modbus slave. Normal conditions are that the Grundfos GENiBus LED (LED2) is constantly green and that the Modbus TCP LED (LED1) is off or flashing green. If this is not fulfilled see section 16.3.1 LED status. • Ensure that the cable between the Modbus TCP master and the Modbus slave is connected correctly. See section 7.1 Connecting the Ethernet cable. • Ensure that the slave IP address is configured correctly, and that the correct slave IP address is used in the Modbus master poll. See section 7.3 Setting up the IP addresses.
2. The slave responds with exception response 0x01 "Invalid function"	a) The master is trying to use an unsupported function in the CIM 500.	See section 8 . Modbus function code overview for supported function codes. Note that reading and writing coils are not supported, so only register functions and diagnostics will be valid.
3. The slave responds with exception response 0x02 "Invalid data address"	<p>a) The master is trying to read or write an invalid data address. If a master tries to read register addresses that are not listed in the tables, the slave will respond with this exception response. Some masters may automatically try to read large blocks in one telegram, which will cause problems if some of the registers in the block are not supported. An example would be reading the CIM configuration and CIM status blocks in one telegram: this is not possible since there are unused addresses between the blocks.</p> <p>b) The register address offset may have been changed from default.</p>	<p>Avoid reading or writing invalid data addresses. Ensure that a block of registers starting at address X is addressed as X - 1 in Modbus telegrams, according to the Modbus standard.</p> <p>Read the holding register at address 00002 "Register Offset" to see if this value is different from 0. If so, write the value 0 to this address to make the slave return to the default used in this functional profile.</p>
4. The slave returns data value 0xFFFF (65535)	a) The value is unavailable. A data value of 0xFFFF does not necessarily indicate an error condition. It means that the value is unavailable from the Grundfos product.	See section 10. Modbus RTU commissioning, step-by-step guides for available data.
5. The slave does not react to control actions or to writing of settings.	a) The Grundfos product might be in "Local" mode, in which case Operating mode, Control mode and Setpoint cannot be changed from bus. Register 00201 bit 8 AccessMode must be "1" (=Remote) for bus control to be active.	Set the Grundfos product in "Remote mode" by setting register 00101 bit 0 RemoteAccessReq to "1" (=Remote). The Grundfos product should show "Controlled from bus" when status is read by handheld controllers R100 or GO Remote.

17. Modbus RTU rotary switch addresses

Modbus address	SW 6	SW 7	Modbus address	SW 6	SW 7	Modbus address	SW 6	SW 7	Modbus address	SW 6	SW 7	Modbus address	SW 6	SW 7
1	0	1	51	3	3	101	6	5	151	9	7	201	C	9
2	0	2	52	3	4	102	6	6	152	9	8	202	C	A
3	0	3	53	3	5	103	6	7	153	9	9	203	C	B
4	0	4	54	3	6	104	6	8	154	9	A	204	C	C
5	0	5	55	3	7	105	6	9	155	9	B	205	C	D
6	0	6	56	3	8	106	6	A	156	9	C	206	C	E
7	0	7	57	3	9	107	6	B	157	9	D	207	C	F
8	0	8	58	3	A	108	6	C	158	9	E	208	D	0
9	0	9	59	3	B	109	6	D	159	9	F	209	D	1
10	0	A	60	3	C	110	6	E	160	A	0	210	D	2
11	0	B	61	3	D	111	6	F	161	A	1	211	D	3
12	0	C	62	3	E	112	7	0	162	A	2	212	D	4
13	0	D	63	3	F	113	7	1	163	A	3	213	D	5
14	0	E	64	4	0	114	7	2	164	A	4	214	D	6
15	0	F	65	4	1	115	7	3	165	A	5	215	D	7
16	1	0	66	4	2	116	7	4	166	A	6	216	D	8
17	1	1	67	4	3	117	7	5	167	A	7	217	D	9
18	1	2	68	4	4	118	7	6	168	A	8	218	D	A
19	1	3	69	4	5	119	7	7	169	A	9	219	D	B
20	1	4	70	4	6	120	7	8	170	A	A	220	D	C
21	1	5	71	4	7	121	7	9	171	A	B	221	D	D
22	1	6	72	4	8	122	7	A	172	A	C	222	D	E
23	1	7	73	4	9	123	7	B	173	A	D	223	D	F
24	1	8	74	4	A	124	7	C	174	A	E	224	E	0
25	1	9	75	4	B	125	7	D	175	B	F	225	E	1
26	1	A	76	4	C	126	7	E	176	B	0	226	E	2
27	1	B	77	4	D	127	7	F	177	B	1	227	E	3
28	1	C	78	4	E	128	8	0	178	B	2	228	E	4
29	1	D	79	4	F	129	8	1	179	B	3	229	E	5
30	1	E	80	5	0	130	8	2	180	B	4	230	E	6
31	1	F	81	5	1	131	8	3	181	B	5	231	E	7
32	2	0	82	5	2	132	8	4	182	B	6	232	E	8
33	2	1	83	5	3	133	8	5	183	B	7	233	E	9
34	2	2	84	5	4	134	8	6	184	B	8	234	E	A
35	2	3	85	5	5	135	8	7	185	B	9	235	E	B
36	2	4	86	5	6	136	8	8	186	B	A	236	E	C
37	2	5	87	5	7	137	8	9	187	B	B	237	E	D
38	2	6	88	5	8	138	8	A	188	B	C	238	E	E
39	2	7	89	5	9	139	8	B	189	B	D	239	E	F
40	2	8	90	5	A	140	8	C	190	B	E	240	F	0
41	2	9	91	5	B	141	8	D	191	B	F	241	F	1
42	2	A	92	5	C	142	8	E	192	C	0	242	F	2
43	2	B	93	5	D	143	8	F	193	C	1	243	F	3
44	2	C	94	5	E	144	9	0	194	C	2	244	F	4
45	2	D	95	5	F	145	9	1	195	C	3	245	F	5
46	2	E	96	6	0	146	9	2	196	C	4	246	F	6
47	2	F	97	6	1	147	9	3	197	C	5	247	F	7
48	3	0	98	6	2	148	9	4	198	C	6			
49	3	1	99	6	3	149	9	5	199	C	7			
50	3	2	100	6	4	150	9	6	200	C	8			

Example: To set the slave address to the value 142, set the rotary switches SW6 and SW7 to "8" and "E", respectively. Please note that 0 is not a valid slave address as this is used for broadcasting.

Caution

It is very important to ensure that two devices do not have the same address on the network. If two devices have the same address, the result will be an abnormal behaviour of the whole serial bus.

18. Grundfos alarm and warning codes

This is a complete list of alarm and warning codes for Grundfos products. For the codes supported by booster systems, see the Alarms and warnings section.

Code	Description	Code	Description	Code	Description
1	Leakage current	84	Memory access error	181	Signal fault, PTC sensor (short-circuited)
2	Missing phase	85	Verification error, BE parameter area (EEPROM)	182	Signal fault, bearing temperature sensor (Pt100), bottom bearing
3	External fault signal	86	Fault (add-on) I/O module	183	Signal fault, extra temperature sensor
4	Too many restarts	88	Sensor fault	184	Signal fault, general-purpose sensor
5	Regenerative braking	89	Signal fault, (feedback) sensor 1	185	Unknown sensor type
6	Mains fault	90	Signal fault, speed sensor	186	Signal fault, power meter sensor
7	Too many hardware shutdowns	91	Signal fault, temperature sensor 1	187	Signal fault, energy meter
8	PWM switching frequency reduced	92	Calibration fault, (feedback) sensor	188	Signal fault, user-defined sensor
9	Phase sequence reversal	93	Signal fault, sensor 2	189	Signal fault, level sensor
10	Communication fault, pump	94	Limit exceeded, sensor 1	190	Limit exceeded, sensor 1 (e.g. alarm level in WW application)
11	Water-in-oil fault (motor oil)	95	Limit exceeded, sensor 2	191	Limit exceeded, sensor 2 (e.g. high level in WW application)
12	Time for service (general service information)	96	Setpoint signal outside range	192	Limit exceeded, sensor 3 (e.g. overflow level in WW application)
13	Moisture alarm, analog	97	Signal fault, setpoint input	193	Limit exceeded, sensor 4 (e.g. low level in WW/tank filling application)
14	Electronic DC-link protection activated (ERP)	98	Signal fault, input for setpoint influence	194	Limit exceeded, sensor 5
15	Communication fault, main system (SCADA)	99	Signal fault, input for analog setpoint	195	Limit exceeded, sensor 6
16	Other	100	RTC time synchronisation with GSM occurred	196	Operation with reduced efficiency
17	Performance requirement cannot be met	102	Dosing pump not ready	197	Operation with reduced pressure
18	Commanded alarm standby (trip)	103	Emergency stop	198	Operation with increased power consumption
19	Diaphragm break (dosing pump)	104	Software shutdown	199	Process out of range (monitoring/estimation/calculation/control)
20	Insulation resistance low	105	Electronic rectifier protection activated (ERP)	200	Application alarm
21	Too many starts per hour	106	Electronic inverter protection activated (EIP)	201	External sensor input high
22	Moisture switch alarm, digital	110	Skew load, electrical asymmetry	202	External sensor input low
23	Smart trim gap alarm	111	Current asymmetry	203	Alarm on all pumps
24	Vibration	112	Cos ϕ too high	204	Inconsistency between sensors
25	Setup conflict	113	Cos ϕ too low	205	Level float switch sequence inconsistency
26	Load continues even if the motor has been switched off	114	Motor heater function activated (frost protection)	206	Water shortage, level 1
27	External motor protector activated (e.g. MP 204)	115	Too many grinder reversals or grinder reversal attempt failed	207	Water leakage
28	Battery low	116	Grinder motor over temperature	208	Cavitation
29	Turbine operation (impellers forced backwards)	118	Signal fault, hydrogen sulfide H ₂ S sensor	209	Non-return valve fault
30	Change bearings (specific service information)	119	Signal fault, analog input AI4	210	High pressure
31	Change varistor(s) (specific service information)	120	Auxiliary winding fault (single-phase motors)	211	Low pressure
32	Overvoltage	121	Auxiliary winding current too high (single-phase motors)	212	Diaphragm tank precharge pressure out of range
33	Soon time for service (general service information)	122	Auxiliary winding current too low (single-phase motors)	213	VFD not ready
34	No priming water	123	Start capacitor, low (single-phase motors)	214	Water shortage, level 2

Code	Description	Code	Description	Code	Description
35	Gas in pump head, deaerating problem	124	Run capacitor, low (single-phase motors)	215	Soft pressure build-up time-out
36	Discharge valve leakage	125	Signal fault, outdoor temperature sensor	216	Pilot pump alarm
37	Suction valve leakage	126	Signal fault, air temperature sensor	217	Alarm, general-purpose sensor high
38	Vent valve defective	127	Signal fault, shunt relative pressure sensor	218	Alarm, general-purpose sensor low
39	Valve stuck/defective	128	Strainer clogged	219	Pressure relief not adequate
40	Undervoltage	144	Motor temperature 3 (Pt100, t_mo3)	220	Fault, motor contactor feedback
41	Undervoltage transient	145	Bearing temperature high (Pt100), in general or top bearing	221	Fault, mixer contactor feedback
42	Cut-in fault (dV/dt)	146	Bearing temperature high (Pt100), middle bearing	222	Time for service, mixer
45	Voltage asymmetry	147	Bearing temperature high (Pt100), bottom bearing	223	Maximum number of mixer starts per hour exceeded
48	Overload	148	Motor bearing temperature high (Pt100) in drive end (DE)	224	Pump fault (due to auxiliary component or general fault)
49	Overcurrent (i_line, i_dc, i_mo)	149	Motor bearing temperature high (Pt100) in non-drive end (NDE)	225	Communication fault, pump module
50	Motor protection function, general shutdown (MPF)	150	Fault (add-on) pump module	226	Communication fault, I/O module
51	Blocked motor/pump	151	Fault, display (HMI)	227	Combi event
52	Motor slip high	152	Communication fault, add-on module	228	Night flow max. limit exceeded
53	Stalled motor	153	Fault, analog output	229	Water on floor
54	Motor protection function, 3 sec. limit	154	Communication fault, display	230	Network alarm
55	Motor current protection activated (MCP)	155	Inrush fault	231	Ethernet: No IP address from DHCP server
56	Underload	156	Communication fault, internal frequency converter module	232	Ethernet: Auto-disabled due to misuse
57	Dry running	157	Real-time clock out of order	233	Ethernet: IP address conflict
58	Low flow	158	Hardware circuit measurement fault	234	Backup pump alarm
59	No flow	159	CIM fault (Communication Interface Module)	235	Gas detected
60	Low input power	160	GSM modem, SIM card fault	236	Pump 1 fault
64	Overtemperature	161	Sensor supply fault, 5 V	237	Pump 2 fault
65	Motor temperature 1 (t_m or t_mo or t_mo1)	162	Sensor supply fault, 24 V	238	Pump 3 fault
66	Temperature, control electronics (t_e)	163	Measurement fault, motor protection	239	Pump 4 fault
67	Temperature too high, internal frequency converter module (t_m)	164	Signal fault, LiqTec sensor	240	Lubricate bearings (specific service information)
68	External temperature/water temperature (t_w)	165	Signal fault, analog input 1	241	Motor phase failure
69	Thermal relay 1 in motor (e.g. Klixon)	166	Signal fault, analog input 2	242	Automatic motor model recognition failed
70	Thermal relay 2 in motor (e.g. thermistor)	167	Signal fault, analog input 3	243	Motor relay has been forced (manually operated/commanded)
71	Motor temperature 2 (Pt100, t_mo2)	168	Signal fault, pressure sensor	244	Fault, On/Off/Auto switch
72	Hardware fault, type 1	169	Signal fault, flow sensor	245	Pump continuous runtime too long
73	Hardware shutdown (HSD)	170	Signal fault, water-in-oil (WIO) sensor	246	User-defined relay has been forced (manually operated/commanded)
74	Internal supply voltage too high	171	Signal fault, moisture sensor	247	Power-on notice (device/system has been switched off)
75	Internal supply voltage too low	172	Signal fault, atmospheric pressure sensor	248	Fault, battery/UPS
76	Internal communication fault	173	Signal fault, rotor position sensor (Hall sensor)	249	User-defined event 1
77	Communication fault, twin-head pump	174	Signal fault, rotor origo sensor	250	User-defined event 2

Code	Description	Code	Description	Code	Description
78	Fault, speed plug	175	Signal fault, temperature sensor 2 (t_mo2)	251	User-defined event 3
79	Functional fault, add-on module	176	Signal fault, temperature sensor 3 (t_mo3)	252	User-defined event 4
80	Hardware fault, type 2	177	Signal fault, Smart trim gap sensor	253	SMS data from DDD sensor not received within time
81	Verification error, data area (RAM)	178	Signal fault, vibration sensor	254	Inconsistent data model
82	Verification error, code area (ROM, FLASH)	179	Signal fault, bearing temperature sensor (Pt100), general or top bearing		
83	Verification error, FE parameter area (EEPROM)	180	Signal fault, bearing temperature sensor (Pt100), middle bearing		

Subject to alterations.


Appendix

The appendix describes the parts of the CIM 500 web server needed for the configuration of a Modbus TCP Ethernet connection. For other CIM 500 web server features, not specifically related to Modbus TCP, see the installation and operating instructions for the CIM 500.

A.1 How to configure an IP address on your PC

For connecting a PC to the CIM 500 via Ethernet, the PC must be set up to use a fixed (static) IP address belonging to the same subnetwork as the CIM 500.

1. Open "Control Panel".
2. Enter "Network and Sharing Center".
3. Click "Change adapter settings".
4. Right-click and select "Properties" for Ethernet adapter. Typically "Local Area Connection".
5. Select properties for "Internet Protocol Version 4(TCP/IPv4)".
6. Select the "Alternate Configuration" tab.
7. Configure an IP address and subnet mask to be used by your PC. See fig. 1.

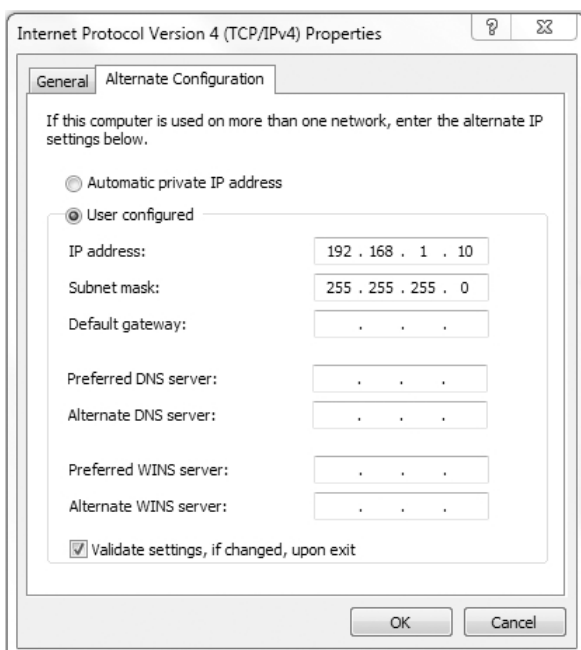

TM05 7422 1814

Fig. 1 Example from Windows 7

A.2 Web server configuration

The built-in web server is an easy and effective way to monitor the status of the CIM 500 module and configure the available functions and Industrial Ethernet protocols. The web server also makes it possible to update the firmware of the CIM module, and store/restore settings.

To establish a connection from a PC to CIM 500, proceed as follows:

Before configuration

- Check that the PC and CIM module are connected via an Ethernet cable.
- Check that the PC Ethernet port is set to the same network as the CIM module. For network configuration, see section [A.1 How to configure an IP address on your PC](#).

To establish a connection from a PC to the CIM 500 for the first time, the following steps are required:

1. Open a standard Internet browser and type 192.168.1.100 in the URL address field.
2. Log in to the web server.

A.3 Login

Fig. 2 Login

User name	Enter user name. Default: admin.
Password	Enter password. Default: Grundfos.

Note

User name and password can be changed on the web server under "UserManagement"

A.4 Modbus TCP configuration

Fig. 3 Real Time Ethernet Protocol Configuration - Modbus TCP

Object	Description
TCP Port Number	The default value is 502, the official IANA-assigned Modbus TCP port number. Number 502 will always be active implicitly. If you select another value in the web server configuration field, both the new value and value 502 will be active.
IP Address	The static IP address for CIM 500 on the Modbus TCP network.
Subnet Mask	The subnet mask for the CIM 500 module on the Modbus TCP network.
Gateway	The default gateway for the Modbus TCP network.
Use DHCP	The CIM 500 module can be configured to automatically obtain the IP address from a DHCP server on the network.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomssesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарьянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

Czech Republic

GRUNDFOS s.r.o.
Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111
Telefax: +420-585-716 299

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500
Telefax: +358-(0) 207 889 550

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jin. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia
ООО Грундфос Россия
109544, г. Москва, ул. Школьная, 39-41,
стр. 1
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 88 11
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0)1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

GRUNDFOS (PTY) LTD
Corner Mountjoy and George Allen Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentesilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloen Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
Ihsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Repre-
sentative Office of Grundfos Kazakhstan in
Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses Revised 29.07.2016

98393520 0816
ECM: 1182199